

Product Manual : Ver 1.01

**TP-870**

# **Land Nest Tarp Set**

**SET-259 / SET-260**

## **Land Nest Small / Medium Tent & Tarp Set (Tarp)**



Thank you for purchasing a Snow Peak product. This product is a tarp for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

**Safety Precautions** : Before use, please read thoroughly to ensure safety and avoid

 **DANGER** Misuse could easily result in a serious accident or death.

- The material of this tarp is not flame-proof. Do not use combustion-based heat sources such as lanterns, stoves, or heaters, or open flames such as matches, candles, lighters, or cigarettes, inside the shelter. The use of fire in a confined space is very dangerous due to the risk of fire.
- Do not bring flammable materials, or items for storing or refilling fuel, under the tarp.

 **WARNING** Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Pay close attention to the weather. If extreme weather is in the forecast, pack up camp and evacuate to a safe place.
- Do not bring heated items at high temperatures under the tarp. The temperature under the tarp will be elevated in warm weather, and excess heat could cause heatstroke. Pay close attention to the temperature, particularly when children are asleep.
- Choose a flat, well-drained area with firm ground to pitch the tarp. Choose a place with no chance of avalanches, landslides, wind gusts, or sudden flooding.
- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.

 
 **CAUTION** Misuse could result in injury to the user and/or damage to property.

- This product is not intended to be in permanent use.
- Sunlight can cause the surface of the tarp to heat up, potentially causing low-temperature burns.
- Do not assemble or use the tarp close to a bonfire, fireworks, etc. Flying sparks can create holes in the fabric.
- Please do not leave the tarp set up permanently, as weather conditions and sunlight may cause a loss of strength, fading or fabric deterioration.
- Resin and sap is difficult to remove. Please avoid setting the tarp up under trees where the sap might drip. Using a solvent to remove resin will damage the fabric and coating.
- Firmly hold the tarp when assembling and disassembling. Unexpected accidents may occur due to the pole ends recoiling, etc., so ensure that the surroundings are safe, with no other people in the vicinity.
- Firmly secure the pegs, ropes, etc.
- Since this product uses a thin fabric, it may break if you pull the fabric too much.
- Please pay attention to the rope and pegs at your feet. You may catch your foot and fall, leading to an unexpected accident or injury.


## Before using for the first time

Although we take every precaution to ensure the quality of our products, please be sure to test the product and check the accessories and setup procedure before using while camping. If any problems occur, please contact the dealer where you purchased the product or Snow Peak user service.

### Set Contents



Tarp  
x1

 


Steel pole  
240cm(7.9')  
x2



Steel peg  
30cm(12")  
x8



 Forked rope with  
rope tensioner  
10m(32.8')x2,  
3m(9.8')x4



Carry bag  
x1





Pole case  
x1



Peg case  
x1


### Name of the Parts・Location of rope

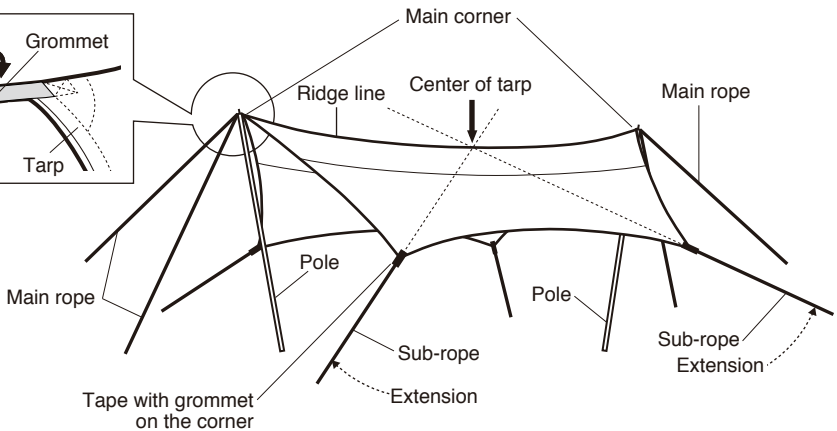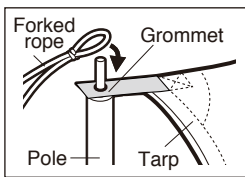  

### Location of rope


Rope with rope tensioner

 - Main rope Forked 10m(32.8') x 2
- Sub-rope 3m(9.8') x 4

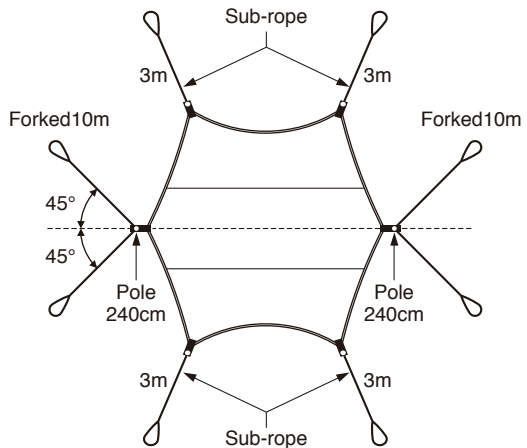

## Setup Procedure

 
■ Follow the instructions below to set up/ disassemble the product. Always practice first before camping. Excessive assembly and disassembly may damage the tarp or poles, potentially resulting in an accident.

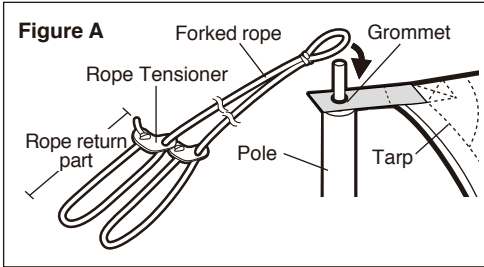


0) Make sure that two or more people take part in the setup.

1) Spread the tarp on a flat surface.

 
2) Insert the tip of the pole into the triangle bracket of the main corner and hang the center loop of the main forked rope (2 places) from above. At this time, position the rope tensioner of the rope and make the ropes all the same length.

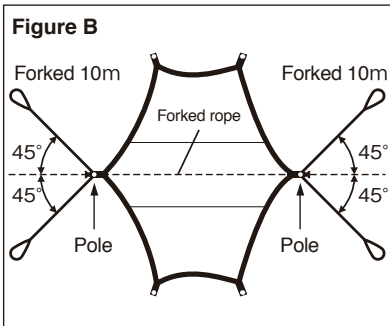

 
3) Stand up the two poles, pull the forked rope outward against the ridge line of the tarp connecting each, and peg down at 45 degrees to each side of the pole [Figure B].

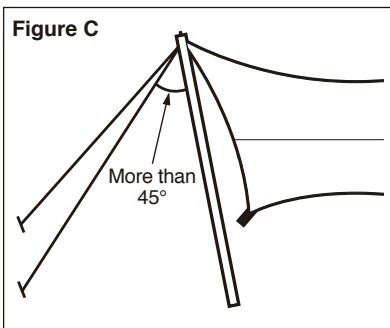

 
\*If you peg down at a position where the angle between each rope is wider than 90 degrees, the tension will not be transmitted to the poles, and you will not be able to complete the setup [Figure B]. The ideal peg-down position is 45 degrees from the poles. [Figure C].

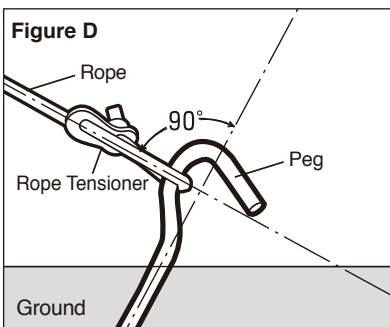

 Angle the peg 90 degrees to the rope. [Figure D].

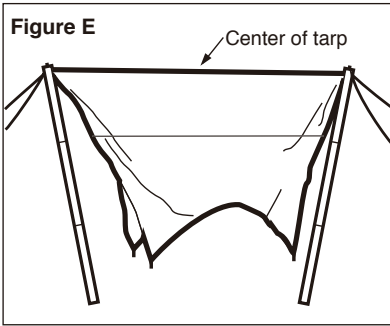


 4) Adjust the position of the rope tensioner of the rope so that the ridge portion is firmly tensioned [Figure E].

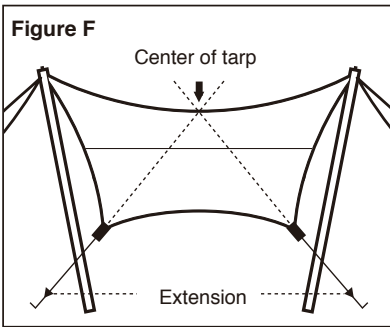


5) Pull the sub ropes and peg down on the extension line connecting the center of the tarp to the corners of both wings. The extension line is the direction of the tape with grommets at each corner (4 places). [Figure F]

 \* Be aware that if the rope is pulled in the wrong direction, it may cause wrinkles and prevent proper setup.

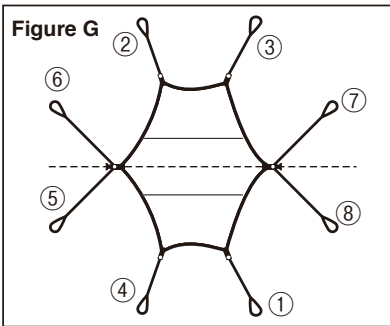

 6) Apply tension on the subrope following the numerical order shown. Pull the sub ropes on both wings evenly with about 80% force in a diagonal rotation, and then tension the main tape after the looseness of the ridge has been removed. Finally, all ropes are pulled again in numbered order with the remaining 20% force. [Figure G]

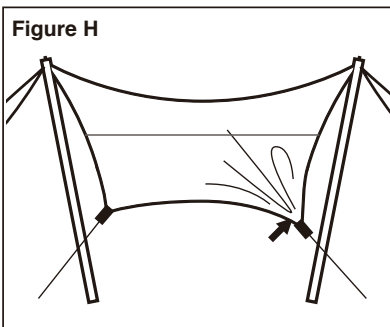

\*Please be careful not to pull the rope too tight. If it is pulled too hard, large wrinkles will occur in that direction. Loosen the sub ropes at the corners where wrinkles appear and adjust the overall tension balance. [Fig. H]

\*Using a tarp in a loose or wrinkled condition is very dangerous, as it can collapse the the wind or collect excessive amounts of water.

7) When finished, the pole should be angled so that the tip is pulled by the tension of the main ropes and slopes slightly outward. The ideal peg-down position for the rope is 45 degrees or more in relation to the pole. [Figure C]

### Precautions for Disassembling/Storage

- Please dry the tarp sufficiently before storing.
- Remove all pegs, clean off any dirt, and store in the peg case facing down. Please be careful not to lose or forget to remove any of the pegs.

### Regarding Water-Repellent and Water-Proof Functions

- The fabric of the tarp is treated with a high-quality, water-repellent finish. However, the level of water-repellent capacity and durability may vary slightly due to the characteristics of each material. In addition, the water repellency will deteriorate over long periods of time.
- The tarp is made of highly waterproof fabric, but if high water pressure is intensively applied from rain for a long period of time, water may seep in. Please be careful.

### Regarding The Effect of Ultraviolet Rays

- UV protection is applied on the tarp fabric. The UV protection treatment will lessen the permeation of ultraviolet rays, which are harmful to humans, and slowdown the deterioration of the material.  
\* The UV protection treatment does not completely prevent the influence of ultraviolet rays on humans or stop the deterioration of the strength of the material.
- When the tarp material is exposed to sun light for long periods of time, color degradation or deterioration of the fabric may occur. Do not leave the product assembled permanently.
- If the material deteriorates due to the influence of ultraviolet rays and is damaged, it may become irreparable.

### Maintenance

- A polyester fabric blend is used for this product. Considering the material characteristics, we adopted processing and color patterns that will result in less color migration. However, depending on storage conditions, slight color migration may occur. Do not store the product while it is wet.
- Before storage, the product should be cleaned and dried sufficiently. If the product is stored when wet, the build-up of mold, bad odors, color migration, and material deterioration will occur. Dry the product sufficiently in a ventilated and shaded area and clean the surface with a soft brush before storing.
- Poles should be cleaned of dirt and thoroughly dried before storage. Storing poles while wet will result in corrosion and loss of strength. Do not pull on the shock cord inside the pole.
- Please store this product in a well-ventilated area away from direct sunlight, high temperatures, and humidity.
- Depending on the conditions during use, the tent material may deteriorate over a wide area, losing its durability and becoming irreparable.
- In order to prepare this product for its next use, please regularly check and maintain the product (including all accessories such as the pegs).

## Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following:

 
1. Material deterioration caused by age
2. Damage caused by modifications or rough handling
3. Damage caused by inappropriate use not mentioned in the instruction manual
4. Damage caused by unexpected accidents
5. Any damage other than defects in the manufacturing process
6. Damage caused by dust or rust
7. Damage and defects caused by dismantling the product
8. Damage and defects caused by dropping, jolting or other shocks
9. Deterioration or failure of parts due to friction
10. Damage caused by the use of the product in combination with another manufacturer's

## Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request repairs, please make sure that the product is dry and clean.
- Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
- Transportation and repair costs are determined as follows.
  1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
  2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

- Material(s): 210D Polyester Oxford, PU coating  
Waterproof rating: 1,800mm minimum, Water-repellent finish, UV protection treatment
- Set contents: Tarp, Steel pole 240cm (7.9') x 2, Steel peg 30cm (12") x 8, Forked rope with rope tensioner 10m(32.8') x 2, 3m (9.8') x 4, Carry bag, Pole case, Peg case
- Carry Bag Size: 75x15x18(h)cm (29.5"x 5.9"x 7.1")
- Weight: 7.2kg (15.9lbs)

- Capacity: 4 people

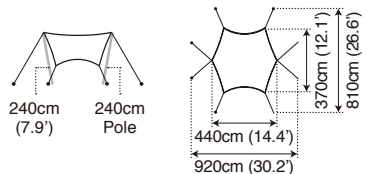

**Snow Peak USA, Inc.**

404 NW 23rd Avenue, Portland, Oregon 97210, USA  
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa  
Email. info@snowpeak.com / www.snowpeak.com

**Snow Peak, Inc.**

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan  
Tel. +81 256-46-5858 / Fax. +81 256-46-5860  
www.snowpeak.co.jp

MADE IN VIETNAM