

Pet Grooming Dryer

Instruction Manual



Components



specification

input: AC110~120V AC220~230V

power: 380W

frequency: 50/60Hz cable length: 2m

The appliance has two settings

~ 1 gentle warm airflow ≈ 2 strong hot airflow

Adjust the airflow according to your need. The airflow temperature may vary under different environment temperature.

Attention

Read this manual carefully before you use the appliance and keep it for future reference.

- 1. Before you connect the appliance ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- 2. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 3. Do not use the appliance under damp conditions. Keep it in a dry
- 4. Always make sure your appliance is not wet (water splashes,...) and never handle it with wet hands .
- 5. Never move the appliance by pulling the cord. Do not wind the cord around the appliance and do not bend it.
- 6. Do not keep drying in the same area to avoid scalding injury.
- 7. Make sure the hair does not come into direct contact with the air
- 8. The dust filter in the air intake opening prevents the hair from being sucked in. Without proper cleaning, the airflow will decrease progressively and the appliance may get damaged.
- 9. The appliance has auto power shut-off function. If the temperature is too high, the safety monitor inside will stop the appliance immediately. The appliance will restart after it cools down. You will have to wait a couple of minutes before it restarts.

背面

Att∈ntion

- 10. Check the cord for damages. Never use the appliance if cord or any part shows any signs of damage. If the cord is damaged, it must be replaced by a qualified electrician.
- 11. Before cleaning, always unplug the appliance.
- 12. Children are prohibited from using the appliance.
- 13. Do not use this appliance in corrosive or explosive gas and other
- 14. This appliance cannot be used as a medical or industrial device.
- 15. Please unplug the power immediately if the appliance is not working properly.
- 16. For indoor use only. Keep it in a cool dry place free of dust.
- 17. Warning: Please keep the appliance dry.



Do not use this appliance near bathtubs, shower or other vessels containing water.

Please do not use it for any other purpose than discribed in this manual.

Using this product

Dry your pet with a dry towel first. This will shorten the drying time significantly and improve the grooming speed

- 1. Please comfort your pets before using the appliance, let them sniff the appliance while it is turned off.
- 2. Temperature and power selection.
- 3. Do not keep drying in the same area to avoid scalding injury.
- 4. To replace the brush head, unscrew and rotate brush head clockwise as shown below.



Troubleshooting

- 1. The appliance has auto power shut-off function. If the temperature is too high, the safety monitor inside will stop the appliance immediately. Check if there is anything blocking the air intake.
- 2. The appliance does not work at all:
- 1) .The power socket to which the appliance has been connected
- 2) .Check the power cord is damaged or not. If damaged, please request certified electrician to replace it.
- 3. Do not repair or disassemble the product by yourself.

Cleaning and care

- 1. Unplug the appliance and wait till it cools down. Ensure the socket is live.
- 2. Make sure the air intake and outlet grilles are free of dust or any other objects.
- 3. Clean the appliance by damp cloth .
- 4. Make sure the appliance is completely dry before using it .
- 5. Do not wind the power cord around the appliance.

Storage

- 1. Put the appliance in a safe dry place
- 2. Keep it out of the reach of children.

Environm∈nt

Do not dispose of this product with general household wastes.

To prevent possible harm to the environment and human health from uncontrolled waste disposal, recycle it responsibly.



FC (F RÖHS !





MADE IN CHINA