

Flamethrower instructions for use

How to fit the attachment

1. Unscrew existing wand from trigger control
2. Screw on "Flame thrower attachment"

Fuel

1. Use 50/50 Kerosene/Diesel for good results
2. A high kerosene content will produce more heat, however a minimum of 25% kerosene is advised

WARNING

Do not turn into wind while burning
Do not use petrol in mix

To ignite

1. Place a small rag on the ground.
2. Slightly pressurise sprayer & let fuel dribble evenly onto glass fibre wick then pump a small amount onto the rag.
3. Carefully ignite the rag & place burner head on top to warm the aluminium shroud for several minutes. This will keep the flame burning well.
4. Fully pressurise sprayer & commence burning by opening trigger valve
5. Keep pressure up at all times
6. If knapsack has inbuilt control unit, use highest pressure setting

Note: Elevate the burner head end above the trigger end to avoid fuel leakage

To extinguish flame

1. Smother with a sack or douse in water
2. Do not let the wick burn out slowly, this will lessen wick life

Replacement nozzels and wicks are available as separate spares.