



# bonsaii

## Instruction Manual GUN SAFE GS001



---

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.  
PLEASE READ AND KEEP IT FOR FUTURE REFERENCE.

---

Please give us a chance to make it right and do better!  
Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped.

**Customer Service:**

✉ : [Customer-bonsaiicare@bonsenglobal.com](mailto:Customer-bonsaiicare@bonsenglobal.com)

☎ : 1-844-728-6917

## **Safety and Compliance**

1. Read this instruction manual carefully before using the appliance. Familiarize yourself with the operation, adjustments and functions of switches. Understand and follow the safety and operation instructions in order to avoid possible risks and hazards. Keep for future reference. If you give this device to someone else, this instruction manual must be included too.
2. Do not leave the gun safe unattended while it is open.
3. Keep children away from the gun safe.
4. Always lock and close the gun safe when not in use. Store the emergency keys in a secret and secure location.
5. Place the product on a stable and secure surface, preferably not elevated, to prevent it from tipping over and causing damage or injury to people.
6. Remember the serial number of your gun safe. You will need this serial number for any warranty or customer service inquiries.
7. Always ensure sufficient clearance space for opening the gun safe.
8. Keep liquids away from the control panel and battery compartment. Spilling liquids on the electronic components may cause damage and malfunction.
9. Never attempt to dismantle the product yourself.
10. If maintenance is required, please contact the local service center or distributor.

## **Battery safety advice**

1. Danger of explosion if the battery is replaced with one of the wrong types.
2. Replace the battery only with the same or equivalent type.

## **A WARNING**

1. Do not swallow the battery, there's risk of chemical burns.
2. The batteries (battery block or built-in batteries) must not be exposed to excessive heat, i.e. direct sunlight, fire or the likes.
3. If a battery gets swallowed, can cause internal burns and cause death within 2 hours.
4. Keep new and used batteries out of the reach of children.
5. If the battery compartment doesn't close properly, stop using the product and keep it out of the reach of children.
6. If you think that the batteries were swallowed or introduced in any part of the body, seek medical attention immediately.
7. Leaking battery add may cause harm.

8. If batteries should leak, remove them with a cloth from the battery compartment. Dispose of batteries according to the regulations.
9. If battery acid has leaked, avoid contact with skin, eyes and mucous membranes. Rinse affected areas immediately after contact with the acid and wash with plenty of clean water. Visit a physician.
10. Do not allow children to replace batteries without adult supervision.
11. Batteries may not be charged, re-activated by other means, disassembled, thrown into fire or short-circuited.

## Gun safe diagram



1. Fingerprint sensor
2. USB Type-C
3. Keypad
4. Mechanical lock
5. Battery compartment

6. Setup button
7. Illumination light
8. Self-tapping screw\*2
9. Mechanical key\*2

## OPENING THE SAFE FOR THE FIRST TIME

1. The safe is not installed with battery in the initial state. You need to use our mechanical key to open the safe.



2. After opening the safe using the mechanical key, please install four (1.5V, AAA) alkaline batteries (pay attention to the polarity of the batteries).



**WARNING: Do not mix old and new batteries.**

**WARNING: Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-m, etc.) batteries.**

## ENTERING AND DELETING PASSWORDS

### 1. Set password:

① Find the "Setup button", The "Setup button" is located above the illumination light.



② Press the "Setup button" once, and you will hear a "beep , beep" sound. At the same time, the indicator light will flash blue, indicating that you can start setting the numeric password. Enter a new password of 4 to 6 digits (if it exceeds 6 digits, only the first 6 digits will be considered). Then, press the "Setup button" again to confirm, and you will hear a single "beep" sound, indicating that the new password has been successfully set.



## 2. Delete all passwords:

Press and hold the settings button for 5 seconds. When you hear a "beep, beep~" sound, indicating a successful reset, all the passwords you have set will be cleared, and the gun safe will be restored to factory settings.

# FINGERPRINT ENTRY AND DELETION

## 1. Input fingerprint:

Press the Setup button once, and you will hear a "beep , beep" sound while the indicator light flashes blue. This indicates that you can start setting up fingerprints. Place your finger on the fingerprint sensor and press it once, then repeat this process six times consecutively. When you hear a single "beep" sound, it means that the fingerprint setup is successful.



**NOTICE: 1. When pressing your finger, please try to use the center of your finger, exert a little force, put your finger flat, and try not to misalign the finger.**

**2. 10 groups of fingerprints can be input into this fingerprint sensor. Therefore, it is recommended that you input the same finger for 6 times, so that you can input each part of your finger, even when you misalign the direction, you can also be identified. At the same time, it is recommended that you input the fingerprints of multiple fingers so that when the fingerprints of one of your fingers are peeling or the lines are not clear, you can be identified with other fingers.**

**NOTICE: To prevent the mechanical key from being locked in the gun safe. (When the battery is dead, you need to use the mechanical key to open the gun safe), please do not store the key in the safe!!**

**NOTICE: Please test the unlocking password or fingerprint while the door is in the open position before placing valuable items and closing the door!**

## **2. Delete all fingerprints:**

Press and hold the settings button for 5 seconds. When you hear a "beep, beep~" sound, indicating a successful reset, all the fingerprints you have set will be cleared, and the gun safe will be restored to factory settings.

# **OTHER FUNCTIONS**

## **1. Factory settings:**

Press and hold the settings button for 5 seconds. When you hear a "beep, beep~" sound, the gun safe will be restored to factory settings. The default preset password is "1234", please change it immediately.

## **2. Alarm Function:**

If you enter an incorrect password or fingerprint five times, the system will lock for 100 seconds, accompanied by a continuous "beep, beep" sound.

## **3. Mute Function:**

To activate the mute function, press and hold the keypad key "1" for 3 seconds. The indicator light will flash blue, indicating that the mute function has been successfully set and the sound is turned off.

## **4. Disable Mute Function:**

To disable the mute function, press and hold the keypad key "1" for 3 seconds. You will hear a single "beep" sound, and the indicator light will flash blue, indicating that the mute function has been disabled and the sound is turned on.

## TO REPLACE THE BATTERIES

When the voltage is low, after opening the gun safe, the indicator light will flash yellow six times, accompanied by six "beep, beep" sounds. This indicates that the batteries need to be replaced promptly. If the batteries are completely drained and you cannot open the gun safe with the password or fingerprint, you can use the mechanical key to open it and replace the batteries.

When the battery is out of power, and can't open door by Keypad lock, there is a USB port(Type-C) that can be used to connect the power bank(5V) to power up. Next, you can use the keypad lock to unlock and replace the battery.

**NOTICE:** pay attention to the positive and negative electrodes of the batteries.

**WARNING:** Do not mix old and new batteries.

**WARNING:**Do not mix alkaline, standard (carbon-zinc),or rechargeable(ni-cad,ni-m, etc.)batteries.

## USE THE BOLT TO FIX THE SAFE

**Note:** Before installing the gun safe, ensure that there is enough space for the lid to open properly and secure the gun safe in a stable location.

**Notice:** This product is intended to be installed in a horizontal orientation.

**Installation accessories:** 2 self-tapping screws

**Tools needed to mount screws to the surface:**

Electric drill

Phillips screwdriver

5/32-inch (4mm) drill bit (for drilling into wood)

1. Place the gun safe in a suitable position and use the pre-drilled holes at the bottom of the safe to mark the drilling locations on the surface (the center-to-center distance between the two holes is 7.09 inches / 180mm).
2. Move the safe when you drill the marked hole on the surface of the safe.
3. Place the gun safe back in its original position, aligning it with the holes, and secure the gun safe in place using the provided fixing screws.



## Cleaning and Maintenance

1. If necessary wipe the outside and inside of the product with a slightly damp cloth.
2. Avoid contact with corrosive substances like acids, alkaline or similar substances.

## Troubleshooting

<b>Problem</b>	<b>Solution</b>
When entering the password or fingerprint, if the indicator light is red, the gun safe cannot be opened.	Please make sure you have entered the correct password and fingerprint.
The door won't shut.	Make sure there are no obstructions.
The yellow light flashes 6 times, accompanied by 6 "beep, beep" sounds.	Replace the batteries.
The cover cannot be opened after inputting the password or fingerprint.	The battery is dead, Replace the battery.




## Environmental Protection



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Used batteries must not be disposed of through household garbage, since they might contain toxic elements and heavy metals that can be harmful to the environment and human health.

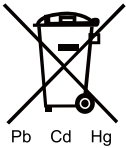

Consumers are therefore obligated to return batteries to retail or local collection facilities free of charge. Used batteries will be recycled.

They contain important raw materials such as iron, zinc, manganese or nickel. The crossed-out wheeled bin symbol indicates: Batteries and rechargeable batteries must not be disposed of through household garbage.

The symbols below the wheeled bin indicate:

Pb: Battery contains lead

Cd: Battery contains cadmium

Hg: Battery contains mercury





The packaging consists of cardboard and correspondingly marked plastics that can be recycled. Make these materials available for recycling.

## Disposal



The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimize the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed of separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

## Specifications

Model No.	GS001
Power supply	4x 1.5 V  , (AAA) (not included) 5 V  (backup supply)
Dimensions	292*253*80mm (11.5*9.96*3.15inches)
Weight	3.4KG/7.50lbs
Capacity	3.02L/0.8Gallon

## LIMITED WARRANTY

**Warranty Period:** The machine is covered by a 1-year limited warranty, which starts from the date of your initial retail purchase of the product from us. This limited warranty is non-transferable to any subsequent purchaser or recipient of the product.

We have great confidence in our products and offer a 30-day money-back guarantee. During this period, if the product has manufacturing defects or fails to meet your expectations, please notify us via email within 30 days of receiving the product. We will assist you in returning or replacing the product. Once the complete return is processed, your original payment method will be refunded in full. After 30 days, a restocking fee of 20% may be charged for the return, and all shipping and handling costs will be borne by the customer. After 60 days, the product is non-refundable.

Further details regarding returns are as follows:

If you receive a damaged product, you must notify us within 48 hours of receipt. We will investigate the claim and inform the shipping company of the damage. Please keep all packaging for bonsai or the shipping company to inspect if necessary. These investigations may take a few days, but the replacement of the goods will be processed as soon as possible.

If the product has defects or damages, we are sorry to hear that it did not meet your expectations perfectly. We aim to resolve this issue as quickly as possible with the help of our customer support team and quality assurance team. They will need to know your order information and the issues you have encountered with the product. Please inform us of your concerns by email and provide the order number. We may require you to take a short video or photos of the product's flaws. After preliminary analysis of the video or images, if it is confirmed that the product has defects, we will immediately send a brand-new replacement product. If we determine that you have misjudged the condition of the product and there are no defects, we will provide you with the correct instructions for use and assist you in using the product correctly.

In line with our policy of continuous development we reserve the right to change this product, packing and documentation specification without notice.

If you have any questions or any confusions, Please kindly contact with us:

**Customer-bonsaiicare@bonsenglobal.com**



**Manufacture: Bosen Electronics Limited**

📍 : No. 11, Lunpinchong Industrial Zone, Houjie Town,  
Dongguan City, Guangdong Province,  
China, postal code 523941.

☎ : 1-844-728-6917

✉ : [Customer-bonsaiicare@bonsenglobal.com](mailto:Customer-bonsaiicare@bonsenglobal.com)

**Made in Vietnam**