

## Using the Cloud Nine Airshot Hairdryer

- Before using the Airshot, ensure that hair is thoroughly towel dried.
- To quickly blast dry hair, use without fixing a nozzle.
- For precision drying, fix either the 60mm or 75mm nozzle.
- When the hair is dry, fix in the style by pressing the Cold Shot Button and continue drying the hair for a further 2 minutes.
- Using the Upper switch select power required
  - = OFF
  - I = low power
  - II = High power
- Using the Lower switch select the temperature
  - = Cold
  - I = Medium Temperature
  - II = High Temperature
- The LED on the back of the handle will show blue when ● Cold Temperature is selected or when the Cold Shot Button is activated. It will show red when ( I ) Medium or ( II ) High Temperatures are selected.
- Commence styling ensuring at all times the hair does not come into contact with the Suction/air inlet filter which is located at the back of Airshot.
- After use, the Airshot should be run on the cold setting for 1 to 2 minutes. Unplug the Airshot from the main electricity supply and allow to cool down completely before storing in a safe place.
- The Airshot is supplied with 1 x 66mm and 1 x 75mm precision drying nozzles.
- To fix or remove the nozzle from the Airshot, align the black and white alignment markers (image 10) and twist the nozzle to lock in position.
- The Airshot is supplied with a fixed 3 pin UK plug and 13A replaceable fuse.



CLOUD NINE

To see Cloud Nine's  
complete styling range please go to

[www.cloudninehair.com](http://www.cloudninehair.com)

P-AS QSL UK



CLOUD NINE

THE AIRSHOT HAIRDRYER

## Cloud Nine Airshot Hairdryer features and warranty information

This product comes with a 12 month manufacturer's warranty. In order to qualify for your 12 month manufacturer's warranty you must activate it by registering your product on line at [www.cloudninehair.com](http://www.cloudninehair.com) within 14 days from date of purchase. This does not affect your consumer rights.

Please read this section carefully before you use your new styling product.

For full product information, styling hints, tips and to register your product or for helpdesk information visit [www.coudninehair.com](http://www.coudninehair.com)



- 1) storage hook
- 2) handle
- 3) LED temperature indicator
- 4) Suction/air inlet filter
- 5) 60mm Nozzle
- 6) 75mm Nozzle
- 7) Power & Air speed control
- 8) Temperature control switch
- 9) Cold shot button
- 10) Nozzle alignment markers

## Cloud Nine Airshot Hairdryer product safety

Do not use your hairdryer with wet hands, in a bathroom, near water or any liquids. Do not contaminate any part of your product with any chemical, hair colour or dye. Always inspect your hairdryer and power cord for signs of damage before use. If the product is damaged in anyway do not use it. Instead go to our website for helpdesk information. If the hairdryer is damaged in any way it must be repaired or replaced by our service centre or it's agent. Your hairdryer can become very hot so always hold the product by the handle when using, do not hold the hairdryer by the body. Never place the hairdryer on polished or heat sensitive surface during or after use as the surface could become damaged. In order to avoid injury, never allow the hairdryer or nozzle to come into direct contact with the eyes or skin. Only use Cloud Nine nozzles and plugs as supplied with your product. Do not attempt to fix nozzles or adapters to your hairdryer which have been manufactured by any other manufacturer. Keep the Suction Air Inlet Filter clean and free from lint and hair at all times. Do not cover or block the Suction Air Inlet Filter or Air Outlet Nozzle when in use. When using do not allow hair to come into contact with the Suction Air Inlet Filter at the back of your hairdryer. Always unplug from the mains supply immediately after use. Always allow the hairdryer to cool down completely before storage. Do not wrap the power cord around the hair dryer for storage.

### Cleaning

Always unplug your hairdryer from the mains power supply before cleaning. Clean your product by gently wiping with a damp lint free cloth, do not use sprays or detergents. Never immerse your product in water. Never insert metallic objects into your hairdryer. Unscrew the Suction inlet Filter at the back of your hairdryer and remove any fluff or hair which could block the air flow. The suction inlet Filter must be checked and cleaned after each use. Replace the Suction inlet Filter securely after cleaning, NEVER use your hairdryer without replacing the Suction inlet Filter.

### Voltage

The hairdryer can be operated with a mains voltage ranging from 220-240 Volts 50-60Hz 2000W

### Operation Failure

If your styling product fails to work please follow this guide: Check that your product and the power supply are switched on. Check the fuse which is situated in the plug and replace with a 13A fuse if required. If your product cable or plug becomes damaged in any way stop using it immediately and return your product to our service centre for repair. Under no circumstances should you or anyone else tamper with the product as this will invalidate your warranty.

### Remember

It's important that you never use your styling product for anything other than styling hair as directed in the quick start guide. Your product has been specifically designed for this purpose and using the product for any other purpose could be dangerous.

### User Advice

Please remember to keep your original proof of purchase in a safe place. This product benefits from a 12 month warranty, subject to terms and conditions. This appliance can be used by persons aged from 16 years and above. If persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge use this product an adult responsible for their safety must ensure that they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer or it's service agent in order to avoid a hazard. Model No. C9-HD2.0



**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



This marking indicates that this product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.