

BOXFORD

Toy Chest

Materials

MDF, acrylic paint, clear lacquer

Care instructions

Wipe down with a wet cloth and a mild soapy solution then wipe dry with a clean cloth.

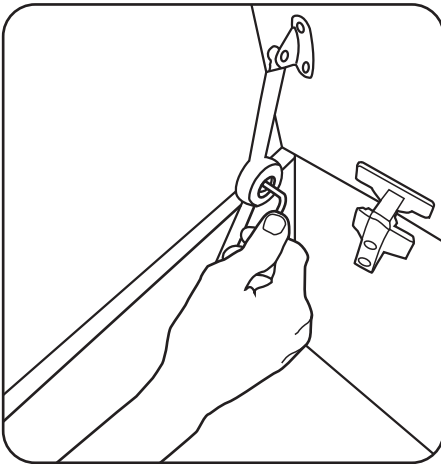


Illustration A

Adjustment of support hinges

The hinges on the side of the toy chest can be adjusted to increase or decrease the speed with which the lid closes. Please use the included hex key to adjust the pressure of the hinges by tightening or loosening them (Illustration A).

Warning

Due to the possibility of pinched fingers, children under the age of 3 should only use this toy chest under adult supervision.

If you have any questions or would like to give us feedback, feel free to email us at info@hex.furniture or call us on +92-315-4510439. We'd love to hear from you!