

AAVANTE BAR 1750



**BRING YOUR
HOME TO LIFE**



USER MANUAL

boAt

 
AAVANTE BAR 1750

Thank you for choosing the boAt Aavante Bar 1750 as the audio source for your home. Discover a new level of immersive, cinematic audio experience at home with the boAt Aavante Bar 1750. A powerful 120 W total output, a slim sound bar and versatile 2-way subwoofer brings every aspect of your entertainment be it a song, show or movie to life. Drivers at each end of your sound bar deliver a clear mid and high range, while an 80W subwoofer fills in the rumbling lows. The 2.1 channel sound system provides a balanced sound and deep bass for your movies, music and even video games and you can experience cinematic sound that revolves around you. Stay plugged into the sound with an array of wired connections, and Bluetooth® wireless technology. Bring your home to life with the boAt Aavante Bar 1750. We request that this installation guide be carefully read for proper usage of the device.



PACKAGE CONTAINS:

- 1N Soundbar
- 1N Remote Control
- 1N Catalogue
- 1N AUX Cable
- 1N TWS wireless subwoofer
- 1N User Manual
- 1N Warranty Card
- 1N Wall-mount Screws


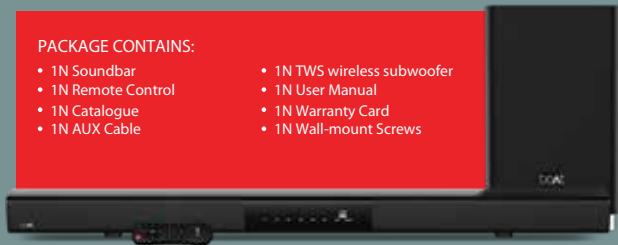


TECHNICAL SPECIFICATIONS

Model	boAt AAVANTE BAR 1750
Technology	USB, Optical, Coaxial, HDMI(ARC), AUX, Bluetooth, FM
Drivers	2"*4SB + 6.5" SW
Output Power	20W*2+80W=120W R.M.S
Frequency Response	55Hz-20KHz
Signal-to-Noise Ratio	≥ 80dB
Impedance	4Ω*4+4Ω
BT Transmission Range	Up to 10m
Bluetooth	V5.0
Dimensions	Soundbar: 65*68*940mm; Subwoofer: 350*250*200mm


CONTROL AND CONNECTIONS

- | | |
|---------------|---------|
| 1. STANDBY | 6. EQ |
| 2. PLAY/PAUSE | 7. ARC |
| 3. STOP | 8. MODE |
| 4. PREV | 9. USB |
| 5. NEXT | |

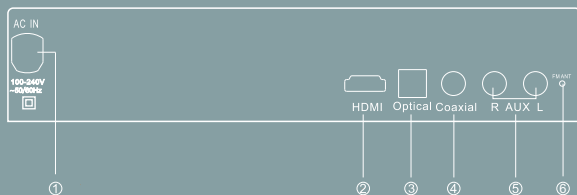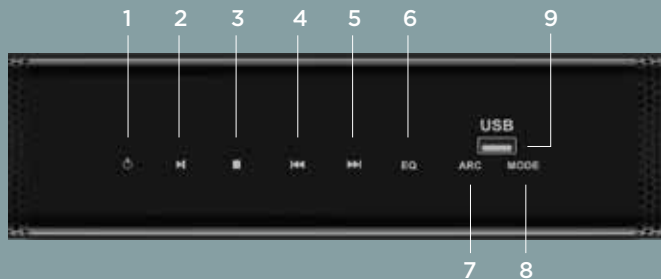  

1. AC IN
2. HDMI(ARC)
3. OPTICAL
4. COAXIAL
5. AUX
6. FM ANT

 
SUBWOOFER'S BACK PANEL

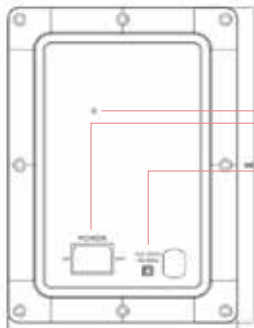

• LED indicator: It indicates pairing between the sound bar and the subwoofer

• POWER

 • AC IN

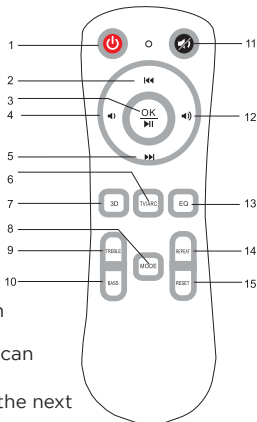

REMOTE CONTROLLER FUNCTIONS

1. POWER: Press to switch unit between ON and Standby Mode
2. PREV: Switch to the previous song or switch to the previous Stations of the FM radio
3. PLAY/PAUSE: Play music/pause music/FM scan
4. VOL: Reduce the volume
5. NEXT: Switch to the next song or switch to the next station of the FM radio
6. TV/ARC: If the HDMI IN(ARC) of the sound bar is connected to the TV, press this button to switch the TV to play sound or the sound bar to play sound
7. 3D: Switch to 3D sound effect
8. MODE: Press to switch among the following modes: BT, HDMI, FM, Optical, Coaxial, AUX If the USB devices is inserted, the options include: USB, BT, HDMI, FM, Optical, Coaxial, AUX
9. TREBLE: Press TREBLE then press VOL+/- to adjust the treble
10. BASS: Press BASS then press VOL+/- to adjust the bass
11. MUTE: To mute the sound
- 12.VOL+: Increase the volume
13. EQ: Switch among EQ modes, in the following order: Normal (default mode); Jazz, Pop, Rock, Classical.
- 14.REPEAT: In USB mode, press REPEAT button once to repeat a single song; press again to repeat all songs
15. RESET: Press to go back to the initial default settings

SET UP & OPERATION

Bluetooth Mode

1. Press the “MODE” button repeatedly until Bluetooth Mode is selected and the display shows “bt”
2. On your Bluetooth-enable devices, choose “AAVANTE BAR 1750”, the pairing name of the sound bar. The indicator blinks indicating that it is pairing and there is a beep sound. Once pairing is successful, the display indicator turns on and stays solid
3. Now you can play music from your Bluetooth-enabled device on the sound bar. Press the “PREV”/ “NEXT” button on the remote control to play the previous or next song.

USB Mode

1. Connect a USB memory device to the USB port (supports up to 32 GB USB)
2. Press the “MODE” button repeatedly until USB Mode is selected. Display shows “USB”
3. Now you can play music from the USB device on the sound bar

NOTE:

- *In any working state, the mode automatically switches to USB when the USB device is plugged in.*
- *The music will be played in the same order as on the USB disk. If song numbers are assigned, you can use numeric button on the remote control to play a particular song.*
- *The USB device must be formatted in “FAT16/FAT32/EXFAT”, maximum size of device possible 32GB.*

HDMI/OPTICAL/COAXIAL/LINE(AUX)

1. Connect the device using any of these modes.
2. Press MODE button repeatedly until the corresponding mode is selected. Display shows ARC, OPT, COA or AUX.
3. Now you can play music from the connected device on the soundbar.

FM Mode

1. Press "MODE" button repeatedly until "FM" mode gets selected. The display shows "Channel Name"
2. Press the "OK" button on the remote control to search for available channels automatically
3. After the automatic channel search gets completed, it skips to the first station and you can use PREV/NEXT button to go to the previous or next station.

Connecting the Soundbar to TV

1. Sound bar power connection: Plug the power cord into the power socket, and the sound bar is powered on.
2. Subwoofer power connection: Plug the subwoofer power cord into a power outlet, and then turn on the power switch. When the subwoofer is powered on, the red and blue LEDs flash alternately. Press and Hold the mode button for 3 seconds to re-pair the host and the subwoofer.
3. Connection to TV (select one of these 2 options):
 - 1) If your TV has an HDMI input with ARC capability: the HDMI in (ARC) on the sound bar is connected to the HDMI(ARC) output port on the TV
 - 2) In case your TV doesn't support HDMI (ARC) then users can use AUX cable to connect the soundbar to HEADPHONE OUT on the TV.

Connecting the soundbar to other devices

Connection to Blu-ray/ DVD player/ Gaming consoles:

- 1) If the concerned equipment has a coaxial output function: The sound bar coaxial cable is plugged into the coaxial output port on the concerned equipment.

Please note: Use a standard coaxial cable (do not use AV cable) to receive the digital signal from another device.

Cable suggested - RG6/U shielded with gold-plated connector.

- 2) If the concerned equipment has a fiber output function: The optical fiber cable of the sound bar is plugged into the optical fiber output port on the concerned equipment.
- 3) Other audio sources: Bluetooth/USB

Safety Instruction

WARNING: to reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

1. Read the user manual before use. Keep all instructions for future reference.
2. Always operate all the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
3. This product is intended for indoor; household use only.
4. To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
5. Do not use this product in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc., where the likelihood of immersion or splashing is high
6. Keep the unit away from heat sources like radiators, heat registers, stoves or other products that produce heat. No open flame sources like candles should be placed on the unit.
7. Use only with attachments/accessories specified by the manufacture. Use of attachments/accessories not recommended can be hazardous.
8. This appliance is not intended for use by persons (include children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
10. Do not cover the unit during use.
11. Do not operate the product with a damaged cord or plug, or if the product malfunctions, or is dropped or damaged in any manner.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
13. For safety reasons, do not remove any covers or attempt to access the inside of the product.
14. Do not clean the unit with any harsh chemicals as this might damage the finish. Wipe clean with a dry cloth.
15. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.

ISSUE	SOLUTION
No power	1. Make sure the boAt Aavante Bar and the subwoofer are plugged in to their respective power source and turned on
No Sound	1. Make sure you've selected the proper source 2. Make sure the volume is set properly on the unit and at the correct playback mode- (Bluetooth, USB, Optical, HDMI (ARC), Coaxial, FM and AUX in .
Subwoofer pairing fails	1. Check that both units are plugged in and turned on 2. Ensure the boAt Aavante Bar 1750 is not in standby mode 3. Make sure that the SoundBar and the Subwoofer are within 10m of each other. 4. Press "MODE" on the soundbar or Remote for 3 seconds, it will re-pair 5. Make sure there are no obstructions between them
Bluetooth pairing fails	1. Check to see that both devices are turned on and that your Bluetooth device is discoverable 2. Turn both devices off and on again 3. Make sure you've selected the proper output mode 4. Make sure that the Bluetooth device is within 5 feet of the unit 5. Move both devices away from other Bluetooth devices, microwaves, wireless routers and other electronic gadgets 6. Make sure that the unit is not paired to a previously paired device
Files on USB memory device not playing back	1. Make sure you've selected the proper source 2. Make sure that the audio files are in MP3 format. 3. Make sure that the memory device is no more than 32 GB
No sound when receiving TV Input	1. Make sure that all connections are secure 2. If using HDMI, make sure that the TV has a dedicated HDMI ARC port 3. Make sure the volume is set properly on the unit and at the television

AAVANTE BAR 1750

