



AAVANTE BAR OPERA

Thank you for choosing Aavante Bar Opera. You are now just a step away from the realm of pure audio bliss. With the Aavante Bar Opera, experience immersive, cinematic audio on a whole new level at home. Stay plugged into the sound with an array of wired connections, USB, and Bluetooth wireless technology. Bring your home to life with the boAt Aavante Bar Opera. Allow this manual to guide you through the functioning of your sound system.

Package Contains:

- 1X Wired Soundbar
- 1X Power Cable
- 1X AUX Cable
- 1X User Manual
- 1x Catalogue
- 1X Warranty Card

USER MANUAL

SAFETY & WARNINGS

Caution

To reduce the risk of electric shock, do not dismantle the product and do not expose it to rain or moisture. The unit has no user-serviceable parts inside. Refer servicing to a qualified personnel only

The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they are under proper supervision. Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for longer periods of time.
2. Never use the device unsupervised! Switch off the device when not in use.
3. The appliance is not intended to be operated by means of an external timer or separate remote controller system.
4. If the power supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The system must not be exposed to dripping or splashing. Do not place objects filled with liquids such as vases, bottles or humidifiers on the unit.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.


9. Do not place this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on an amplifier or a receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning, if you see such lines, keep this unit away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

IMPORTANT SAFETY INSTRUCTIONS


1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use the device near water.
3. Clean only with a dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other devices (including amplifiers) that produce heat.
6. Do not ignore the safety measures of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.
7. Pay special attention to the positioning of cords, plugs, and power sockets, especially the point where they exit from the unit.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when not in use.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

SOUNDBAR CONTROL PANEL

1. LED Indicator: LED indications are as follows; Bluetooth mode in blue LED, USB mode in pink LED, AUX mode in green LED, and Standby mode in red LED.
2. AUX: Insert the AUX Cable over here.
3. USB: Insert the USB in this interface.
4. HDMI (ARC):
5. DC IN
6. Volume Increase/Next Track: Short press in steps to increase the volume in any mode. Long press in USB/Bluetooth modes to skip to the next song.
7. Power/Source Button: Long press the Power button for 3 seconds to turn the soundbar on/off.
8. Volume Decrease/Previous Track: Short press in steps to decrease the volume in any mode. Long press in USB Bluetooth modes to return to the previous song.
9. INPUT: To change modes

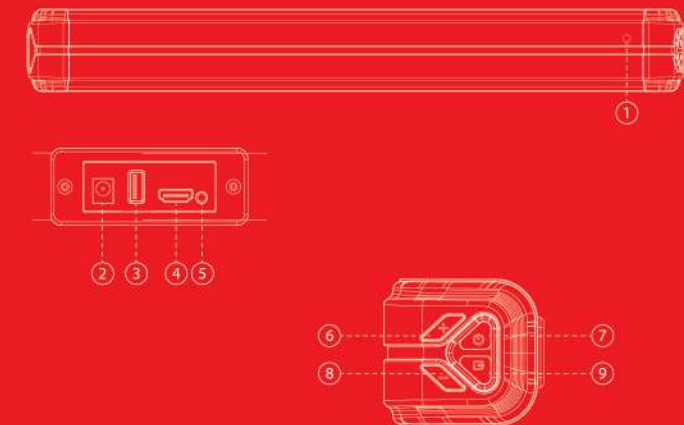


REMOTE CONTROL

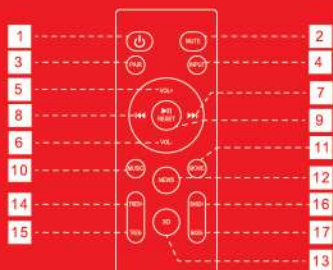

1. Power Button: Standby mode for Power ON/OFF.
2. Mute: Mute ON/OFF
3. Pair: Connect or disconnect Bluetooth; long press the button to disconnect or reconnect to Bluetooth
4. INPUT: Switch among input modes: BT; Optical; HDMI(ARC); USB and AUX
5. Volume+: Increase the volume
6. Volume-: Decrease the volume
7. Next Button: In Bluetooth mode, short press for next song; in USB mode short press for next song and long press for fast forward.
8. Previous Button: In Bluetooth mode short for previous song; in USB mode short press for previous song and long press for fast forward.
9. Reset/Play-Pause Button: In Bluetooth and USB mode short press to play/pause; in AUX mode, short press to mute/unmute; long press the button to reset the soundbar and clear Bluetooth memory.
10. MUSIC: For MUSIC EQ effect
11. MOVIE: For MOVIE EQ effect
12. NEWS: For NEWS EQ effect
13. 3D: For 3D EQ effect
14. TREB+: Increase treble
15. TREB-: Decrease treble
16. BASS+: Increase bass
17. BASS-: Decrease bass

SETTING UP THE SOUNDBAR

- Place the soundbar horizontally on a solid surface such as a TV unit or shelf and align it centrally.
- For the best sound output and good airflow around the soundbar, place your soundbar and subwoofer as shown in the image below.

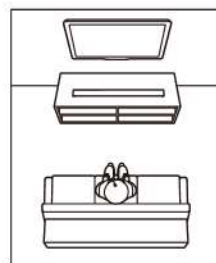

OPERATING INSTRUCTIONS

Powering On/Off

- Plug the power cable of the sound bar into the wall socket. The sound bar will automatically enter standby mode.
- Press the Power /Source button on the sound bar to power on. Press the INPUT button to switch the input mode.
- To turn it off, press and hold the Power /Source button on the sound bar for about 2 seconds to enter standby, and then unplug it from the wall socket.

BLUETOOTH PAIRING

- Use either the buttons on the Soundbar or the "Input" button on the remote to activate BT mode.
- A Blue LED indicator will indicate that BT mode has been selected.
- Activate the pairing function on your phone or other compatible device and select "AAVANTE BAR OPERA "
- When successfully paired, you will hear a tone and the LED will stay on.

Notes:

- If your Pairing device is switched off or is manually disconnected, the soundbar will automatically enter pairing mode.
- The successfully connected device will be re-established once you re-enter the wireless range (10 meters).
- There is no automatic shutdown in pairing mode. The sound bar will remain in pairing mode even if no device is paired, so switch it off if not in use.

USING THE SOUNDBAR

Aux mode

- Firstly, connect the sound bar to your PC, laptop, smartphone, TV, or other audio devices by using an AUX cable provided. Make sure that these devices have both AUX IN and AUX out terminals.
- Then short-press the "POWER/SOURCE" button on Soundbar or on the remote control to switch the sound bar to Aux mode, once the sound bar is connected to AUX mode, the source LED light will indicate green color.
- Playback can only be controlled on your connected device.

Note: For some computers, you may need to access the audio control panel to manually set the soundbar.

USB MODE

- Plug the power cord of the soundbar & subwoofer into a wall outlet, it will automatically enter standby mode.
- Press the STANDBY button on the soundbar or the POWER button on the remote control to turn the soundbar on.
- To turn off, press and hold the STANDBY button or POWER button on the remote control for about 2 seconds, the soundbar will enter standby mode, and then unplug it from the wall outlet

HDMI ARC MODE

- The sound bar supports HDMI(ARC) with an audio return channel (ARC). You can hear the TV audio through your sound bar by using a single HDMI(ARC) cable.
- Using a high-speed HDMI(ARC) cable, connect the HDMI(ARC) connector on the sound bar to the HDMI(ARC) connector on the TV.
- Press the "PUSH" button on the remote control or the "POWER/SOURCE" button on the sound bar to select HDMI (ARC) mode. After connection, the source LED light will start indicating white color.

SPECIFICATION

Model	boAt AAVNATE BAR OPERA
Bluetooth Version	V5.0
Net Weight	2kgs
Working Range	10m
Driver Size	5.5"8.5cm*2
Supported Profiles	A2DP, AVRCP
Frequency	50Hz-20KHz
Impedance	4Ω*2
Output Power	35W*2=70W
Dimensions	S73H*76.5D*580L mm

