



Airdopes 281 Pro

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 281 Pro. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

In the box

- 1x Pair of TWS Earbuds
- 1x Charging Case
- 2x Pairs of Additional Earmuffs
- 1x Type-C Charging Cable
- 1x User Manual
- 1x Warranty Card
- 1x Catalogue

Power On (First Time User)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our IWP™ (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode

OR

Long touch the CTC on both earbuds for 3 seconds to manually power on the earbuds

Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode, indicated by red and blue LED flashes

Connection Mode

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 281 Pro' and pair accordingly

Congratulations! Your earbuds are now connected successfully via Bluetooth

Note:

- Pairing mode lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above mentioned procedure
- Airdopes 281 Pro remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices

Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Power On or Manual Power On for switching on the desired earbud

Step 2: The selected earbud will automatically enter the connection mode indicated by red and blue LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 281 Pro' to connect

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You cannot skip tracks or return to the previous tracks in Mono mode

LED Indicators / Functionalities

- 2 Seconds: Long touch either CTC for 2 sec to activate voice assistant
- 3 Seconds: Long touch both CTCs for 3 seconds to manually power on
- 5 Seconds: Long touch either CTC for 5 seconds to manually power off
- 10 Seconds: Long Press the reset button for up to 10 sec to perform factory reset

Charging The Earbuds

Step 1: Please insert the earbuds back inside the charging case in correct orientation.

Step 2: A solid red LED indicates that the earbuds are being charged. Once fully charged the LED turns off

Step 3: Once the earbuds are fully charged, the charging case automatically switches off to save power.

Note:

- Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging

Charging The Case

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc. The case LED turns into red during charging and once fully charged all the LED stay solid

• Remaining Battery LED Indicator

Status	LED Indicator
Remaining battery 0-25%	LED 1 flashes red; rest stay off
Remaining battery 25-50%	LED 2 flashes red; LED 1 stays solid red and rest stay off
Remaining battery 50-75%	LED 3 flashes red; LED 1 & 2 stay solid red and 4 stays off
Remaining battery 75-99%	LED 4 flashes red; LED 1, 2 & 3 stay solid red
Full Charge 100%	All the LEDs stay solid red

Note: The LED lights located on the charging case indicate the battery status of the case.

Basic Functions

- Voice Assistant: Long touch the CTC on either earbud for 2 seconds to activate the voice assistant
- Answer/Hang Up Call: Single tap the CTC on either earbud to answer an incoming call and once again to hang up an ongoing call
- Reject Call: Long touch the CTC for up to 1.5 seconds to reject incoming calls
- Play/Pause Music: Single tap the CTC on either earbud to play or pause music
- Next Track: When playing music, double tap the right CTC to skip to the next song
- Previous Track: When playing music, double tap the left CTC to return to the previous song

Note: The volume can only be controlled via the media device

Voice Assistant

Step 1: Long touch the CTC on either earbud for 2 seconds to activate the smart voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

Tips: You may try out the following commands,

• "What is the weather?"
• Play a song
• Set a reminder"

Smart Power Off

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation

Step 3: The earbuds will automatically switch off (and enter into charging mode)

Manual Power Off

Step 1: Long touch the CTC on either earbud for 5 seconds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

Factory Reset

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 281 Pro

**NOTE: Before performing reset, clear "Airdopes 281 Pro" from pairing device history by forgetting device*

Step 1: Place both the earbuds back inside the charging case in correct orientation and don't close the case lid at this moment

Step 2: Long press the Reset Button on the charging case for up to 10 seconds to do factory reset, which is indicated by the flashing of red LED on the charging case for 2 seconds.

Step 3: Close the lid of the case and then after a few seconds reopen it. The earbuds automatically restart.

Congratulations! Your Airdopes 281 Pro has been Reset

Troubleshooting

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset

Specifications

Bluetooth Version	V5.1
Water Resistance	IPX5
IWP Technology	Yes
Charging Interface	Type C
Music Playtime	Up to 6.5H per charge; Up to 25H additional with Case
Charging Technology	ASAP Fast Charge
Standby Time	150H
Transmission Range	10m
Driver Size	6mm*2
Bluetooth Profiles	HFP, HSP, SPP, AVRCP, A2DP
Frequency	20Hz-20kHz

Battery	420mAh (Case) 40mAh*2 (Earbuds)
Charging Time	40 Min Earbuds, 1.5H Case
Charging Interface	Type C
Product Weight	4g*2 Earbuds, 41g Case

Warning

- Please follow the instructions to operate
- Please don't use the ear-buds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the volume control on the media device.

Charging norms & Precautionary Guidelines:

1) Charger/Brick/Adapter	: 5V/2A
1) Cable/Wire	: Standard Cable (35 Strands @0.10mm diameter/strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

