

AIRDOPES GENESIS

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes Genesis. Please consider this manual as your guiding map towards the shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.



 
**AIRDOPES
GENESIS**

PACKAGE CONTENTS

- 1 1x Pair of TWS Earbuds
- 2 1x Charging Case
- 3 1x Type-C Charging Cable
- 4 1x FAQ Card
- 5 1x User Manual
- 6 1x Warranty Card
- 7 1x Catalogue

OVERVIEW

- 1 Capacitive Touch Control (CTC)
- 2 Indicator Light
- 3 Charging Port

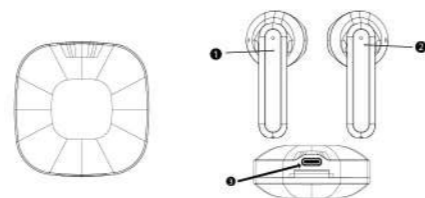


POWER ON (FIRST TIME USER):

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our IWP™ (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter the connection mode

OR

Long touch the CTC on both earbuds for 3 seconds to manually power on the earbuds

 Step 2: Both the earbuds automatically pair with each other. The earbuds enter the Connection Mode, indicated by slow breathing white LED on the master earbud

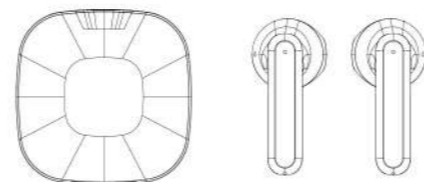

CONNECTION MODE:

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes Genesis' and pair accordingly.

Congratulations! Your earbuds are connected successfully via Bluetooth

 
Note :

- Pairing Mode: It lasts for 5 minutes. If the pairing time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure
- Subsequent Usage: Airdopes Genesis remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices



QUICK GLANCE ON FUNCTIONALITIES

- 3 Seconds: Long touch either CTC for 3 sec to activate voice assistant
- 3 Seconds: Long touch both CTCs for 3 seconds to manually power on, indicated by white LED flash for 1 second
- 5 Seconds: Long touch both CTCs for 5 seconds to manually power off
- 10 Seconds: Long press the Reset Button on the case for up to 10 seconds for the factory reset

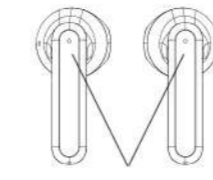

Capacitive Touch Control (CTC)

SINGLE EARBUD USAGE

 
Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud

Step 2: The selected earbud automatically enters the connection mode indicated by slow white LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes Genesis' to connect

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You cannot skip tracks or return to the previous tracks in Mono mode

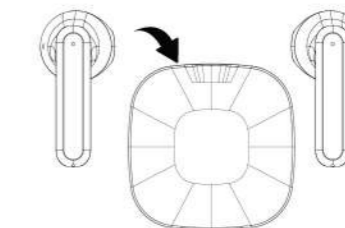

CHARGING THE EARBUDS/ EARBUD INDICATORS

Step 1: Please insert the earbuds back inside the charging case in correct orientation and close the case lid

Once the earbuds are fully charged, the charging case automatically switches off to save power.

LED INDICATORS

Item	Normal State (Not in charging state)
Case 1 - Low battery in it / Less than 30% battery	WHITE LED blinks (2 times) on opening the lid
Case 2 - More than 30% charge	WHITE LED blinks (3 times) on opening the lid

Item	(Charging State)
Earbuds -- Charging	Case's LED turns into solid (5 seconds) on opening the lid
Earbuds - Fully Charged	LED stays OFF

CASE LED INDICATION: EARBUDS GETTING CHARGED

This is to indicate that the earbuds are getting charged (when lid gets closed):

White LED turns on for 5 seconds to indicate the earbuds are getting charged.

Note :

Before using the earbuds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging

CHARGING THE CASE

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

While the case gets charged it gets indicated by slow breathing white LED. Whereas when it gets fully charged, the LED turns into solid white.

Note :

White LED blinks rapidly for three times to indicate that the case has low remaining battery (when the case lid gets opened / closed).

BASIC FUNCTIONS:

• Voice Assistant: Long touch the CTC on either earbud for 3 seconds to activate default voice assistant

• Answer Call: Single tap the CTC on either earbud to answer an incoming call

• Hang Up Call: Double tap the CTC on either earbud

• Reject Call: Double tap the CTC on either earbud

• Play/Pause Music: Put on the earbuds to play a song, whereas remove them from your ears to pause one. The In-Ear Detection feature triggers a seamless play or pause.

OR

• Single tap on either earbud's CTC to play or pause music

• Next Track: When playing music, double tap the right CTC to skip to the next song

• Previous Track: When playing music, double tap the left CTC to return to the previous song

BEAST™ MODE

Triple tap either earbud's CTC to switch to Low Latency mode also known as the BEAST™ Mode. Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience. With BEAST™ mode, the earbuds activate low latency mode especially made for gaming.

To turn off the BEAST™ mode and return to Standard mode, triple tap the CTC again.

ENx™ TECH

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, workspace, literally anywhere!

Note :

Volume can only be controlled via the media device

VOICE ASSISTANT

Step 1: Long touch the CTC on either earbud for 3 seconds to activate the smart voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the case lid

Step 3: The earbuds will automatically switch off (and enter charging mode)

Note :

If the voice assistant does not get triggered then the functionality has to be first enabled via your media device.

MANUAL POWER OFF

Step 1: Long touch both the CTCs on earbuds for 5 seconds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

Step 3: The earbuds will automatically switch off (and enter charging mode)

FACTORY RESET:

Perform the Factory Reset in case you face any difficulty while operating your Airdopes Genesis

NOTE: Before performing reset, clear "Airdopes Genesis" from pairing device history by forgetting device.

Step 1: Place the earbuds inside the case

Step 2: While the earbuds are inside the case, long press the Reset button located outside the case for 10 seconds, until the LED flashes 5 times on the earbuds as well as the case

Step 3: Close the case lid, wait for 5 seconds and then reopen it again.

Congratulations! Your Airdopes Genesis has been Reset, now you may perform a fresh pairing procedure to establish connection.

TROUBLESHOOTING

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
If the Touch Controls don't seem to respond	After long usage, residual stains and perspiration can affect the touch control area, please use a clean cloth to wipe those areas softly

SPECIFICATIONS

Headphone Type	TWS Earbuds
Bluetooth Version	V5.3
Water Resistance	IPX5
IWP Technology	Yes
Music Playtime	9H (Earbuds); 45H (Case) at 60% volume
ASAP Charge	Yes
No. of Mics	2 per Earbud (4x)
BEAST Mode™	Yes
Low Latency	60ms
ENx™ Tech	Yes
Transmission Range	10m
Driver Size	13mm*2
Bluetooth Profiles	HFP/ HSP/ A2DP/ AVRCP
Frequency	20Hz-20kHz
Battery	400mAh (Case) 35mAh*2 (Earbuds)
Charging Time	30Min Earbuds; 1.5 hours Case
Standby Time	60 hours
Weight	2.2g*2 Earbuds; 8g Case
Charging Interface	Type C

WARNING:

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

ADVISABLE:

The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device.

Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adapter	: 5V 2A
2) Cable/Wire	: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

FACTORY RESET:

Perform the Factory Reset in case you face any difficulty while operating your Airdopes Genesis

NOTE: Before performing reset, clear "Airdopes Genesis" from pairing device history by forgetting device.

Step 1: Place the earbuds inside the case

Step 2: While the earbuds are inside the case, long press the Reset button located outside the case for 10 seconds, until the LED flashes 5 times on the earbuds as well as the case

Step 3: Close the case lid, wait for 5 seconds and then reopen it again.

Congratulations! Your Airdopes Genesis has been Reset, now you may perform a fresh pairing procedure to establish connection.

TROUBLESHOOTING

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
If the Touch Controls don't seem to respond	After long usage, residual stains and perspiration can affect the touch control area, please use a clean cloth to wipe those areas softly

SPECIFICATIONS

Headphone Type	TWS Earbuds
Bluetooth Version	V5.3
Water Resistance	IPX5
IWP Technology	Yes
Music Playtime	9H (Earbuds); 45H (Case) at 60% volume
ASAP Charge	Yes
No. of Mics	2 per Earbud (4x)
BEAST Mode™	Yes
Low Latency	60ms
ENx™ Tech	Yes
Transmission Range	10m
Driver Size	13mm*2
Bluetooth Profiles	HFP/ HSP/ A2DP/ AVRCP
Frequency	20Hz-20kHz
Battery	400mAh (Case) 35mAh*2 (Earbuds)
Charging Time	30Min Earbuds; 1.5 hours Case
Standby Time	60 hours
Weight	2.2g*2 Earbuds; 8g Case
Charging Interface	Type C

WARNING:

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

ADVISABLE:

The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device.

Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adapter	: 5V 2A
2) Cable/Wire	: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

