

AirDopes 141



Just Play!

Manual Setup Guide



AirDopes 141

Get ready to immerse yourself in musical bliss with your very own pair of boAt AirDopes 141. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss.

Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

PACKAGE CONTENTS

- 1x Pair of TWS Earbuds
- 1x Charging Case
- 1x Type-C Charging Cable
- 2x Pair of Extra Earbuds
- 1x User Manual
- 1x Warranty Card
- 1x Catalogue

POWER ON (First Time User)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IPW™ technology, the earbuds power on automatically, get connected and enter into the connection mode

OR

Long touch the CTC on both earbuds for 8 seconds to manually power on the earbuds

Step 2: After powering on, the earbuds enter into the Connection Mode, indicated by red and white LED flashes

CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'AirDopes 141' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via Bluetooth

Note:

- Pairing mode lasts for 3 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above mentioned procedure
- AirDopes 141 remembers previously connected devices; once switched on, the ear-buds automatically reconnect to the previously connected devices



SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud

Step 2: The selected earbud will automatically enter the connection mode indicated by red and white LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'AirDopes 141' to connect

Notes:


- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You cannot skip tracks or return to the previous tracks in Mono mode

QUICK GUIDE ON FUNCTIONALITIES

- 3 Seconds Long touch either CTC for 3 seconds to activate voice assistant

- 8 Seconds Long touch both CTCs for 8 seconds to manually power on

- 5 Seconds Long touch both CTCs for 5 seconds to manually power off

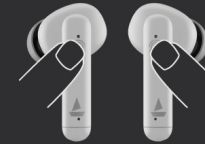

CHARGING THE EARBUDS

Step 1: Please insert the earbuds back inside the charging case in correct orientation.
Step 2: A solid red LED on earbuds indicates that the earbuds are being charged. Once fully charged the LED turns off
Step 3: Once the earbuds are fully charged, the charging case automatically switches off to save power.

Note:

- Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging
- If battery is 20% or below then the red LED blinks every few seconds to indicate the same

CHARGING THE CASE

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

White LED flashes while the case is on charging. When the charge gets full, it gets indicated by solid white LED.




Charging norms & Precautionary Guidelines:

- 1) Charger/Brick/Adapter : 5V/2A
- 1) Cable/Wire : Standard Cable (35 Strands @0.10mm diameter/strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

BASIC FUNCTIONS

- Voice Assistant: Long touch the CTC on either earbud for 3 seconds to activate the voice assistant
- Answer: Single tap the CTC on either earbud to answer an incoming call
- Hang Up / Reject Call: Double tap the CTC on either earbud to end or reject call
- Play/Pause Music: Single tap on either earbud's CTC to play or pause music
- Next Track: When playing music, double tap the right CTC to skip to the next song
- Previous Track: When playing music, double tap the left CTC to return to the previous song

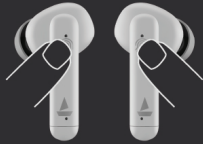

Note:

- Volume can only be controlled via the media device

VOICE ASSISTANT

Step 1: Long touch the CTC on either earbud for 3 seconds to activate the smart voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

Tips: You may try out the following commands,

- What is the weather?
- Play a song
- Set a reminder

What is the weather?
Play a song
Set a reminder



SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

The earbuds automatically switch off (and enter into charging mode).



MANUAL POWER OFF

Step 1: Long touch both CTCs for 5 seconds to manually power off

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid



AUTO- RESET

AirDopes 141 comes equipped with our cutting edge IPW™ technology along with the Auto-Reset feature, which means that you would not require to do the factory reset manually. Now, every time while the earbuds are kept inside the case and the lid gets opened, the earbuds reset automatically.

Note:

The Auto-Reset mechanism helps to refresh the earbuds and troubleshoot operation issues, if any.

SPECIFICATIONS

Bluetooth Version	V5.0
Music Playtime	Up to 6HRS per charge; Up to 36HRS additional with Case (at 60% volume)
Standby Time	100H
Talktime	5HRS
Transmission Range	10m
Driver Size	8mm*2
Bluetooth Profiles	HFP/ HSP/ A2DP/ AVRCP
Frequency	20Hz-20kHz
Battery	60mAh (Case) 30mAh*2 (Earbuds)
Charging Time	1H (Earbuds); 2H (Case)
Charging Interface	Type C
Water Resistance	IPX4

WARNING

- Please follow the instructions to operate
- Please don't use the ear-buds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

