



## boAt AIRDOPES 161 ANC

Immerse in your favorite tunes with your personal pair of boAt Airdopes 161 ANC. Please consider this manual as your guiding map to navigate the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boAt. Therefore, we strongly recommend that this manual is read thoroughly. You can even refer to it at times when you face difficulties.




### PACKAGE CONTENTS

- 1. 1x Pair of TWS Earbuds
- 2. 1x Charging Case
- 3. 1x Type-C Charging Cable
- 4. 1x User Manual
- 5. 1x Warranty Card
- 6. 1x Catalogue
- 7. 2x Pairs of Additional Earmuffs
- 8. 1x FAQ Card

### OVERVIEW

- 1. CTC (Capacitive Touch Control) / Power Button

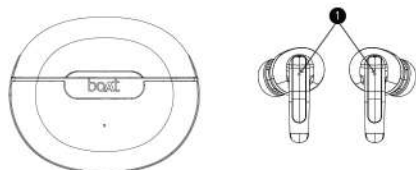

### POWER ON (FIRST TIME USER):

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our IWP™ (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds

Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode indicated by blue and red LED flashes

### CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 161 ANC' and pair accordingly.

Congratulations! Your earbuds are now successfully connected via Bluetooth

- Note :
- Pairing mode lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above-mentioned procedure
  - Airdopes 161 ANC remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices within the working range.

### SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Power On or Manual Power On for switching on the desired earbud

Step 2: The selected earbud will automatically enter the connection mode


Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 161 ANC' to connect

- Note :
- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage



### QUICK GLANCE ON FUNCTIONALITIES

- 3 Seconds: Long touch both CTCs for 3 seconds to manually power on
- 3 Seconds: Long touch the right CTC for 3 seconds to toggle between ANC OFF/ Ambient/ ANC ON modes
- 3 Seconds: Long touch the left CTC for 3 seconds to toggle between boAt Signature Sound/ Balanced Mode
- 5 Seconds: Long touch both CTCs for 5 seconds to manually power off
- 4 Times: Tap both CTCs 4 times simultaneously to perform factory reset. Red LED on the earbuds blinks once to confirm reset.

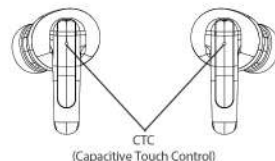


### CHARGING THE EARBUDS

Step: Please insert the earbuds back inside the charging case in correct orientation.

Remaining Earbuds Battery	LED Indication
Less than 30%	Red light blinks 3 times when the Case lid gets opened
30%-100%	Blue light blinks 3 times when the Case lid gets opened

Note :

- Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.

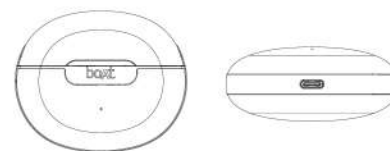

### CHARGE THE CASE:

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer, wall adapter, powerbank etc.

Case Remaining Battery	LED Indication
Less than 30%	White LED blinks quickly for 4 seconds when the lid is opened/closed
More than 30%	White LED stays steady for 4 seconds when the lid is opened/closed
On charging	White LED flashes continuously
Fully charged (100%)	Solid white LED

Case LED indication when the earbuds are charging within the case:

Earbuds Status	Case LED State (when the lid is closed)
On charging	White LED stays steady for 5 seconds
Fully charged (100%)	White LED turns off

Note: Earbuds charging status will be shown after the case charge status.

### ANC, NORMAL(ANC OFF) & AMBIENT MODES:

Long touch the right CTC for 3 seconds to toggle between Ambient mode, ANC mode and Normal (ANC OFF) mode for music. Ambient mode offers transparency towards the audible surroundings. Conversely, the ANC Mode cancels out the external noise to let you fully immerse in your playlists. By default, the Normal (ANC OFF) mode stays active.

The operational cycle is: Normal (ANC OFF) Mode -> Ambient Mode -> ANC Mode

### BASIC FUNCTIONS:

- Answer: Single tap the CTC on either earbud to answer incoming calls
- Hang Up / Reject Calls: Double tap the CTC on either earbud to end / reject calls
- Play/Pause Music: Single tap CTC on either earbud to play or pause a track
- Next Track: When playing music, double tap the right CTC to skip to the next song
- Previous Track: When playing music, double tap the left CTC to return to the previous song
- Dual EQs: Long touch the left CTC for 3 seconds to switch between boAt Signature Sound or Balanced Modes. By default, the boAt Signature Sound mode remains active.

### BEAST™ MODE

Triple tap the left CTC to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap the left CTC once again, to turn it off and return to Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

### ENX™ TECH

Our ENX™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENX™ as the mics are equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space; literally anywhere!

### SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears.

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

Step 3: The earbuds will automatically switch off (and enter into charging mode)

### MANUAL POWER OFF

Step 1: Long touch both CTCs for 5 seconds to manually power off the earbuds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

### FACTORY RESET

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 161 ANC


\*NOTE: Before performing reset, clear "Airdopes 161 ANC" from pairing device history by forgetting the device.

Step 1: Press the CTC on both the earbuds simultaneously for 4 times. Red LED blinks once on the earbuds to indicate successful factory reset.

Step 2: Close the lid after placing the earbuds within the case. Re-open it again after a few seconds.

Step 3: Take out the earbuds from the charging case and perform a fresh connection.

Congratulations! Your Airdopes 161 ANC has been Reset.

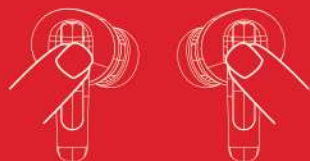

### TROUBLESHOOTING

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection /scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
If the Touch Controls don't seem to respond	After long usage, residual stains & perspiration can affect the touch control area, please use a clean cloth to wipe softly
If the left and right earbuds unpair with each other due to any anomaly	Perform the Factory Reset.

### Charging norms & Precautionary Guidelines: -

- 1) Charger/Brick/Adapter : 5V 2A
- 2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Note: Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

### SPECIFICATIONS

Headphone Type	ANC TWS Earbuds
Bluetooth Version	V5.3
Water Resistance	IPX5
IWP™ Technology	Yes
ANC	FF ANC (Up to 32dB)
ENX™ Equipped Microphones	4
Latency with BEAST™ Mode	50ms
Music Playtime	Up to 6H per charge, Up to 44H additional Case playtime (Non-ANC mode) Up to 5H per charge, Up to 35H additional Case playtime (ANC mode) at 60% vol
Standby	150H
Charging Technology	ASAP™ Charge
Transmission Range	10m
Driver Size	10mm *2
Codec Support	SBC and AAC
Frequency	20Hz-20kHz
Battery	500mAh (Case); 35mAh*2 (Earbuds)
Charging Time	1.5 hours (Case); 35 mins (Earbuds)
Charging Interface	Type C

### WARNING

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the earbuds' service life

### Recommendation:

- The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on your phone/media device.

