



Airdopes 175

True Wireless Ear-buds

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 175. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.

Package Contents

- 1) 1x boAt Airdopes 175
- 1) 1x Charging Case
- 1) 1x Type-C Charging Cable
- 2) 2x Pairs of Additional Earbuds (Small & Large)
- 1) 1x User Manual
- 1) 1x Warranty Card
- 1) 1x Catalogue
- 1) 1x Read Me Card
- 1) 1x FAQ Card

Overview

- 1) CTC (Capacitive Touch Control) / Power Button




Power On:

Step 1: To switch the earbuds on Smart Power On simply open the lid of the charging case when earbuds are inside. Courtesy our BT™ (True Wireless) Technology, the earbuds power on automatically, get connected and enter the connection mode.

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds.

Step 2: After powering on, the earbuds enter the Connection Mode, indicated by alternate red and blue LED flashes on primary earbud.

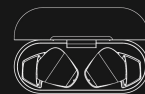

Connection Mode:

Step 3: Turn on the Bluetooth functionality on your phone/media device & scan.

Step 4: Search for Airdopes 175 and pair accordingly.


Congratulations! Your earbuds are now connected successfully via Bluetooth.

Note:

- 1) Pairing mode lasts for 3 minutes. If the pairing time is missed, then you will need to re-open the earbuds and follow the above mentioned procedure.
- 2) Airdopes 175 remembers previously connected devices, once switched on, the earbuds automatically reconnect to the previously connected devices in working range.



Quick Guide on Functionalities

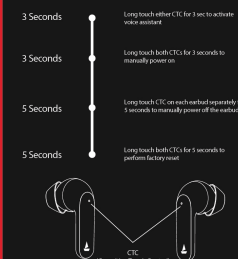

Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Manual Power On for switching on the desired earbud.

Step 2: The selected earbud automatically enters the connection mode indicated by LED flashes.

Step 3: Touch on Bluetooth on your phone/media device and search for Airdopes 175 to pair with.

Note:

- 1) Switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo mode.
- 2) You cannot skip tracks or return to the previous tracks in Mono Single earbud mode.



Charge the Earbuds:

Step 1: Please insert the earbuds back inside the charging case in correct orientation.

Step 2: During charging, the indicator on the earbuds stays solid red.

Step 3: Once the earbuds get fully charged, the charging case automatically switches off its own power, and the earbuds' indicator turns off.

Note:

- 1) Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.

Basic Functions:

- Voice Assistant: Long touch either CTC for 3 seconds to activate the voice assistant.
- Answer: Single tap the CTC on either earbud to answer an incoming call.
- Hang Up / Reject Call: Double tap the CTC on either earbud to end / reject call.
- Play/Pause Music: Single tap either earbud's CTC to play or pause music.
- Next Track: When playing music, double tap the right earbud's CTC to skip to the next song.
- Previous Track: When playing music, double tap the left earbud's CTC to return to the previous song.

Note:

- 1) Volume can only be controlled via the media device.



Voice Assistant:


Step 1: Long touch the CTC on either earbud for 3 seconds to activate your phone's default smart voice assistant.

Step 2: The respective voice assistant screen pops up and you may place your commands at ease.

Tips: You may try the following commands:

- What is the weather?
- Play a song
- Set a reminder

Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled in your media device settings.

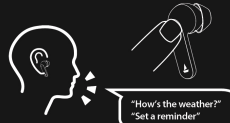

ENx™ Tech

Our ENx™ tech algorithm cancels out the background noise so that you can hear crystal clear via voice call. One need not activate ENx™ as the mics are equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work spaces liberally anywhere!

Smart Power Off

Step 1: After usage, remove both the earbuds from your ears.

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid. The earbuds automatically switch off and enter charging mode.

Manual Power Off

Step 1: Long touch CTC on each earbud separately for 3 seconds to manually power off the earbuds.

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid.

Factory Reset:

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 175.

Note: Before performing reset, clear Airdopes 175 from pairing device history by forgetting device.

Step 1: Take out both the earbuds from the case.

Step 2: Simultaneously, long touch CTC on both the earbuds for 5 seconds.

Step 3: Place the earbuds inside the case, close the lid and wait for 5 seconds.

Step 4: Take out the earbuds from the case and perform a fresh connection.

Congratulations! Your Airdopes 175 has been Reset.



Specifications

Headphone Type	TWS
Bluetooth Version	5.2
Music Playtime	Up to 8HRS per charge; Up to 18HRS additional with Case (at 60% volume)
ENx™ Tech Equipped Mics	4
Transmission Range	10m
Driver Size	10mm ²
Bluetooth Profiles	A2DP, AVRCP, HFP, HSP, GAP, GATT, LE, L2CAP, UAGP
Frequency	200K-2000KHz
Battery	40mAh (Case) 40mAh ² (Earbuds)
Charging Time	45Min. (Earbuds) 2Hr (Case)
Charging Interface	USB Type C
Water Resistance	IPX4

Charging norms & Precautionary Guidelines:	
1) Charger/Brick Adapter	5V 2A
2) Cable/Wire	Standard Cable (13 strands dia 10mm diameter) (standard)

Any other accessory can be paired up with this product as long as the specifications are as per above norms.

Troubleshooting

Potential Problem	Solution
If earbuds are not working	Check the battery level
If earbuds are not in connection mode	Perform the Factory Reset
If earbuds disconnect during phone call	Change the earbuds or perform the Factory Reset
If there are other accessories in usage	Place the earbuds back into the charging case and try to pair again or perform the Factory Reset
If Touch Controls don't seem to respond	Also long touch earbuds (open & reinsert) and after the touch control mode, check that user didn't toggle them away easily

Warning:

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't use the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

Advice: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device.