



boat

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 458. Please consider this manual as your guiding map towards the shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

Package Contains:

- 1N Airdopes 458
- 2N Extra Earmuffs
- 1N Type C Cable
- 1N User Manual
- 1N Fast Pair Card
- 1N Charging Case
- 1N Warranty Card
- 1N Catalogue
- 1N Read Me Card
- 1N FAQ Card

USER MANUAL

Power On (First Time User)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our IWP™ (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode.

OR
Long touch the CTC on both earbuds for 3 seconds to manually power on the earbuds.



Step 2: Both the earbuds automatically pair with each other. The earbuds enter into the Connection Mode, indicated rapid white LED flashes.

Connection Mode

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan.

Step 4: Search for 'Airdopes 458' and pair accordingly.
Congratulations! Your earbuds are connected successfully via Bluetooth

Note:

• *Pairing Mode: It lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above-mentioned procedure*

• *Subsequent Usage: Airdopes 458 remembers previously connected devices; once switched on, the ear-buds automatically reconnect to the previously connected devices*



Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud

Step 2: The selected earbud automatically enters the connection mode indicated by rapid white LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 458' to connect



Note:

• *To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.*
• *You cannot skip tracks or return to the previous tracks in Mono mode*

LED Indicators / Functionalities

- 3 Seconds** Long touch left CTC for 3 sec to activate voice assistant
- 3 Seconds** Long touch both CTCs for 3 seconds to manually power on, indicated by white LED flash for 1 second
- 5 Seconds** Long touch both CTCs for 5 seconds to manually power off, indicated by white LED flash
- 10 Seconds** Long press the Reset Button on the case for up to 10 seconds for the factory reset, indicated by white LED flashes on the case



CHARGING THE EARBUDS/ EARBUD INDICATORS

Step: Please insert the earbuds back inside the charging case in correct orientation and close the case lid.

Once the earbuds are fully charged, the charging case automatically switches off to save power.

LED INDICATORS

Item	Normal State (Not in charging state)
Case 1 - Low battery in it/ remaining battery in it, less than 70%	WHITE LED blinks (3 times) on opening the lid
Case 2 - More than 70% charge	WHITE LED solid (for 3 seconds) on opening the lid

Item	(Charging State)
Earbuds - Charging	White LED Solid (2 seconds) on opening the lid
Earbuds - Full Charged	LED OFF



Note:

• *Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging*

• *If the earbuds have battery lower than 20%, white LED blinks thrice every 30 seconds*

Charging the Case

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

While the case gets charged it gets indicated by slow breathing white LED. Whereas when it gets fully charged, the LED turns into solid white.

Basic Functions

- **Voice Assistant:** Long touch the CTC on left earbud for 3 seconds to activate default voice assistant
- **Answer Call:** Single tap the CTC on either earbud to answer an incoming call
- **Hang Up Call:** Double tap the CTC on either earbud
- **Reject Call:** Double tap the CTC on either earbud
- **Play/Pause Music:** Put on the earbuds to play a song, whereas remove them from your ears to pause one. The In-Ear Detection feature triggers a seamless play or pause.

OR

- Single tap on either earbud's CTC to play or pause music
- **Next Track:** When playing music, double tap the right CTC to skip to the next song
- **Previous Track:** When playing music, double tap the left CTC to return to the previous song

• **BEAST™ Mode:** Long touch the right earbud's CTC for 3 seconds to switch to Low Latency mode infused with Virtual 3D Sound, also known as the BEAST™ Mode. Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience. With BEAST™ mode, the earbuds activate 3D audio mode especially made for gaming.

To turn off the BEAST™ mode and return to Standard mode, long touch the right earbud's CTC for another 3 seconds

• **ENx™ Tech:** Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

Note:

- Volume can only be controlled via the media device

Voice Assistant

Step 1: Long touch the CTC on left earbud for 3 seconds to activate the smart voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease



Tips: You may try out the following commands,

- What is the weather?
- Play a song
- Set a reminder



Note: If the voice assistant doesn't get triggered then the functionality has to be first enabled via your media device.

Smart Power Off

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

Step 3: The earbuds will automatically switch off (and enter charging mode)



Manual Power Off

Step 1: Long touch both the CTCs on earbuds for 5 seconds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid



Factory Reset

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 458

***NOTE:** Before performing reset, clear "Airdopes 458" from pairing device history by forgetting device.

Step 1: Place the earbuds inside the case.

Step 2: While the earbuds are inside the case, long press the Reset button located outside the case for 10 seconds, until the white LED blinks on the case.

Step 3: Close the case lid and then reopen it again.

Congratulations! Your Airdopes 458 has been Reset, now you may perform a fresh pairing procedure to establish connection.



Troubleshooting

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset

If the Touch Controls don't seem to respond

After long usage, residual stains and perspiration can affect the touch control area, please use a clean cloth to wipe softly

Specifications

Headphone Type	TWS Earbuds
Bluetooth Version	V5.2
Water Resistance	IPX4
IWP Technology	Yes
BEAST™ Mode	Yes
ENx Tech	Yes
Music Playtime	6HRS (Earbuds); 16HRS (Case) at 60% volume
No. of Mics	1 per Earbud
Low Latency	60-65ms
Charging Technology	ASAP™ Charge
Transmission Range	10m
Driver Size	11mm*2
Bluetooth Profiles	HFP/ HSP/ A2DP/ AVRCP
Frequency	20Hz-20kHz
Battery	380mAh (Case) 40mAh*2 (Earbuds)
Charging Time	40Min Earbuds; About 2H Case
Standby Time	9 months
Weight	Earbuds 4g*2; Case 50g
Charging Interface	Type C

Warning

- Please follow the instructions to operate
- Please don't use the ear-buds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device.

