

AIRDOPES ACE



boat

 
AIRDOPES ACE

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes Ace. Please consider this manual as your guiding map towards the unparalleled shores of auditory realm. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.



- 1 X Pair of TWS Earbuds
- 2 X Charging Case
- 3 X Type-C Charging Cable
- 4 X User Manual
- 5 X Warranty Card
- 6 X Catalogue
- 7 X FAQ Card

1 CTC (Capacitive Touch Control) / Power Button

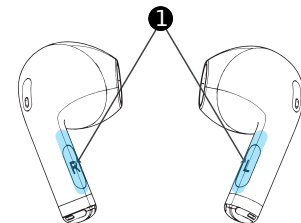

Step 1: To switch the earbuds (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IWP™ (Insta Wake N' Pair) technology, the earbuds power on automatically, get connected and enter the connection mode

OR

Step 2: After powering on, the earbuds enter the Connection Mode, indicated by alternate red and blue LED flashes on primary earbud and blue LED flashes once every 5 seconds on the secondary earbud

CONNECTION MODE:

 
Step 3: Turn on the Bluetooth functionality on your phone/ media device and scan.

Step 4: Search for 'Airdopes Ace' and pair accordingly.

Congratulations! Your earbuds are connected successfully via Bluetooth

Note :

- Pairing Mode: It lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above-mentioned procedure
- Airdopes Ace remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices in working range.

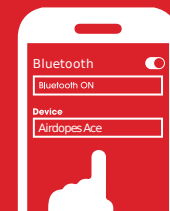

Step 1 Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud

 
Step 2: The Selected earbud automatically enters the connection mode indicated by rapid red & blue LED flashes.

Step 3: Turn on Bluetooth on your phone/ media device and search for 'Airdopes Ace' to connect

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You cannot return to the previous tracks in Mono(single-earbud) mode

- 3 Times Triple tap on left CTC to activate default smart voice assistant
- 3 Seconds Long touch both CTCs for 3 seconds to manually power on, indicated by white LED flash for 1second
- 5 Seconds Long touch both CTCs for 5 seconds to perform factory reset
- 8 Seconds Long touch either CTC for 8 seconds to manually power off

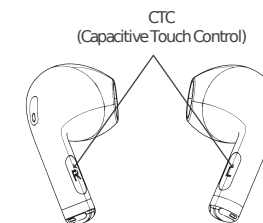

CHARGING THE EARBUDS

Step 1: Please insert the earbuds back inside the charging case in correct orientation and close the lid

Step 2: In charging status, the red LED Solid turns on when case lid gets opened. LED stays off when the lid stays closed.

Step 3: Once the earbuds get fully charged, the charging case automatically switches off to save power, and the red LED stays turned off.

Note

- Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.

- To indicate low earbud battery, red LED blinks thrice every 30 seconds

CHARGING THE CASE

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

REMAINING CASE BATTERY LED INDICATIONS

| Scenario | Indication |
|-----------------------|--|
| Less than 20% battery | WHITE LED blinks continuously when the Case lid is opened/Closed |
| More than 20% battery | WHITE LED is solid on for 8 seconds when the Case lid is opened/closed |
| Case in charging mode | WHITE LED continuously blinks |
| Case fully charged | WHITE LED is solid on |

CASE LED INDICATION WHEN EARBUDS ARE GETTING CHARGED FROM THE CASE

This is to indicate the earbud getting charged from the case (when case lid gets closed):

- WHITE LED is Solid ON for 8 seconds while charging
- WHITE LED is OFF when Earbuds are charged fully

BASIC FUNCTIONS

Note

 
- Volume can only be controlled via the media device

VOICE ASSISTANT:

Step 1: Triple tap on left CTC to activate default smart voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

- Tips: You may try the following commands,
- What is the weather?
 - Play a song
 - Set a reminder



Note

If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.

ENX™ TECH

Our ENX™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENX™ as the mics are equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

The earbuds automatically switch off (and enter charging mode).

MANUAL POWER OFF

Step 1: Long touch either CTC for 8 seconds to manually power off the earbuds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

BEAST™ MODE

Triple tap the right CTC to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap the left CTC once again, to turn it off and return to standard Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

FACTORY RESET

Perform the factory reset in case you feel any difficulty while operating your Airdopes.

*NOTE: Before performing reset, clear "Airdopes Ace" from pairing device history by forgetting device

Step 1: Take out the earbuds from the charging case, and long touch the CTC for 5 seconds on both the earbuds.

Step 2: Place the earbuds inside the Case.

Step 3: Close the lid, wait for 5 seconds.

Step 4: Take out the earbuds from the charging case and perform a fresh connection.

Note: To complete the factory reset, all of the above steps should be performed.

Congratulations! Your Airdopes Ace has been Reset

SPECIFICATIONS

| | |
|--------------------|-----------------------------------|
| Headphone Type | TWS |
| Bluetooth Version | V5.3 |
| Music Playtime | 8.5H earbuds; 26H (at 60% volume) |
| Standby Time | 50H |
| Transmission Range | 10m |
| Driver Size | 13mm*2 |
| ENx™ | Yes |
| ASAP™ Charge | Yes |
| Frequency | 20HZ-20KHZ |
| Battery | 300mAh (Case) ; 35*2mAh (Earbuds) |
| Charging Time | 40Min (Earbuds) ; 2H (Case) |
| Charging Interface | USB Type C |
| Water Resistance | IPX5 |

WARNING

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

Charging norms & Precautionary Guidelines -

| | |
|--------------------------|--|
| 1) Charger/Brick/Adapter | : 5V 2A |
| 2) Cable/Wire | : Standard Cable (20 strands @0.10mm diameter/ strand) |

Any other accessory can be paired up with the product as long as the specifications are as per above norms.