

 


boAt AIRDOPES SONIK

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes Sonik. Please consider this manual as your guiding map towards the unparalleled shores of auditory realm. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.

Package Contains:

- 1x Pair of TWS Earbuds
- 1x Charging Case
- 1x Type-C Charging Cable
- 1x User Manual
- 1x Warranty Card
- 1x Catalogue
- 1x FAQ Card

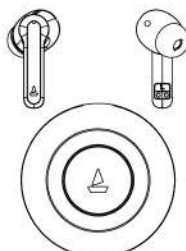

Power On (First Time User)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IWP™ (Insta Wake N' Pair) technology, the earbuds power on automatically, get connected and enter the connection mode.

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds
Step 2: After powering on, the earbuds enter the Connection Mode, indicated by alternate red and blue LED flashes on primary earbud and blue LED flashes once every 5 seconds on the secondary earbud

Connection Mode

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan
Step 4: Search for 'Airdopes Sonik' and pair accordingly. Congratulations! Your earbuds are now connected successfully via Bluetooth

Note:

- Pairing mode lasts for 5 minutes. If the pairing time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure.
- Airdopes Sonik remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices in working range.



Single Earbud Usage

 
Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud
Step 2: The selected earbud automatically enters the connection mode indicated by red and blue LED flashes
Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes Sonik' to connect

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You cannot skip tracks or return to the previous tracks in Mono (single-earbud) mode

Quick Guide on Functionalities

- 3 Seconds: Long touch either CTC for 3 sec to activate voice assistant
- 3 Seconds: Long touch both CTCs for 3 seconds to manually power on
- 5 Seconds: Long touch both CTCs for 5 seconds to manually power off
- 5 Seconds: Long press the case reset button for 10 seconds to perform factory reset
- 4 Taps: Tap 4 times on either CTC to switch EQ mode

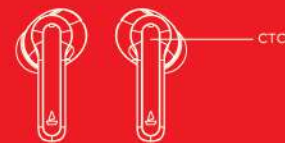

Charging the Earbuds

Step 1: Please insert the earbuds back inside the charging case in correct orientation and close the lid
Step 2: In charging status, the red LED turns on for 2 secs when case lid gets opened. LED stays off when the lid stays closed.
Step 3: Once the earbuds get fully charged, the charging case automatically switches off to save power, and the red LED stays turned off.

Note:

- Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.
- To indicate low earbud battery, red LED blinks thrice every few seconds.

Charging the Case

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

Remaining Case Battery LED Indications

| Scenario | Normal State | Charging State |
|-----------------------|--|---|
| Less than 30% battery | Red LED blinks (3 times) when the Case lid is opened | First shows as in normal state, then the red LED flashes slowly |
| 30%-70% battery | WHITE LED blinks (3 times) when the Case lid is opened | First shows as in normal state, then the white LED flashes slowly |
| 70%-99% battery | Green LED blinks (3 times) upon opening the case lid | First shows as in normal state, then the green LED flashes slowly |
| Case fully charged | LED in OFF state | Solid green LED |

Case LED indication when Earbuds are getting charged from the case

This is to indicate the earbud getting charged from the case (when case lid gets closed):

- CYAN for 5 seconds to indicate LEFT bud is charging from the Case
- PURPLE for 5 seconds to indicate RIGHT bud is charging from the Case
- If both are properly charged, BLUE for 5 seconds

Basic Functions

- Voice Assistant: Long touch either CTC for 3 seconds to activate default voice assistant
- Answer: Single tap the CTC on either earbud to answer an incoming call
- Hang Up / Reject Call: Double tap the CTC on either earbud to end / reject call

 
- Play/Pause Music: Single tap either earbud's CTC to play or pause music
- Next Track: When playing music, double tap the right earbud's CTC to skip to the next song
- Previous Track: When playing music, double tap the left earbud's CTC to return to the previous song
- Switch EQ Mode: Tap 4 times on either CTC to switch EQ mode

Note:

- Volume can only be controlled via the media device

Voice Assistant

Step 1: Long touch the CTC on either earbud for 3 seconds to activate the smart voice assistant
Step 2: The respective voice assistant screen pops up and you may place your commands at ease
Tips: You may try out the following commands,



Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.

 
ENx™ Mode

Our ENx™ tech algorithm cancels out the background noise so that you can hear crystal clear via voice calls. One need not activate ENx™ as the mics are equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space; literally anywhere!


Smart Power Off

Step 1: After usage, remove both the earbuds from your ears
Step 2: Place the earbuds back into the charging case in correct orientation and close the lid
 The earbuds automatically switch off (and enter charging mode).

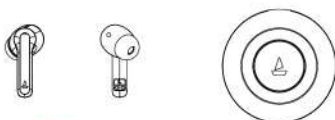

Manual Power Off

 Step 1: Long touch both CTCs for 5 seconds to manually power off the earbuds
Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

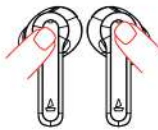

Factory Reset

Perform the factory reset in case you feel any difficulty while operating your Airdopes.
 *NOTE: Before performing reset, clear "Airdopes Sonik" from pairing device history by forgetting device
Step 1: Place the earbuds inside the Case.
Step 2: Long press the case reset button for 10 seconds; case LED flashes in green for 5 times whereas earbuds' LED flashes in blue and red for 3 times simultaneously.

Step 3: Close the lid, wait for 5 seconds.
Step 4: Take out the earbuds from the charging case and perform a fresh connection.
Note: To complete the factory reset, all of the above steps should be performed.

Congratulations! Your Airdopes Sonik has been Reset.

Specifications

| | |
|--------------------|--------------------------------------|
| Headphone Type | TWS |
| Bluetooth Version | V5.3 |
| Music Playtime | 8H earbuds; 52H case (at 60% volume) |
| ASAP™ Charge | Yes |
| Transmission Range | 10m |
| Standby | 150H |
| Driver Size | 11mm*2 |
| Microphone | 4 |
| Bluetooth Profiles | HFP/HSP/AVRCP/A2DP |
| Frequency | 20HZ-20KHZ |
| Battery | 490mAh (Case) 40mAh*2 (Earbuds) |
| Charging Time | 45Min (Earbuds); 2Hours (Case) |
| Charging Interface | USB Type C |
| Water Resistance | IPX4 |

Warning

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the earbuds' service life

