

Airdopes 431

Twin Wireless Ear-buds



Airdopes 431 Twin Wireless Ear-buds

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 431. Please consider this manual as your guiding map towards the shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

 
Voice Assistant

Step 1: Long Press the Multi Function Button on either earbud for 2 seconds to activate voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

Tips: You may try the following commands,

- What is the weather?
- Play a song
- Where are The Pyramids located?

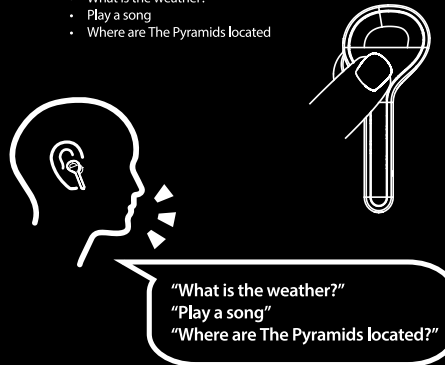

Smart Power Off

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation

Step 3: The earbuds will automatically switch off (and enter into charging mode)

Manual Power Off

Step 1: Long press the Multi Function Button on either earbud for 5 seconds until the LED flashes red, in order to manually switch off the earbuds. Please note that this powers off both the earbuds

Step 2: Place the earbuds back into the charging case in correct orientation

 


In the box

- 1x pair of Ear-Buds
- 1x Charging Case
- 2x Pairs of Additional Earmuffs (M & S)
- 1x Charging Cable
- User Manual

Product Overview

- MFB (Multi Function Button)
- Indicator Lights
- Charging Case Indicator
- USB Type-C Charging Port

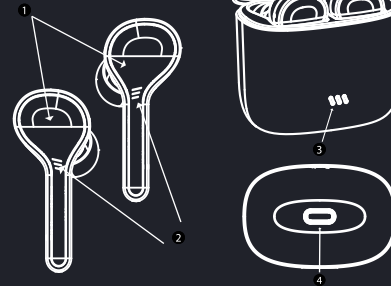


Factory Reset

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 431

Step 1: Take the earbuds out from the case and long press the MFB on both earbuds for up to 15 seconds. Blue LED flashes twice on both earbuds (ignore other LED indicators during these 15 seconds) to indicate factory reset.

Step 2: Keep the earbuds back inside the case in their correct orientation, the red LED turns solid which indicates charging

 Congratulations! Your Airdopes 431 has been Reset

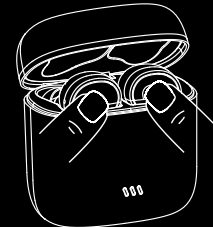

Power On (First Time User)

Step 1: To automatically switch the earbuds on (Smart Power On) simply take them out from the charging case

OR
To manually switch the earbuds on (Manual Power On), long press the Multi Function Button on both earbuds for 3 seconds until the LED starts to blink blue

Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode, indicated by alternating blue and red LED flashes

 
Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 431' and pair accordingly. Enter '0000' as the passkey if asked.

Congratulations! Your earbuds are now connected successfully via Bluetooth


Note: Airdopes 431 remembers previously connected devices; once switched on, the ear-buds automatically reconnect to the previously connected devices

MFB Stands for Multi Function Button.

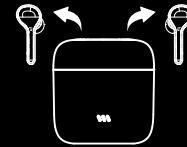

Common Problems with Solutions

 If only one earbud is functioning:

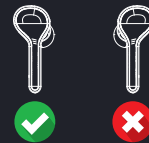

If only one earbud is functioning: Simply insert the earbuds back into the case and take them out or perform the Factory Reset

If earbuds are not in scan mode (No alternating blue and red LED flashes on the earbuds):



If Earbuds not in Scan mode (No alternating blue and red LED flashes on the earbuds) Simply put back both the earbuds in case and take out again or perform "Factory Reset".

Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use either of the two options; Smart Power On or Manual Power On for switching on the desired earbud

Step 2: The selected earbud will automatically enter the connection mode indicated by alternating blue and red LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 431' to connect

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.
- You cannot skip tracks or return to the previous tracks in Mono mode.



Troubleshooting


Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them gain or perform the Factory Reset

Specifications

Bluetooth Version	V5.0
Water Resistance	IPX4
Music Playtime	3.5 Hours
Talk Time	3.5 Hours
Standby Time	24 Hours
Transmission Range	10m
Driver Size	7mm
Bluetooth Profile	HSP, HFP, A2DP, AVRCP
Frequency	20Hz-20000Hz
Battery Earbuds	40mAh x2
Battery Charging Case	500mAh
Charging Time	1.5 Hours
Product Weight	60g

LED Indicators / Functionalities

 - 2 Seconds:** Long Press the Multi Function Button ("MFB") on either earbud for 2 seconds to activate the voice assistant / Reject incoming calls
- 3 Seconds:** Manual Power ON: Long Press the MFB for 3 seconds on both Left and Right earbuds for switching them on until the LED light begins to flash in blue
- 5 Seconds:** Manual Power OFF: Long Press the MFB on either earbud for 5 seconds until the Red indicator LED blinks before earbuds getting turned off
- 15 Seconds:** Factory Reset: Long press the MFB on both Earbuds for 15 seconds, the LED will flash blue twice on both earbuds to indicate successful factory reset.

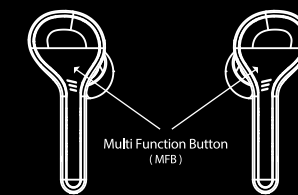

Warning

- Please follow the instructions to operate
- Please charge the ear-buds according to the charging norms mentioned on the packaging & manual
- Please don't use the ear-buds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switch on at first. This can be done by using the volume control on the phone/ media device.

Charging norms & Precautionary Guidelines:	
1) Charger/Brick/Adaptor	: 5V/2A
1) Cable/Wire	: Standard Cable (35 Strands @0.10mm diameter/strand)
Any other accessory can be paired up with the product as long as the specifications are as per above norms.	

 
Charging The Case

Step 1: To charge the case, plug one end of the charging cable into the case and the other end into a USB port

Step 2: Orange LED lights indicate that the charging case is being charged. Once the charging case gets fully charged, the LEDs will turn green.

Note: The LED lights located on the charging case indicate the battery status of the case.

- When the battery of the case is between 25%-100%, the green LED turns on to indicate the same
- When the battery of the case remains between 0%-25%, the red LED flashes twice every second to indicate the same

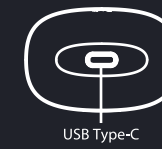

Charging The Earbuds

 
Step 1: Please insert the earbuds back inside the charging case in correct orientation.

Step 2: A Red LED will indicate that the earbuds are being charged. Once fully charged the LED turns off

Step 3: Once the earbuds are fully charged, the charging case automatically switches off to save power.

Note:

- Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging and use a 5V/2A adaptor
- When the earbuds are in low power, flashing red LED indicates the same

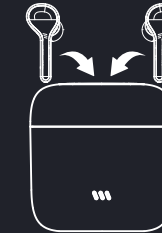

Caution

1. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for the steering of this boAt. Therefore, we strongly advise that this manual is thoroughly read before beginning use, and referred to when in times of difficulty.
2. Please do not let the earbuds come into contact with sharp edges, uneven surfaces, and metal parts, in a manner that can lead to some form of permanent external or internal damage.
3. Please don't dismantle the product in any way, it can lead to a fire or electrical breakdown and even completely damage the product. As this is extremely unsafe, we ask that any maintenance or servicing of the headphones is done only through a qualified service provider/manufacturer.
4. Please do not remove the battery by yourself; this is a task meant to be managed by a service provider/manufacturer. Replacing the current battery with an ill-fitting set can result in a fire or electric hazard, therefore it is strongly advised against.
5. Please clean the earbuds with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the Headsets are kept away from extremely hot or cold substances.
6. To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are plugging into Nirvana. After wearing the earbuds, gradually turn up the volume until you reach a comfortable listening level. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing. Therefore, listening sessions that are at higher volumes should not be for too long. If you are planning to use the earbuds for extended periods of time, it is safer to keep the volume at a low level.
7. Any damage to the earbuds that is NOT a manufacturing issue will make the products warranty null and void. Please take the greatest care of your headphones to ensure that no such occurrences take place.
8. Do not use earbuds when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required. This is because it is dangerous to drive while wearing headphones as it decreases your ability to hear sounds like another car's horn or an emergency vehicle's sirens. Therefore, please avoid wearing your Headsets while driving.

Advisable: The earbuds will start at a 100% volume, and may need to be reduced when first switched on. This can be done using the volume control on your bluetooth

Basic Functions

- Voice Assistant: Long Press the Multi Function Button on either earbud for 2 seconds to activate voice assistant
- Answer/Hang Up Call: Single Press the Multi Function Button on either earbud to answer an incoming call and once again to hang up an ongoing call
- Reject Call: Long Press the Multi Function Button on either earbud for 2 seconds in order to reject an incoming call
- Play/Pause Music: Single Press the Multi Function Button on either earbud to play a song or to pause one
- Next Track: When playing music, double Press the right earbud's Multi Function Button in order to skip to the next song on the playlist
- Previous Track: When playing music, double Press the left earbud's Multi Function Button in order to return to the previous song the playlist

Note: Volume cannot be controlled via earbuds and can only be adjusted via phone/media device

