

# **MISFIT GROOM 100 5 IN 1**

## **PRODUCT OVERVIEW**











- C at a dry plug with dry hands.

  2. Before charging, please ensure that the switch is not on. Do not charge in the sunlight.

  3. The indicator will show when charging

- Turn the head counter clockwise to unlock the head. Pull the head to remove it.
   Put the head on the body and turn the head clockwise to lock. The trimmer is now ready to be used with a new head.

- Body Hair Trimmer:

  1. Install the body hair blade.

  2. Trim hair on chest, arms or legs as required.

  Hair Clipper/Beard Trimmer: (T blade, U blade)

  1. Press the button, let the trimmer forward to a certain angle, moving close to the hair.

  2. Adjust the guide comb up and down, you can control the cutting length.

- Nose/Ear Hair Trimmer: 1. Install the Nose/Ear hair trimmer head. 2. Trim nose hair, ear hair to style yourself.

- Precision blade:
  1. Install the precise styling blade.
  2. Trim hair, beard, body hair to style yourself.

 
- Clean the Trimmer:

  1). Figure A, head pressing force along the direction of the arrow to remove the central head, you can clean it.
- 2). Figure B, press 1 to insert a plastic tank, the second alignment metal parts, according to the pressure head center, can be installed along the direction of the arrow tip.

  3). Figure C, press the comb along the direction of the arrow.







- 1. This product cannot be washed and should be placed in a dry/ well-ventilated place. 2. This product is for adults and should be kept away from children