

MISFIT GROOM 100

PRODUCT OVERVIEW





- C at a dry plug with dry hands.

 2. Before charging, please ensure that the switch is not on. Do not charge in the sunlight.

 3. The indicator will show when charging.

- 1. Press the button, let the trimmer forward to a certain angle, moving close to the hair.
 2. Adjust the guide comb up and down, you can control the cutting length.
 Clean the Trimmer:
 1). Figure A, head pressing force along the direction of the arrow to remove the central

- pressure head center, can be installed along the direction of the arrow tip.
 3). Figure C, press the comb along the direction of the arrow







- 1. This product cannot be washed and should be placed in a dry/ well-ventilated place. 2. This product is for adults and should be kept away from children.