



Beard Trimmer
Model Name: GROOM 300
User's Manual

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed to reduce the risk of electric shock, personal injury or fire. It is important to read all these instructions carefully before using the product and save them for future reference or new users.



- WARNING: Keep the appliance dry.
- WARNING: Do not use the device near bathtubs, showers, buckets or other containers that contain water, since the proximity of the water can be dangerous even if it is not working.
- The device should only be used with the power supply supplied with the device.
- The device should only be supplied with the safety voltage corresponding to the brand of the device.
- This device cannot be used by children, people with reduced physical, sensory or mental abilities, or if they lack the experience and knowledge to use the device safely and do not understand the dangers that entail. Children should not play with the device. Cleaning and user maintenance should not be performed by children without supervision.
- Keep the device and the cable out of reach of children.

- This appliance is not washable. Never immerse the appliance in water, or rinse it under the tap.
- Always check the device before using it. Do not use the appliance, the adapter or any other part if it is damaged, as it could cause injury.
- Always replace a damaged cable or part with one of the original type.
- Use this device only for its intended use, as shown in the user manual.
- Never use compressed air, scourers, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the appliance.
- The device is designed for domestic use only, do not use it for other purposes.
- Periodically check the cable to see if it is damaged. If the power cord is damaged, it must be replaced by the manufacturer, after sales service or similar qualified personnel to avoid a hazard. A damaged or non functioning unit should no longer be used.
- If the appliance has fallen into the shaving system, replace it for safety reasons.
- Before plugging, check if the voltage corresponds to the local network voltage supply.
- For reasons of hygiene, do not share your device with other people.
- This device is intended only to cut human beard. Do not use it for any other purpose.
- Do not use this product if it is not working properly, if it has been dropped or damaged, or if it has fallen into water. Do not use this appliance with a damaged or broken comb or with missing teeth of the blades, as this could cause injury.

- Do not leave the appliance unattended when it is plugged into an outlet.
- Keep the appliance, the plug and the power cord away from hot surfaces.
- Never immerse the appliance in water or other liquid, or rinse it under the tap.
- Do not disassemble the unit, as they can cause serious injury.
- Use the appliance only for domestic purposes and domestic or similar applications, such as:
 - staff kitchen areas, in stores, offices and other work environments;
 - rural houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Never leave the appliance unsupervised when in use.
- Do not plug or unplug the appliance with wet hands.
- * The appliance must be turned off while the clip comb attachment is being placed or removed.
- Use only the power cable supplied with the device or a cable with identical technical characteristics. Otherwise, it may damage the device.
- Do not modify, disassemble or repair this product yourself, as it could result in fire, electric shock or injury. Take it to a repair center.
- Do not clean the body of the beard trimmer or the power cable with water or expose it, as it may create a risk of electric shock or short circuit.
- The power cable must be disconnected from the power outlet before performing any maintenance. Otherwise, there will be a risk of electric shock.

- The device includes a rechargeable battery. Do not disassemble, expose to flame action or short circuit.
- Do not use the appliance if the guide comb is damaged.
- The cutting head is very sharp. Be careful when using the appliance without the guide comb.
- Attention! Risk of injury: NEVER USE THE APPLIANCE IF IT IS DAMAGED.
- Use only the original accessories. Do not attempt to sharpen the cutting head yourself.
- Do not expose the hair clipper machine to temperatures below -10 ° C or above 40 ° C for extended periods of time.

PRODUCT PARTS:

1. Position comb
2. Blade
3. Body
4. Regulator
5. ON/OFF Switch
6. Charge indicator
7. Power port
8. Cleaning brush
9. Power cord
10. Blade oil
11. Extra guide comb



CHARGING THE RECHARGEABLE BATTERY

- Before first use, the hair trimmer must be fully charged.
1. Slide the On/Off switch.
 2. Insert the connector of the mains cable into the power jack of the hair trimmer.
 3. Plug the mains cable into a mains socket.
 4. The indicator light will come on to indicate charging. It will not go out when the battery is fully charged.
 5. 120 minutes continuous operation when fully recharged.

NOTES ABOUT THE RECHARGEABLE BATTERY

The rechargeable battery does not initially have a full capacity. To obtain the maximum charge capacity, the battery should be fully charged prior to being used for the first time, then the hair trimmer should be used until the batteries are completely flat. The batteries should then be fully recharged. To increase the life of the rechargeable batteries, this charging and discharging procedure should be repeated approximately twice a year.

The rechargeable battery must be removed from the appliance before it is scrapped.

The appliance must be disconnected from the mains when removing the battery. The rechargeable battery must be disposed off safely.

HOW TO USE

1. The beard must be clean and dry when being cut.
2. Only cut small amounts of hair at one time.
3. There are 20 gear adjustments with 0.5 mm fine regulation.
4. Slide the cutting head with a slight tilt over your skin without applying pressure.
5. Cut the beard in progressively until you reach the desired length.
6. The cutting head will jam if you try to work too quickly or try to cut too much beard at one time.
7. Let the appliance run for a short time before starting to cut.
8. Using the cutting head without its attachment, you can finely trim the beard.

OILING THE TRIMMER HEAD

1. Oil the trimmer head from time to time if you use the trimmer regularly. Use non-corrosive oil, for example sewing machine oil.
2. Remove the comb attachment.
3. Apply one or two drops of oil between the cutting teeth.

4. Turn the trimmer briefly on and then off again to distribute the oil.
5. Remove any excess oil by wiping with a cloth.

CLEANING AND MAINTENANCE

1. Disconnect the power cord from the trimmer.
 2. Remove the comb attachment.
 3. Hold the main body, place your thumb against the blades and then push them away from the main body.
 4. With a damp cloth clean the main body of the beard trimmer.
 5. Brushing the rest of beard from the main body of the device and around the blade.
- Store the trimmer in a place with low humidity after use.
 - Do not store the trimmer where it will be exposed to direct sunlight or other heat sources.
 - Store the cable in a dry area where it is protected from damage.
 - Keep the oil and brush away from children.

DISPOSING OF THE BATTERY

The battery used in this device contains material that will pollute the environment.

If you need to dispose, please dismantle the battery and turn it in government designated collection places.

Before dismantling the battery, you must be sure to turn off the power of appliance without remaining electricity. If there is remaining electricity, turn on the shaver until the motor stops.

You can dismantle the battery out: Loosen rear cover with screwdriver and dismantle the battery with electricity off for sure.

CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that, throughout the EU, this product should not be disposed off with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly in accordance with the sustainable reuse of material resources. To return your device at the end of its useful life, please use the return and collection system provided or contact the retailer where the product was purchased. They will be able take the product for environmentally safe recycling.

