



boAt

NIRVANA EUUTOPIA

Thank you for choosing the boAt Nirvana Eutopia. This manual is meant to guide you through to the shores of musical serenity without much difficulty. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for steering this boat. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty.

NIRVANA EUUTOPIA

PACKAGE CONTENTS

- 1 x boAt Nirvana Eutopia
- 1 x USB Type-C charging cable
- 1 x Manual
- 1 x Warranty card
- 1 x Catalogue



PRODUCT OVERVIEW



FUNCTIONS

Power On: Press and hold the HFP (Multi-function Button) for 2 seconds. The blue and red LEDs flash alternately accompanied by a voice prompt. Power Off: Press and hold the HFP for 4 seconds. Red LED blinks once to indicate the device getting switched off.

BLUETOOTH CONNECTIVITY

1. Turn on the Bluetooth functionality on your phone and switch on Nirvana Eutopia by long pressing the HFP for 2 seconds.
2. Then, click on the headphones 'Nirvana Eutopia' from the list of available devices after search.
3. If asked for a passkey, confirm the passkey '0000' on phone.
4. Once confirmed, the headphones and phone get connected via Bluetooth indicated by newly flashing blue LED.

Note: If there's a connection history between the phone and the headphones, then they will automatically get reconnected in a waking range whenever the headphone gets switched on.



BASIC FUNCTIONALITIES

Play	Short press the MFB once to play
Pause	Short press the MFB twice to pause
Volume Up	Press the Vol + button in steps to increase volume
Volume Down	Press the Vol - button in steps to decrease volume
Next Track	Press and hold the Vol + button for 1 second to skip to next track
Previous Track	Press and hold the Vol - button for 1 second to return to previous track
Answer Incoming Calls	Short press the MFB once
Hang Up Ongoing Calls	Short press the MFB twice
Reject Calls	Double press the MFB
Mic Mute / Unmute	Short press the Mic Mute button to mute/unmute
Voice Assistant/Siri	Double press the MFB
BEAST™ Mode for Gaming	Long press the mic mute button for 2 seconds to activate BEAST Mode for low latency gameplay
Music Mode	Long press the mic mute button for 2 seconds to activate music mode from BEAST mode

3D HEAD-TRACKED SPATIAL USER INTERFACE

VOICE PROMPTS	MODE DESCRIPTION	FUNCTION
HEAD-TRACKED SPATIAL	Automated 3D-Headtracking Mode	Long press the 3D button for 2 seconds to activate the automatic "head tracked spatial"
FIXED SPATIAL	Manual 3D-Headtracking Mode	Long press the 3D button for 2 seconds to activate the manual "Fixed Spatial"
SIGNATURE SOUND	Draives Signature CD, Draives 3D-Headtrack Sound	Long press the 3D button for 2 seconds to activate "boAt Signature Sound"
RE-CENTERING	In 3D-headtracking modes, upon clicking, the headset re-centers back to position.	Short press the 3D button to re-center back to stereo position.

NOTE
 • By default, the 3D & Head Tracking mode steps on
 • If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.



Scan & download the boAt Hearables app for a quick calibration & to access more features supported on Nirvana eutopia.



Scan to access boAt's YouTube channel for an in-depth product walkthrough for Nirvana eutopia. Simply look up for "Nirvana Eutopia Walkthrough Video".

CHARGING

- Connect one end of the provided cable to the USB Type C port on the headset and the other end to a wall adapter or laptop.
- While charging the indicator LED turns into steady red.
- When the headphone is fully charged, the indicator switches off.
- Use only authorized/company chargers for the headset, as unauthorized ones may damage the same and invalidate the warranty on the headset as well.
- The headphones should not be utilized for listening purposes while it is in charging mode.
- Note: When the headphones are in low power state, then that gets indicated by flashing red LED.

ENX™ TECH

Our ENX™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENX™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work spaces, Noway anywhere!

RESET

When the headphone is in the 'ON' state, press and hold the MFB and Vol - buttons simultaneously for 4 seconds.
 Note: Vol - button should be pressed slightly earlier.

OTHER FUNCTIONS

- If there's no connection established when the Bluetooth is switched on, then the device powers off automatically after a while.
- If you receive an incoming call during playing music, the music automatically disconnects. When the call is done and disconnected, the music starts to play automatically from where it left.

ANOMALIES & SOLUTIONS

- A. Mobile can't search the headset**
- Check if the Bluetooth headset is powered on or off (When powered on, the LEDs show with red and blue colours alternatively).
 - If it is powered on and the device still can't connect, then please reboot the Bluetooth device and the phone.
- B. After connecting the headset with the phone, disconnection or noise occurs**
- This may be due to the low power of the headset. Please charge the Bluetooth headset.
 - There might be obstruction between the headset and the phone or the distance between them exceeds the maximum range for signal reception.
- C. If the Voice Assistant support doesn't respond**
- If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device's settings.

SAFETY CAUTIONS

- This is not a toy. The children are advised to use this under adult supervision.
- Avoid exposing the device to extremely hot or cold temperatures.
- Avoid using the headphones for listening to full volumes to protect from hearing damage.
- Please do not use the device under thunder storms.
- Don't dismantle the product in any way.
- Please don't clean the product using oily volatile liquid.

Charging Norms & Guidelines :
 Charger/Adapter at 5V 2A and Standard Cable (35 strands @0.10mm diameter/1meter).

SPECIFICATIONS

Headphone Type	Bluetooth Headphones
Driver Size	40mm*2
HD Sound	Yes
Frequency Range	20HZ-20KHZ
SNR	≥90dB
Bluetooth Version	V5.2
Bluetooth Profile	A2DP, AVRCP, HFP
Bluetooth Range	15m
Battery Capacity	600mAh
Playing Time	Normal Mode : Up to 20HRS (at 60% volume) 3D/Spatial mode : Up to 15HRS (at 60% volume)
Charging Time	60min-80min
Standby Time	150 hours
Charge Interface	USB Type C
Charging Voltage	5V 2A
ASAP™ Charge	Yes
BEAST™ Mode	Yes (65ms)
ENX™ Tech	Yes