


ROCKERZ 255 ANC

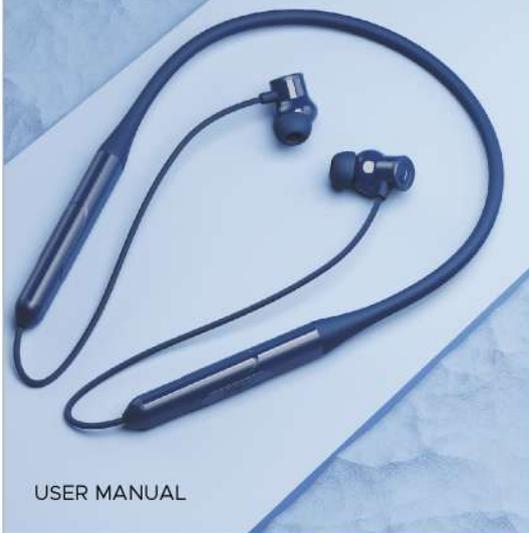

USER MANUAL

ROCKERZ 255 ANC

Thank you for choosing boAt Rockerz 255 ANC. This manual is meant to guide you through to the shores of audio bliss without difficulty. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for steering this boAt. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty.




PACKAGE CONTAINS:

- 1 x boAt Rockerz 255 ANC
- 1 x USB Type C charging cable
- 2x Additional Earmuffs
- 1 x Hearables APP QR card
- 1 x User Manual
- 1 x Warranty Card
- 1 x Catalogue

PRODUCT OVERVIEW

- 1) ANC Button
- 2) Volume+
- 3) Multifunction Button
- 4) Volume-
- 5) LED

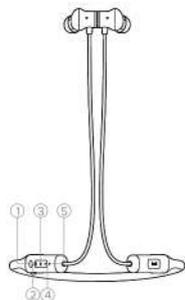

BLUETOOTH PAIRING

Step 1: When switched off separate the left and right magnetic buds. The earphones switch on and enter pairing mode automatically indicated by alternate red and blue LED flashes.

Step 2: Open Bluetooth on your media device. Select "Rockerz 255 ANC" from the list of available devices. If asked for a passcode, enter the pairing code as "0000" to establish Bluetooth connectivity.

Step 3: Once connected, solid Blue LED flashes for 3 seconds to show successful pairing.


Note:

- Pairing duration lasts for 5 minutes after which the neckband powers off.
- Pairing procedure is a one-time action.



FUNCTIONALITIES

- Volume Control:**
 - Press and hold (-) 2 seconds to return to the previous track.
 - press once: Decrease volume.
 - Press and hold (+) 2 seconds to skip to the next track.
 - press once: Increase volume.
- Multifunction Button:**
 - press once: Answer/end calls, Play/pause audio.
 - press twice: Reject calls.
 - press thrice: Activate Voice Assistant.
- ANC Button:**
 - press once: To switch between Ambient/ANC/Normal modes.
 - press twice: To switch between Spatial Audio & boAt Signature Sound.
- Reset Device:**
 - In pairing mode, Press & hold ANC and Volume down (-) button simultaneously for 5 seconds to clear the list of paired device.
 - The purple LED flashes for 1 second to indicate the same.

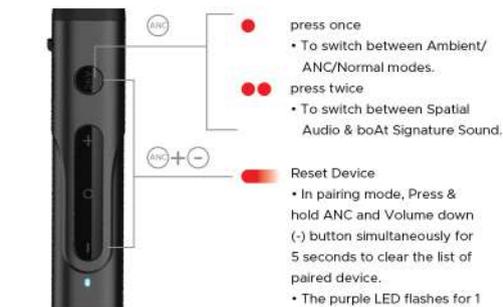

Note:

- The earphones may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the neckband.


MAGNETIC POWER ON/OFF

POWER ON

When switched off, separate the left and right magnetic buds from each other to switch on the earphones. The blue LED flashes for 1 second to indicate this.

POWER OFF

In switched on state, connect the left and right magnetic buds with each other to turn the earphones off. The red LED blinks once to indicate power off.

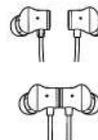

CONNECTING ROCKERZ 255 ANC SIMULTANEOUSLY WITH 2 DEVICES

Step 1: Pair Rockerz 255 ANC neckband earphones with your first media device via Bluetooth.

Step 2: Turn off both the earphones and the Bluetooth on this device.

Step 3: Switch on the earphones and the Bluetooth on your second media device to pair.

Step 4: Finally, switch on the Bluetooth of the first media device again. Congratulations! Your earphones are now connected to both the devices successfully.

Note:

- If the earphones are not connected, try connecting the first device manually once again to activate dual pairing.

BEAST™ MODE

Press the MFB for 2 seconds to switch between low latency BEAST™ Mode & Music Mode. A voice prompt will indicate both the activation and de-activation of BEAST™ Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

AI ENx™ - ARTIFICIAL INTELLIGENCE ENx™ TECHNOLOGY

Our AI-powered ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear on voice calls. You don't have to activate AI ENx™ as the 3 mics are equipped with the same and activated by default. The AI is trained in all possible atmospheres - Office, Home, Traffic, Railway stations & airports to get the best call quality.

Deliver your voice without interruptions wherever you are - workspace, airports, railway stations, roads; literally everywhere!

ANC MODE/AMBIENT MODE/NORMAL (MUSIC) MODE:

- Single press the ANC button to activate Ambient Mode.
- Single press the ANC button once again to switch to ANC mode.
- Single press the ANC button once again in order to switch to Normal mode (Music Mode).

Note:

- By default, before using the neckband for the very first time it stays in Normal mode.
- The operational cycle is Normal mode -> Ambient Mode -> ANC Mode

DUAL EQ MODES

- Double press the ANC button to switch on Spatial Mode. A voice prompt indicates the same.
- Double press the ANC button once again to turn off Spatial mode and switch to boAt Signature Sound Mode. This is indicated by a voice prompt.

VOICE ASSISTANT ACTIVATION

Step 1: Press the MFB 3 times to activate the Voice Assistant on your device

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

Tips: You may try out the following commands,

What is the weather?
Play a song
Set a reminder



Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.

SPECIFICATIONS

Bluetooth Version	v5.3
ANC	32 dB
ENx™ Tech	Yes; AI ENx™
No. of mics	3
BEAST™ Mode	Yes; 60 ms low latency
ASAP™ Charge	Yes; 10 min = 24 hrs
Operating Range	10 m
Frequency	20 Hz-20000 Hz
Driver Size	13 mm ²
Battery	360 mAh
Talk Time	Up to 40 hours
Music Playtime	100 hours (without ANC); 70 hours (with ANC) (At 60% volume)
Bluetooth Profiles	RF.5.2/ BB.5.2/ LL.5.2/ LMP.5.2/ RFPHY.5.2/ SDP.5.2/ L2CAP.5.2/ A2DP.1.2/ AVCTP.1.4.1/ AVDTP.1.3/ AVRCP.1.6/ GAVDP.1.3.1/ HFP.1.7/ HID.1.0.14/ IOPT.4.0.1/ RFCOMM.1.2.2/ SPP.1.2
Charging Time	About 50 mins
Charging Interface	USB Type-C
Water Resistance	IPX4

CHARGING GUIDELINES

To charge-

Plug one end of the provided USB Type-C cable into the earphones and connect the other end to either a laptop or an adapter.

Low Battery (Less than 20%)	Red LED flashes quickly every 30 seconds with a tone prompt
Charging	Red LED remains solid ON
Fully Charged	Red LED turns OFF

Note:

- Before using the earphones for the first time, it is recommended to fully charge them.
- Please note that the earphones cannot be used / switched on while charging.

CHARGING NORMS & PRECAUTIONARY GUIDELINES: -

- 1) Charger/Brick/Adapter : 5V/2A
 - 2) Cable/Wire: Standard Cable (35 strands @0.10mm diameter/ strand)
- Any other accessory can be paired up with the product as long as the specifications are as per above norms.

SAFETY PRECAUTIONS

- Please do not dismantle the product as it can lead to a fire or electrical breakdown and completely damage the product. Maintenance or servicing of the earphones must be done only through a qualified service provider/manufacturer.
- Please do not use any oily/volatile liquid to clean the earphones.
- Please do not use the earphones in extremely hot or cold temperatures.
- Any damage to the earphones that is NOT a manufacturing issue will make the product's warranty null and void.
- Do not use the earphones when it is unsafe to wear them, such as while driving, crossing the street, or any other activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your media device is at an appropriate level as continuous exposure to noise levels at or above 85 dB can gradually lead to a loss of hearing.

