

Thank you for choosing boAt Rockerz 375. This manual is meant to guide you through the functionality of the wireless earphone neckband. Knowledge of Bluetooth and device connection is essential for the usage of the headset. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty, so that you can always be easily guided towards the shores of musical bliss.



Package contents

- 1 x Rockerz 375
- 1 x USB Type C charging cable
- 2 x Pairs of additional earmuffs (Small & Large)
- 1 x Manual 1x Warranty Card 1 x Catalogue

To Pair with Bluetooth

- (1) When switched off, press and hold the MFB ("Multifunction Button) for 3 seconds to switch on the wireless earphones and put them into pairing mode. The earphones automatically enter pairing mode with a voice prompt 'pairing', the blue and red LEDs flash alternatively to indicate the same.
- (2) Open Bluetooth functionality on your media device and search for "Rockerz 375" from the list of available devices.
- (3) Choose "Rockerz 375" from the list and if asked for a passcode, enter the pairing code "0000" to establish Bluetooth connectivity.
- (4) Once successfully connected, the blue LED flashes every 10 seconds to indicate the same

Note: The wireless neckband automatically turns off if there is no pairing established in 5



Bluetooth
Bluetooth on
Device
Rockerz 375

Functions

- (1) Power on: When switched off, press and hold the MFB for 3 seconds. The voice prompt "Power On" confirms the same. The blue LED flashes once to indicate the same.
- (2) Power off: In powered on state, press and hold the MFB for 5 seconds. The voice prompt "Power off" confirms the same. The red LED flashes once before the device gets turned off.
- (3) Play/Pause: Single tap the MFB to play/pause music at your convenience.
- (4) Volume Up: Tap the Volume Up button in steps to increase the volume. The voice prompt "Volume Max" indicates maximum volume.
- (5) Volume Down: Tap the Volume Down button in steps to decrease the volume.
- (6) Answer/End call: Tap the MFB once when answering or ending a call to complete the action.
- (7) Reject call: Press and hold the MFB for 2 seconds during an incoming call to reject the call.
- (8) Redial: To redial the previous contacted phone number, triple tap
- (9) Previous Track: To go back to the previous track or start the track from beginning, press and hold the Volume Down button for 2
- (10)Next Track: To skip to the next track, press and hold the Volume Up button for 2seconds.

- (11) Reset Device (Clear Paired List): Press and hold the Volume Up and Volume Down buttons simultaneously for 5 seconds to clear the list of paired devices. The red and blue LEDs flash quickly for 2 seconds to indicate the same.
- (12) BEAST Mode: Single tap the BEAST Quick Switch button to switch to Low Latency mode infused with Virtual 3D Sound, also known as the BEAST Mode. Once switched on, it gets notified via the prompt "BEAST Mode."

Made for the Gamers - By Gamers, BEAST Mode reduces the latency significantly and improves the overall gaming experience.

With BEAST mode, the wireless earphones activate 3D audio mode especially made for gaming.

(13) Signature Sound Mode: To switch to Signature Sound mode (Standard mode), deactivate the BEAST Mode by single tapping the Quick Switch button. You can switch between the two modes via the Quick Switch button.



(14) Voice Assistant: Single tap and then quickly long press the MFB for 2 seconds to wake up smart voice assistant.

To Charge

Use a USB Type C charging cable to charge the earphone through either a laptop or an adaptor.

- (1) Low Battery: When the remaining battery is below 20%, there is a 'Battery Low' prompt every 5 minutes and red LED quickly flashes 3 times every few seconds to indicate the same.
- (2) Charging: Solid red LED indicates that the earphone is being charged (please note that the earphone cannot / should not be turned on while charging).
- (3) Fully charged: Solid blue LED indicates the same.



Specifications

Bluetooth Version	V5.1
Operating Range	10m
Frequency	20Hz~20kHz
Driver Size	10mm*2
Battery	200mAh
Talk time	Up to 20 hours
Music time	Up to 20 hours
Bluetooth Profile	HFP/HSP/A2DP/AVRCP
Standby time	4.5 years
Charging Time	30 Min
Charge Interface	Туре С
Driver Impedance	16Ω
BEAST Mode (Low Latency + Virtual 3D)	Yes
Product Weight	29g

Safety Cautions

- Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufactures.
- Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.
- Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.
- Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earphone. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

Charging norms & Precautionary Guidelines: -	
1) Charger/Brick/Adapter 2) Cable/Wire	: 5V 2A : Standard Cable (25 strands @0.06mm diameter/ strand)
Any other accessory can be long as the specifications a	paired up with the product as re as per above norms.