

# ROCKERZ BLISS



boAt

## ROCKERZ BLISS

Thank you for choosing boAt Rockerz Bliss. This manual is meant to guide you through the functionality of the wireless earphone neckband. Knowledge of Bluetooth and device connection is essential for the usage of the headset. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty, so that you can always be easily guided towards the shores of musical bliss.




USER MANUAL

### PACKAGE CONTENTS

- 1 x Rockerz Bliss
- 1 x USB Type C charging cable
- 3 x Pairs of additional earmuffs (Small & Large)
- 1 x Manual
- 1 x Catalogue
- 1 x Warranty Card

### PRODUCT OVERVIEW

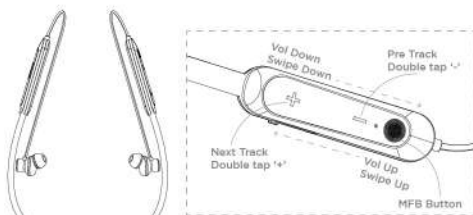

### TO PAIR WITH BLUETOOTH

(1) When switched off, press and hold the MFB (Multifunction Button) for 3 seconds to switch on the wireless earphones and put them into pairing mode. The earphones automatically enter pairing mode with a voice prompt, the blue & red LEDs flash alternatively to indicate the same.

(2) Open Bluetooth functionality on your media device and search for "Rockerz Bliss" from the list of available devices.

(3) Choose "Rockerz Bliss" from the list and if asked for a passcode, enter the pairing code "0000" to establish Bluetooth connectivity.

(4) Once successfully connected, The blue LED flashes once every 10 seconds to indicate the same.

*Note: The wireless neckband automatically turns off if there is no pairing established in 5 minutes.*



Front

### SPECIFICATIONS

Power On	Press and hold the MFB for 3 seconds.
Power Off	Press and hold the MFB for 5 seconds.
Play	Short press the MFB once to play.
Pause	Short press the MFB once to pause.
Volume Up	Swipe up from '-' to top portion of Touch-Swipe Sensor.
Volume Down	Swipe down from '+' to bottom portion of Touch-Swipe Sensor.
Answer/End call	Short press the MFB once.
Reject call	Double press the MFB
Previous Track	Double tap the bottom portion (-) of the swipe.
Next Track	Double tap the top portion (+) of the swipe.
Reset Device (Clear Paired List)	Long press MFB & bottom portion of portion of Swipe (5 sec) simultaneously. Red and blue LED stays for 2 sec to indicate the same
BEAST™ Mode	Long press mfb for 3 seconds to activate BEAST™ mode for low latency
Voice Assistant	Triple press MFB. <i>Note: If the voice assistant doesn't get triggered then the functionality has to be first enabled by your media device.</i>
Spatial Bionic Sound (Powered by Dirac Virtuio)	Double press MFB to turn on/off Spatial Bionic Sound. Long tone confirms Spatial Bionic Sound on and short tone confirms Spatial Bionic Sound off

### BEAST™ MODE

Long press MFB for 3 seconds to activate BEAST™ Mode for low latency.  
*Made for the Gamers - By Gamers. BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.*

### ENx™ TECH

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.  
*Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!*

### SPATIAL BIONIC SOUND (POWERED BY DIRAC VIRTUO)

Dirac Virtuio provides Spatial Audio sound, which has been created to turn any audio content into an immersive listening experience for the user. With a more accurate soundstage and superior sound quality, the combination of Rockerz Bliss with Dirac Virtuio allows users to enjoy a more balanced sound as well as expanded soundscape.  
To enter into the Spatial mode, simply double press MFB. To switch off Spatial sound, double press the MFB once again.

### TO CHARGE

Use the provided USB Type C charging cable to charge the earphones through either laptop / adaptor/ powerbank.

- Low Battery: When the remaining battery is below 20%, there is a 'Battery Low' prompt every few minutes and red LED quickly flashes every few seconds to indicate the same.
- Charging: Solid red LED indicates that the earphone is being charged (please note that the earphone cannot / should not be turned on while charging).
- Fully charged: Red LED turns off to indicate the same.

### SPECIFICATIONS

Bluetooth Version	V5.3
Operating Range	10m
Frequency	20Hz-20kHz
Driver Size	12mm*2 Drivers
Battery	220mAh
Talk time	Up to 30 hours
Music time	Up to 30 hours (at 60% vol)
Bluetooth Profile	A2DP,AVRCP,HFP,HID,AVCTP,AVDTP,SPP
Charging Time	About 50 min
Charge Interface	USB Type C
BEAST™ Mode	Yes
Low Latency	40ms
ASAP Charge	Yes
Water Resistance	IPX4

### SAFETY CAUTIONS

• Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturer.

• Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.  
• Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.

• Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.

• To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earphone. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

### CHARGING NORMS & PRECAUTIONARY GUIDELINES: -

- Charger/Brick/Adapter : 5V/2A
  - Cable/Wire: Standard Cable (35 strands @0.10mm diameter/ strand)
- Any other accessory can be paired up with the product as long as the specifications are as per above norms.

Back