

ROCKERZ 255 TOUCH



boAt

ROCKERZ 255 TOUCH

Thank you for choosing boAt Rockerz 255 Touch. This manual is meant to guide you through the functionality of the wireless earphone neckband. Knowledge of Bluetooth and device connection is essential for the usage of the headset. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty, so that you can always be easily guided towards the shores of musical bliss.


USER MANUAL



PACKAGE CONTENTS

- 1 x Rockerz 255 Touch
- 1 x USB Type C charging cable
- 2 x Pairs of additional earmuffs (Small & Large)
- 1 x Manual
- 1 x Catalogue
- 1 x Warranty Card

PRODUCT OVERVIEW

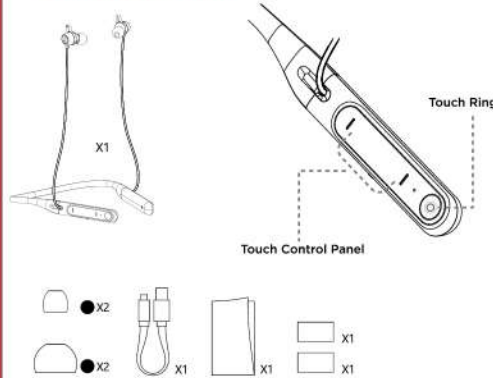

TO PAIR WITH BLUETOOTH

(1) When switched off, separate both left and right earbuds from each other. The earphones automatically enter pairing mode with a voice prompt, the blue and red LEDs flashes alternatively to indicate the same.

(2) Open Bluetooth functionality on your media device and search for "Rockerz 255 Touch" from the list of available devices.

(3) Choose "Rockerz 255 Touch" from the list and if asked for a passcode, enter the pairing code "0000" to establish Bluetooth connectivity.

(4) Once successfully connected, The blue LED solid on for 3 seconds.

Note: The wireless neckband automatically turns off if there is no pairing established in 5 minutes.



Front

FUNCTIONALITIES

- (1) Power-On: When switched off, separate both the earbuds from each other.
- (2) Power Off: In powered on state, unite both the earbuds to turn them off.
- (3) Play/Pause: Double tap the touch Control panel to play/pause music at your convenience.
- (4) Volume Up: Swipe up on the touch Control panel
- (5) Volume Down: Swipe down on the touch Control panel
- (6) Answer/End call: Double tap the touch Control panel when answering or ending a call to complete the action.
- (7) Reject call: Long touch the touch Control panel for 2 seconds during an incoming call to reject the call.
- (8) Next Track: Swipe forwards on the touch Control panel
- (9) Previous Track: Swipe backwards on the touch Control panel
- (10) Reset Device (Clear Paired List): Tap 5 times on the Touch Control panel
- (11) Voice Assistant: Long touch the Touch Ring for 2 seconds to wake up smart voice assistant.

Note: If the voice assistant doesn't get triggered then the functionality has to be first enabled by your media device.

(12) Spatial Bionic Sound comes as default setting, double tap the Touch Ring to switch to boAt signature sound and vice versa

Note: Spatial sound activates only during media playback

BEAST™ MODE

Triple tap on the touch control panel to activate Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap again to turn it off and return to normal music mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

ENx™ TECH

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

SPATIAL BIONIC SOUND (POWERED BY DIRAC VIRTUO)

- Spatial Bionic Sound comes as default setting, to enable boAt Signature Sound double tap the Touch Ring.
- Spatial Sound activates only during media playback
- Long tone prompt ensures Spatial Sound ON
- Short tone prompt ensures boAt signature sound ON and Spatial Sound OFF

TO CHARGE

Use the provided USB Type C charging cable to charge the earphones through either laptop / adaptor/ powerbank.

- (1) Low Battery: When the remaining battery is below 20%, there is a 'Battery Low' prompt every few minutes and red LED quickly flashes every few seconds to indicate the same.
- (2) Charging: Solid red LED indicates that the earphone is being charged (please note that the earphone cannot / should not be turned on while charging).
- (3) Fully charged: Red LED turns off to indicate the same.

SPECIFICATIONS

Bluetooth Version	V5.3
Operating Range	10m
Frequency	20Hz-20kHz
Driver Size	10mm*2 Drivers
Battery	200mAh
Talk time	Up to 30 hours
Music time	Up to 30 hours (at 60% vol, at power saver mode)
Bluetooth Profile	A2DP,AVRCP,HFP,HID,AVCTP,AVDTP,SPP
Charging Time	About 50 mins
Charge Interface	USB Type C
BEAST Mode	Yes
Low Latency	About 40ms
ASAP Charge	Yes
Water Resistance	IPX5

SAFETY CAUTIONS

• Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturer.

• Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.

• Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.

• Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.

• To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earphone. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

CHARGING NORMS & PRECAUTIONARY GUIDELINES: -

- 1) Charger/Brick/Adapter : 5V/2A
 - 2) Cable/Wire: Standard Cable (35 strands @0.10mm diameter/ strand)
- Any other accessory can be paired up with the product as long as the specifications are as per above norms.

Back