




Thank you for purchasing the boAt Stone Majestic. You are now just a step away from the realm of pure audio bliss.

Allow this User Manual to guide you through in case of any doubts and difficulties and to continue smooth sailing. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via Bluetooth wireless technology, USB, HDMI (ARC), and Aux wire compatibility. This portable wireless speaker has been designed for a smooth interface that requires a minimum of effort.

- ### PACKAGE CONTAINS
- Retro Bluetooth Speaker
  - User manual
  - Type C cable
  - Warranty card
  - Aux cable
  - Brand Catalogue

- ### INSTRUCTION FOR CONTROL PANEL
1. Power Button: Long Press To Power ON/OFF the Speaker, Short Press to switch among the Working Modes Bluetooth, AUX, USB, HDMI(ARC).
  2. Short Press to Play Or Pause (Bluetooth/USB only)  
Long press to clearing BT history/EQ back to Music/Volume back to Volume level 20
  3. Short Press For Previous Track(Bluetooth/USB only), Long Press to change EQ mode: Music/Movie
  4. Short Press For Next Track(Bluetooth/USB only), long press to switch Pair/Unpair function.
  5. Short Press To Reduce The Sound Volume, long press to quick decrease the volume.
  6. Short Press To Increase The Sound Volume, long press to quick increase the volume.

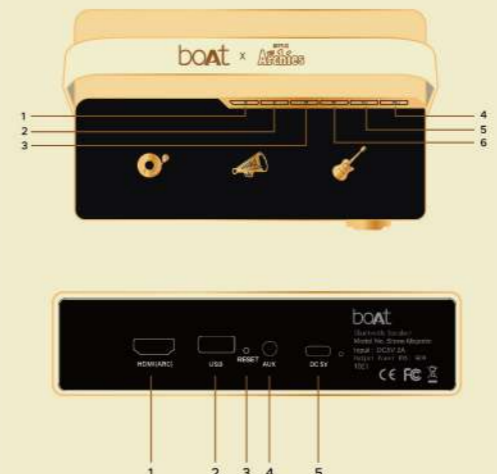

- ### CONNECTIONS
- 1.HDMI OUT(ARC): Connect compatible devices using a HDMI cable (not provided).
  2. USB IN: Use to connect a flash drive for direct MP3/WAV playback (FAT32 format and 64GB max).
  - 3.RESET: Press using a pin or sharp object to reset the unit when required.
  4. AUX IN: Use to connect compatible devices using the 3.5mm – 3.5mm stereo jack cable (provided).
  5. DC 5V: Use the charging cable supplied and connect to a compatible USB power Source for charging power.

- ### BLUETOOTH CONNECTIVITY:
- Short Press the power button to enter the Bluetooth mode.
  - Ensure the device you wish to connect is also in pairing mode and search for "Stone Majestic" in its device list.
  - The blue light on the front will stop flashing and remain constant when the two devices are paired.
- NOTE:**
- The speaker can automatically reconnect to the last paired device
  - The speaker will automatically start playing the song, once reconnected.

### AUX:

- You can switch to AUX mode by using the AUX cable to connect the phone and the speaker,
- In the AUX mode, you can control the volume via Volume +/- knob.

### HDMI(ARC):

- You can switch to HDMI mode by using the HDMI (ARC) cable to connect the phone and the speaker.
- In the HDMI (ARC) mode you can control the volume via Volume +/- knob.

### USB MEDIA MODE:

The speaker is compatible with USB flash drive up to 64GB in size and can play MP3 and WAV audio files directly. Simply insert a compatible drive into the USB port and the speaker will automatically switch to USB mode.

**NOTE:**

Note: if there is no connection for twenty minutes, the unit will turn off automatically, to save power consumption.

### SPECIFICATIONS

Model	Stone Majestic
Driver Size (Inch)	Full range speaker Oval shape 5275 30W*2+built in subwoofer 4" 30W*1
Number of Drivers	3
Frequency Response	45Hz-20KHz
Impedance	8Ω*2+4Ω
Signal Noise Ratio	> 70dB
Max SPL	N/A
Wireless Technology Type	Bluetooth
Bluetooth Version	5.3+EDR
Rated Power	90W
Battery Capacity	7.4V 6000MA
Playing time	Upto 7 hours
Charging Time	Upto 6 hours
Charging Interface	Type C
Working voltage	7.4V
Charging voltage	DC 5V
Compatibility	USB/BT/AUX/FM/ HDMI(ARC)
Product dimension	300x180x180mm
Product Weight	3.5kgs

### MAINTENANCE INSTRUCTION:

- Please charge the speaker according to the charging norms mentioned on packaging to protect the battery
- Do not disassemble the product
- Do not submerge the product inside water
- Please keep this product safe from coming in contact with any liquid
- Don't use/store this product in extreme temperatures
- Please keep the product away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume
- Don't try to dismantle/repair the product on your own.

Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adapter	-5V 2A
2) Cable/Wire	Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

## SOUND OF THE Sixties

### RIVERDALE'S TOP HITS

- MERI HAWAARI SUNO 02:45
- VA VA VOOM 03:05
- ASYMMETRICAL 02:55
- DISHOOM 02:33
- PLUM PUDDING 03:11

...AND MANY MORE