

boAt



STONE SPINX PRO

Manual


Thank you for purchasing the boAt Stone Spinx Pro. You are now just a step away from the realm of pure audio bliss.

Allow this User Manual to guide your smooth sailing. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via Bluetooth wireless technology, USB, TF Card, and Aux wire compatibility. This portable wireless speaker has been designed with a smooth interface that requires a minimum of effort.

PACKAGE CONTENTS

- 1x Stone Spinx Pro
- 1x User Manual
- 1x USB Type-C charging Cable
- 1x Audio Cable
- 1x Catalogue
- 1x Warranty Card

PRODUCT OVERVIEW:

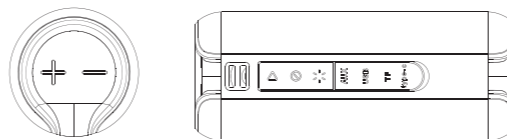

BASIC FUNCTIONS:

Button	Functionality
⊗	Long press to power on or off
⊗	Short press to change the mode (BT, Aux, USB TF Card)
▶	Short press to play/pause
▶	Long press to activate Voice Assistant (Google, Siri)
▶	Short press to answer an incoming call
▶	Short press to hang up the ongoing call
▶	Long press to reject an incoming call
⋮	Long press to activate TWS function
⋮	Short press to change the LED modes
+	Short press in steps to increase volume
-	Long press to go to the next track
-	Short press in steps to decrease volume
=	Long press to go back to the previous track

OPERATING INSTRUCTIONS:

POWER ON/OFF:

Long press the power button for 3 seconds to turn the speaker on or off. Note: Playtime varies according to the level of volume.

BLUETOOTH CONNECTIVITY:

- Turn the speaker on. Its LED Indicator quickly blinks white until the pairing is done.
- Activate the phone's Bluetooth functionality and search for the name "Stone Spinx Pro" and select it to establish Bluetooth pairing.
- As soon as the Bluetooth pairing is done, the connection is indicated by a sound and solid blue light indicator.

PAIR/UNPAIR:

Double press ⊗ button to pair/unpair under Bluetooth mode.

NOTE: To go back into pairing mode please double press the ⊗ button.

LED LIGHT

- The LED light is on when the speaker is powered on.
- There are six LED modes/patterns. You can change modes by short pressing the LED button.
- Short press the LED button to turn the LED light off.

HANDS-FREE CALL:

• Under Bluetooth connection status, if there is an incoming call, the user can short-press the Play/Pause button to accept the call or long-press Play/Pause button to reject the call.

• Short press the Play/Pause button or operate on the mobile phone to end the call. Note: If your smartphone is disconnected from the speaker due to shut down or switching mode, the speaker will automatically reconnect your smartphone when it is turned on again or switch back to Bluetooth mode.

Front

FM MODE:

- Press ⊗ button to switch to the FM mode
 - Short press ▶ button to start scanning the FM Channels. Once scanning is complete, you can change the channels by pressing "+" & "-" button
- Note: You may use the provided USB cable to work as an antenna for clarity in the FM mode.

TF CARD MODE:

- Turn on the speaker
- Insert a Micro SD card in to the TF card slot and it will switch to TF card mode automatically

AUX MODE:

- Connect one end of the appropriate cable to the AUX input of the speaker & the other to the external device.
 - In AUX mode you can control the audio playback via the media device/phone.
- NOTE: In AUX mode it is necessary to carry out the operation directly from the connected external device.

TWS CONNECTION:

- Turn on the two Stone Spinx Pro speakers that you require to be forged into one. You only need to set up one of the two units.
 - Press and hold the ⊗ button on one of the two speakers for 2 seconds until you hear a sound.
 - After releasing ⊗, it may take few more seconds for the speakers to connect.
1. Activate the Bluetooth function & search for Stone Spinx Pro to establish pairing
 2. It searches for the other speaker for a few seconds.
 3. Once both the speakers get connected via TWS mode, it gets indicated by a sound prompt.

USB MODE:

Insert a USB drive into the USB slot to play music.

CHARGING:

- When the battery is low, the speaker will make three sound prompts indicating low battery & post that power off automatically.
 - The charger adaptor is not included in the package, please charge this speaker via a 5V/2A charger or via PC. A Fast charger of 9V/3A is supported as well. During charging, the LED indicator stays solid red; once the charging gets completed the indicator turns off (the device will fully recharge in about 4-6 hours).
- Note:
- Please don't use the speaker while it is in charging as it may decrease the battery's performance.
 - If the battery is completely discharged, speaker may restart leave it off and recharge it for at least an hour before using it.
 - When the battery is low, the speaker will periodically emit a warning tone.

RESET:

- Use a pointed object to prick inside the Aux port & the speaker will reset to its default settings.

NOTE:

If the speaker doesn't turn off or doesn't respond, you could use the Reset functionality

SPECIFICATIONS

Bluetooth Version	5.0
Dimension	227*91*91mm
Weight	940g
Working Range	Upto 10m
Driver Size	57mm
Compatibility	AUX, TWS, Bluetooth, TF & USB
Frequency	40HZ-18KHZ
Input Voltage	DC 5V/2A
Output Power	20W RMS
Charging Time	Upto 4 hours
Playing Time	Upto *9 hours
Battery	2000mAh

*Playtime may vary accordingly to the music type & the volume level

WARNING:

- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to rain or moisture environment.
- Please do not disassemble, repair or modify this product by yourself without authorization.
- When cleaning this product, please use a soft cloth or with little water if needed, please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.
- The product is with built-in lithium battery, to avoid dangers, please do not discard or put it in the fair.

boAt



Back