

Wanderer



WANDERER

The Parents and Guardians of the little super hero, thank you for purchasing this watch for your kid.

We know that you care and that's why this gadget also works as a safety tracking device so that you always stay in touch with your wonder kid.

PACKAGE CONTENTS:

- boAt Wanderer
- User Manual
- Charging Cable
- Warranty Card
- Sim Card Ejector
- Catalogue



PRODUCT OVERVIEW:



CHOOSING CORRECT SIM CARD

Operator : choosing operator who supports 4G network SIM card type: Nano SIM card only
Data packet: Before you use watch, please make sure SIM card is active and able to use 4G data



SIM CARD INSTALLATION

Please read carefully before turn on watch to avoid any wrong operation caused by wrong card installation

1. Pull out SIM card via sim card ejector
2. Put the SIM card into card slot, chip upside, and insert to watch
3. Restart the watch after the sim card is inserted



DOWNLOAD "BOAT WANDERER APP"

Download boAt Wanderer APP through followed methods:
1. Scan QR code to download APP
2. Download from Apple App store or Google Play Store



REGISTER AND LOGIN



SCAN QR CODE AND BIND WATCH

1. Open the app and login
 2. Turn to registration code interface, scan QR code to bind watch (After the watch is inserted SIM card or connected to WiFi, the QR code interface will generate a binding code, and then the watch can be bound.)
- Obtain code:
1. On "Bind" page, tap "Bind code" to enter and obtain bind code.
2. Scan QR code or enter the bind code manually

KEY OPERATION



Function Button
Long press to turn on (If the new watch cannot be turned on, it is likely that the watch is out of power, please plug in the charging cable until the watch displays the charging interface)
Short press to turn off/on screen
One tap SOS
Long press for 3s to send emergency call (Need to set emergency contact person in APP)

BASIC OPERATION



CHARGING

connect and charge the watch with the image below as a reference, using a 5V/2A charger. It takes around 2 hours to charge the watch.



BASIC FUNCTIONS

- Chat**
Voice message : On "Chat" page, press and hold "Hold to Talk" to record voice, and release to send voice.
Voice play: click the unread message on the screen to play voice message.
- Phone**
Select contact to make a phone call or video call;
Note: Please make sure the contacts are added on the boAt Wanderer App

Add friends

After inserting SIM card and binding app, On "Add Friends" page, one-tap to make friends, and it will search to add friends automatically.

Steps

Click steps, you can view the number of daily steps.

Video call

Chat: Select contact and select video chat. Since two-way video call will use data, you may connect Wi-Fi for video call;
(Prolonged video calls will cause the watch to heat up, please do not make video calls for a long time. When the high temperature alarm pops up on the watch, please do not wear the watch, and wear it after the temperature of the watch has dropped to avoid low temperature burns)

Camera

Click "Camera" to start to take pictures. You can view and delete photos in "Album"



Wi-Fi Setting

After binding watch, open "More"->Setting->WLAN->Set up Wi-Fi

Positioning

Turn on App, click "location" to check GPS track and positioning.

SPECIFICATIONS :

Model name:	boAt Wanderer
Screen type:	1.4" TFT display
Battery capacity:	650mAh
Net weight :	52g ±2g
Working temperature :	15-35°C
Charging time:	2.5H
Working time:	standby 68 hours / up to 2 days
Maximum transmit power:	LTE 23±2.7dBm, WCDMA 24 +1/-3dBm, GSM850/EGSM 33±2dBm, DCS/PCS 30±2dBm
Frequency band:	FDD B1/3/5/8 TDD B40/41, GSM B2/3/5/8, W1/2/5/8

IMPORTANT NOTES

1. Product Statement

- Please read the contents of this manual carefully to ensure that you can use this product correctly and safely.
- Please use the matching strap for this product to prevent some straps from affecting the antenna signal of the watch, resulting in unclear calls and inability to locate and other problems.
- This product has positioning functions. Before the watch is bound, these functions are turned off. After you bind the watch, you can position the watch.
- The outdoor GPS positioning of this product may not be able to locate due to the lack of satellite signals in bad weather conditions.
- This product must use original accessories. If you use this product to connect incompatible accessories, this behavior may cause irreparable damage to the product, and even endanger the safety of you and your children. In this regard, the company does not assume any responsibility.
- This product can only function normally when the network is unobstructed. The company does not assume any responsibility for any loss caused by service interruption due to network failure or any other force majeure.

Based on the principle of continuous improvement, continuous optimization of products, and improvement of user experience. The company reserves the right to modify and improve any product functions described in the document without prior notice. The content in this manual is provided in the condition in which the product is manufactured and, except as otherwise required by applicable law, no warranty of any kind, express or implied, is made as to the accuracy, reliability and content of the document.

2. Precautions

Before using this product, please carefully explain & follow the instructions and warnings below. The company is not responsible for the consequences caused by incorrect use or non-compliance with the relevant instructions of this product.

Precautions for places of use and operating environment

- Any radio transmitting equipment (including this product) may cause interference to the function of improperly protected medical equipment. Where the use of wireless transmission functions of electronic equipment is prohibited, regulations must be followed.
- Pacemakers, implanted cardioverter defibrillators: When turning on the watch, always keep the distance between the watch and the device more than 6 inches (about 15.5 cm). Do not put the watch in your coat pocket. Please use the watch on the other side of the instrument to reduce potential interference. If you suspect interference, turn off your watch immediately.
- Hearing Aids, Cochlear Implants: Certain digital wireless devices may cause interference with certain hearing aids or cochlear implants. If such interference occurs, please contact the manufacturer for a solution.
- Other medical equipment: If you and the people around you are using other medical equipment, please consult the manufacturers of these equipment to ensure that they can adequately shield the surrounding radio frequency signals. You can also ask your doctor for information.
- Please turn off this product before the plane takes off.

It is strictly forbidden to use this product in gas stations, fuel depots, chemical plants, fuel or chemical transportation or storage facilities, otherwise it may cause explosion or fire.

- Please observe any relevant regulations and do not use this product where blasting operations are performed.
- All wireless devices are subject to interference, which can affect performance.
- It is strictly forbidden for children or pets to bite the product or its accessories, so as not to cause damage to it.
- Do not put the watch, charger (cable) in and around heating equipment or high-voltage equipment (such as microwave ovens, ovens, radiators, electric heaters, etc.), otherwise it may cause accidents such as circuit damage, fire and explosion.

- Do not use this product in thunderstorm weather.
- Do not subject this product and accessories to strong impact or vibration, so as not to damage the product.
- Do not use the watch speaker close to the ear, as it may cause hearing damage due to excessive volume.
- If you need to replace watch parts (such as straps, lugs, buckles, etc.), please be operated by an adult. Children are strictly prohibited from touching the parts, so as to prevent children from swallowing small parts and causing suffocation or other dangerous situations.
- Please use the parts correctly according to the instructions, and do not use them for other purposes.
- When using applications that consume a lot of power or using certain applications on the device for a long time, if you touch the device and feel warm, this is normal and will not affect the performance or lifespan of the device. If the device feels warmer, remove it until it cools down. Prolonged skin contact with equipment that is too hot may cause low-temperature burns, and red spots and pigmentation will appear on the skin at the contact site.

Precautions for maintenance and maintenance

- Non-professionals are not allowed to disassemble the watch and other accessories by themselves. When the watch and accessories malfunction, please contact your local after-sales service center.
- Do not use chemical solvents or detergents to clean this product.
- Please avoid dropping, knocking or vibrating the watch. Rough handling of the watch will cause the screen to break and damage the internal circuit board and precision structure.
- In case of abnormal phenomena during use, please press and hold the power button until the watch is turned on, which can solve general faults.
- In order to prolong the service life of the battery, please keep the battery fully charged. If the charged battery is left unused for a long time, the battery will gradually discharge by itself. When not in use, please place the watch in a cool, dry and dark place after charging.

- The cleanliness of the strap is not a constant feature, and the cleanliness is related to the user's usage environment and habits. It is in direct contact with the skin when worn and should be kept clean. When the strap is stained with sweat, dust, etc., please wipe it with a clean, dry soft cloth.
- If the charging contacts are dirty, please use a soft dry cloth to clean them, and do not scratch them with hard metal objects.
- When the watch strap is old and cracked, it must be replaced with a new one.
- Before cleaning the watch, please turn off the watch.
- Do not clean the watch while charging.
- Do not use heat such as a hair dryer to keep the watch dry.
- Do not use mechanical tools such as pressurized air guns & washing machines to clean the watch.

Charging and Battery Usage Precautions

- Please purchase power adapters through official channels, as low-quality or counterfeit power adapters may cause explosion or fire.
- Please make sure the contacts are dry and free from dirt before charging.
- Do not throw the watch into fire, nor expose it to direct sunlight, fire, or similar excessive heat to avoid battery leakage, overheating, bursting, or fire.
- There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
- If the watch has abnormal phenomena such as overheating, discoloration, deformation, bulging, and liquid leakage during use, charging or storage, please stop using it to avoid safety problems.
- Please do not put discarded batteries together with household garbage. In areas where there are corresponding regulations on the disposal of used batteries, please follow the relevant regulations of the local customer service department.

- When charging, because the temperature of the battery will rise, please do not put the watch together with flammable objects (such as: bedside, clothing, books, so as not to cause a fire).
- The battery of this product is built into the watch. It is strictly forbidden to disassemble, squeeze, heat or burn the battery. It is strictly forbidden to use sharp objects, screwdrivers, etc. to touch or pry the battery. The above operations may cause the battery to catch fire or burn.
- Do not use or store this product in environments with high temperature, high pressure, humidity, strong static electricity and strong magnetic fields.
- It is recommended to charge at a temperature above 5°C and below 35°C to avoid battery performance degradation.
- To reduce the risk of electric shock to children, please charge the watch under the guidance of parents or other guardians.

Precautions for using SIM card and charging cable

- When loading/removing the SIM or connecting the charging cable to the charging contact, make sure that the insertion side of the card or the connection side of the charging cable is correct. Do not forcefully insert the SIM card or connect the charging cable.
- Do not take out the SIM card when transmitting or accessing information on the front of the watch, otherwise it may cause data loss & damage the SIM card.
- When the watch is working, it will actively connect to the data network and synchronize to the server intermittently.
- Please enable the caller ID function of the SIM card. The watch will consume a certain amount of traffic during normal use and enjoy the upgrade service. Please make sure that the SIM card has call charges and traffic before using it. Please refer to the operator's charging standard for the call fee and traffic fee generated by using the SIM card.

Wearing Instructions

When wearing the watch, please adjust the tightness of the strap. It should not

- be too tight to allow the skin to breathe; it should not be too loose to prevent the watch from falling off or being damaged.
- Please try to avoid flushing the watch or wearing the watch in the shower, otherwise the watch may be damaged.
- If the sound becomes weaker after the watch is soaked in water, please throw the water out of the speaker hole, and the sound will return to normal.
- People prone to skin allergies
 - Some people are susceptible to allergies and may feel uncomfortable when using wearable devices. Please pay special attention when wearing a watch.
 - If you feel uncomfortable, it may be caused by wearing it too tight for too long. It is recommended that you adjust the tightness of the strap properly, or wear it with another hand for observation.
 - If the skin around or in contact with the watch becomes red, swollen, itchy, or has other symptoms of discomfort, stop using it immediately and consult a doctor.
- If you need to replace the watch strap, please go to the regular retail outlet to buy it.
- Discomfort may also be re-induced or increased if continued use after symptoms disappear.
- The company does not assume any responsibility for discomfort caused by personal physical reasons.

Description of waterproof performance

- The water resistance level of the watch reaches IPXX. Cannot be used for bathing, swimming, diving, water skiing and high-speed water flow, or submerged in shallow water.
- Water resistance is not a permanent condition and may decrease over time. To ensure proper use of your watch, please follow these tips: Do not wear your watch while swimming, showering, sauna, sweating (or in a steam room) and soaking in hot springs, etc.

- Avoid subjecting the watch to sudden temperature changes (such as blowing wind). Avoid operating or removing the SIM card when the water is still wet.
- Avoid contact with high-speed running water, such as faucets, rafting, surfing and water skiing.
- Avoid dropping or subjecting the watch to shocks, as the water resistance of the device may be impaired.
- Avoid contact with solvents (white wine, medical alcohol, etc.), acidic substances, detergents, soapy water, perfume, spray insecticide, lotion, sunscreen, oil, hair dye or bubble water, etc.
- Wipe off the product in time when sweat adheres to it for a long time.
- Avoid submerging the water meter in water for a long time. If the watch comes into contact with water, wipe it thoroughly with a clean soft cloth.
- After the watch comes into contact with water (such as washing hands), it is necessary to drain the accumulated water in the speaker and microphone holes, or use it after drying thoroughly to avoid affecting the sound.

Precautions for video calls and camera use

- It is recommended to use video calls in the WiFi state and in an environment with a relatively stable signal.
- When the watch is using functions such as video calls, the high-speed operation of the processor will generate a lot of heat. When the temperature of the watch rises to the preset threshold, the protection function will be automatically activated and the function will be exited.
- Personal Information Security
 - Please use this product with the consent of the wearer. To keep your kids safe, it's important to keep your product safe from unauthorized persons.