

PRODUCT MANUAL
Thank you for purchasing the model boAt 225 Neckband Wireless Earphones. Please read this manual before use



225
Neckband Wireless Earphones



boAt
plug into nirvana

Hardik Pandya

Accessories List

- 1X Bluetooth Headset
- 1X User Manual
- 1X USB Charging Cable
- 1X Warranty card

Product Overview



- Click Vol(+)
Long press to Next Track
- Click Vol(-)
Long press to Previous Track
- Mic
- Switch / MFB
- Pause
- Play
- Click Hang up Phone
- Click to answer the call
- Long press to hang up call
- LED Indicator Light

How To Use

Power On/Off

To power on: Press and hold the Multifunction Button for up to 3 seconds until the white indicator light starts flashing (only for a second) with the prompt tone "power on". To power off: Press and hold the Multifunction Button for 3 seconds until the red indicator light flashes (only for a second) with the prompt tone "power off". (Remarks: After powering on, if the device is not connected for up to 5 minutes, it will power off automatically.)

Pairing

- When switched off, press the multi-function key for 3 seconds, a red and white light will begin to alternately flash indicating that the earphones are ready to be paired.
- Open Bluetooth functions and setting on your phone
- Search for available Bluetooth Devices
- Choose "boAt 225 Wireless" from the options (If a password is asked for, then please input "0000")
- White LED light will flash slowly with the prompt tone "you are now Plugged into Nirvana" if product is paired successfully

Pairing two mobile phones

- Follow the pairing procedure. After pairing the first phone, disconnect the phone from the Bluetooth headset and then pair the second phone.
- Select "boAt 225 Wireless" and enable a manual connection for the first Bluetooth pairing device. You are now connected to both devices

Call

Answer/end a call: Press the Multifunction Button to connect or hang up on the current phone.
To reject a call: Press and hold the Multifunction Button for 2 seconds.
To redial a call: Double tap the Multifunction Button.
Switching a Call: Press the Multifunction Button to hang up the current phone and to answer the waiting call. When you are the one making a call, double tap on the Multifunction Button to answer the second call, and to switch between the two calls. Short press the Multifunction Button, you can end the phone calls one by one.

Button Definition

Power off: Press and hold the Multifunction Button for 3 seconds
Power on: press and hold the Multifunction Button for 3 seconds
Pairing Mode: Press and hold the Multifunction Button for 3 seconds
Answer incoming call: click the Multifunction Button
Reject incoming call: Press and hold the Multifunction Button for 2 seconds
Hang up the phone: Click the Multifunction Button
Volume up: Click V+
Volume down: Click V-
Next Track: Press and hold "V+" button
Previous Track: Press and hold the "V-" button



Product Features

- Up To 8 Hours Working Time
- Flex-Form Cable
- Control Music and Manage Calls
- Support Multi-Point Connection
- CVC Intelligent Noise Reduction
- IPX 4 sweat and water resistant

Bluetooth Earphone Specifications

- Bluetooth Version: V4.2
- Stand-by Time: 200 h
- Talk Time: 8 h Music
- Play Time: Up to 8 h
- Charging Time: 2 h
- Charging Voltage: DC 5V
- Frequency Range: 2.402G-2.480G
- Ambient Temperature: -20/+60°C
- Profile Supports: HSP, HFP, A2DP, AVRCP
- Transmission Distance: 10m
- Battery Capacity: 110mAh/3.7V

Driver Specification

- Driver Unit : Dynamic Drivers 10mm
- Sensitivity : 100dB ± 3dB
- Impedance : 32Ω ± 15%
- Frequency Response : 20-20000Hz

Safety And Maintenance

Please read the suggestions below in order to prolong the product lifespan and to clearly understand the warranty clauses.

- Keep the product dry, do not put it in humid conditions as this can result in short circuiting.
- Do not expose it to the sun for long periods or high temperatures in general. It can shorten the lifespan of electronic components within the product, damaging battery and deforming the plastic parts.
- Do not place in a cold environment or else the PCB board may get damaged.
- Do not attempt to take apart the product, especially if you are not trained, Seek professional help.
- Do not allow it to fall or receive excessive shaking or physical damage, to avoid damage to the inner electronic circuit.
- Do not use high chemical detergents to clean the item.
- Do not scratch the surface with sharp items to avert damaging the case and appearance
- Do not allow it charge continuously, it is recommended to charge only up until the battery has been maximized, the time duration for which has been provided above.



Jacqueline Fernandez



boAt
plug into nirvana