



ROCKERZ 239

Wireless Bluetooth Headsets


Thank you for choosing the boAt Rockerz 239. This manual is meant to guide you through to the shores of Nirvana without too much difficulty. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for the steering of this boAt. Therefore, we strongly advise that this manual is thoroughly read before beginning of use, and referred to when in times of difficulty. Are you ready to Plug into Nirvana?

2

Product Overview

- 1 x boAt Rockerz 239
- 1 x Micro USB charging cable
- 2 x Pairs of additional earbuds (Small & Large)
- 1 x Manual

Product Diagram

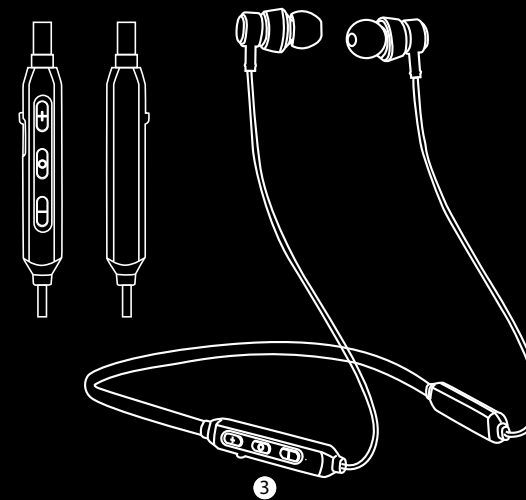

To Pair with Bluetooth:

When switched off, press the multifunction button for 3 seconds to enter pairing mode. The earphones will automatically enter pairing mode with a prompt and the

- Open Bluetooth on your device and search for "boAt Rockerz 239" in the list of available devices.
- Choose "boAt Rockerz 239" from the list and enter the pairing password "0000" to establish Bluetooth connectivity.
- A voice prompt "You're now connected to boAt Rockerz 239" will be heard to confirm the connection. The blue LED light flashes when connected.

Functions:

- Power On: A voice prompt "You're now connected to boAt Rockerz 239" will be heard to confirm the connection. The blue LED light flashes when connected.
- Pairing: When Switched off, press and hold the Multifunction Button for 3 seconds to power on and enter pairing mode.
- Power Off: In any mode, press and hold the multifunction button for 3 seconds. A voice tone "power off" will confirm the same. The red and blue LED's will flash before the device will turn off.
- Play/Pause: Tap the multifunction button once to play/pause music.
- Volume up: Tap the volume "+" buttons in steps to increase the volume. A beep will indicate maximum volume.

4

- Volume down: Tap the volume "-" button in steps to decrease the volume. A beep will indicate minimum volume.
- Answer/End call: Tap the multifunction button once when answering or ending a call to complete the action.
- Reject call: Press and hold the multifunction button for 1 second when receiving a call to reject it. A beep will indicate this.
- Previous Track: To go to the previous track, press and hold the "-" button for 2 seconds.
- Next Track: To skip to the next track, press and hold the "+" button for 2 seconds.

To Charge:

Use a micro USB charging cable to charge the earphone through either a laptop or an adaptor.

- Low Battery: The remaining talk time is less than 10 minutes. There will be a 'tone' and a reminder every minute.
- Charging: The red light is steady (please note that the earphone cannot be turn
- Fast Charging: The Earphones support fast Charging and 15 minutes of charge offers a playback of 3.5 Hours
- Fully charged: The blue light is steady.

5

Specifications:

Bluetooth Version	5.0
Chipset	QCC 3003
Frequency	20-20000Hz
Operating distance	33 feet
Bluetooth profiles	HSP, HFP, A2DP and AVRCP
Waterproof	IPX5
Driver Size	10mm
Charging time	1 Hour
Playback time	6 Hours
Impedance	16 Ohms
Driver sensitivity	102dB±3dB
Mic sensitivity	-42dB±3dB
Battery capacity	3.7V/110 mAh
Product weight	24 Grams

6

Safety Cautions::

- Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturer.
- Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.
- Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.
- Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are Plugging into Nirvana. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

7

