

Thank you for choosing the boAt Rockerz 380. This manual is meant to guide you through to the shores of Nirvana without too much difficulty. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for the steering of your boAt. Therefore, we strongly advise that this manual is thoroughly read before beginning of use, and referred to when in times of difficulty.

Package Contents:

- 1 x boAt Rockerz 380
- 1 x Micro USB charging cable
- 1 x Aux cable
- 1 x Manual
- 1 x Warranty Card

Product Diagram:



1. LED Indicator Light
2. Volume Up / Next Track Button
3. Power/Multifunction Button
4. Volume Down / Previous Track Button
5. Micro USB Charging Port
6. 3.5mm AUX Port
7. Mic

To Pair with Bluetooth:

- (1) Press and hold the multifunction button until the headphones switch on, the LED light will begin flashing to indicate this. The flashing indicates that the headphones are ready for pairing.
- (2) Open Bluetooth on your device and search for "boAt Rockerz 380" in the list of available devices.
- (3) Choose "boAt Rockerz 380" from the list and enter the pairing password "0000" to establish Bluetooth connectivity.
- (4) A prompt will be heard to confirm the connection.

To Pair with Aux:

- (1) Connect the headphones with any range of devices that are compatible (laptop, smartphone, tablet) by plugging in to the 3.5mm Aux wire
- (2) Please note that music and calls can only be handled by the connected device, the controls on the headphones will not work when in Aux mode.

Functions:

- (1) Power on: When switched off, press and hold the multifunction button for 3 seconds. A voice tone will confirm the same and the LED light will begin to flash.
- (2) Power off: In any mode, press and hold the multifunction button for 3 seconds. A voice tone will confirm the same.
- (3) Play/Pause: Tap the multifunction button once to play/pause music.
- (4) Volume up: Tap the volume "▲" button in steps to increase the volume. A beep will indicate maximum volume.
- (5) Volume down: Tap the volume "▼" button in steps to decrease the volume. A beep will indicate minimum volume.
- (6) Answer/End call: Tap the multifunction button once when answering or ending a call to complete the action.

boAt
plug into nirvana



ROCKERZ 380
On Ear Wireless Headphones

Kartik Aaryan

(7) Previous Track: To go to the previous track, press and hold the "▼" button for 2 seconds.

(8) Next Track: To skip to the next track, press and hold the "▲" button for 2 seconds.

(9) Reject call: Press and hold the multifunction button for 2 seconds when receiving a call to reject it.

To Charge:

Use a micro USB charging cable to charge the earphone through either a laptop or an adaptor.

(1) The headphones require a charging time of approximately 2-3 hours. When battery is low, the LED indicator will flash red.

(2) **Charging:** When the headphones are charging, the LED light will be steady

(3) **Fully charged:** the red light will switch off.

Specifications:

Bluetooth chip :	BK 3266
Bluetooth version :	V5.0
Frequency response :	20Hz-20KHz
Support Bluetooth profile :	A2DP,AVRCP,HFP,HID,AVCTP,AVDTP,SPP
Play time(100% Volume) :	Up to 20 hours
Transmission range :	10 meters
Sensitivity:	100±3dB @ 1KHz
Battery :	3.7V, 350mAh, Li-ion
Charging time :	2 hours
Charging input criteria :	Micro-USB, 4.2V, 350mA
Speaker type:	Ø40mm 32Ω

boAt
plug into nirvana

ROCKERZ 380
On Ear Wireless Headphones



Safety Cautions:

- Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the headphones should be done only through a qualified service provider/manufacturer.
- Please clean the headphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the headphones are kept away from extremely hot or cold substances.
- Any damage to the headphones that is NOT a manufacturing issue will make the products warranty null and void.
- Do not use headphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are Plugging into Nirvana. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

Trouble Shooting:

Unable To Pair	<ol style="list-style-type: none"> 1. Check if headphones are in pairing mode, restart headphones to enter pairing mode 2. Turn off any other present Bluetooth devices 3. Low Battery, charge the headphones
Inconsistent Sound	<ol style="list-style-type: none"> 1. The device may be beyond the working range (10m) 2. There may be obstacles or objects between the headphones and Bluetooth connected device 3. Check battery levels and recharge if necessary
No sound/ For Distorted Sound	<ol style="list-style-type: none"> 1. Check volume levels on both headphones and connected device. 2. Recharge the headphones if required