

ROCKERZ
330 Pro


boAt

MANUAL

Thank you for choosing boAt Rockerz 330 Pro. This manual is meant to guide you through the functionality of the wireless earphone neckband. Knowledge of Bluetooth and device connection is essential for the usage of the headset. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of Difficulty, so that you can always be easily guided towards the shores of musical bliss.

PACKAGE CONTENTS

- 1 x boAt Rockerz 330 Pro
- 1 x USB Type C charging cable
- 2 x Pair Additional Earmuffs (Small & Large)
- 1 x Manual
- 1 x Warranty Card
- 1 x Catalogue

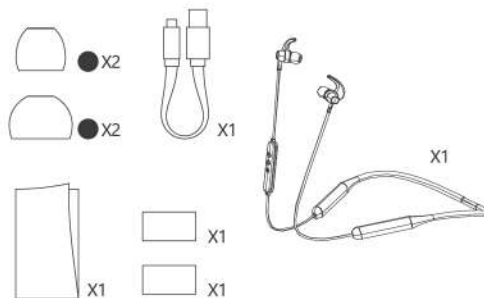

TO PAIR WITH BLUETOOTH

- (1) When switched off, press and hold the MFB (multi-function button) for 4 seconds to enter pairing mode. A beep prompt will confirm the same, the blue and red LEDs flash alternatively to indicate the same.
 - (2) Open Bluetooth on your device and search for "Rockerz 330 Pro" in the list of available devices.
 - (3) Choose "Rockerz 330 Pro" from the list and if asked enter the pairing password "0000" to establish Bluetooth connectivity.
 - (4) Once successfully connected, the blue LED flashes once every few seconds to indicate the same.
- Note: The neckband automatically turns off if there is no pairing established in 5 minutes.

FUNCTIONS

- (1) Power on: When in switched off, press and hold the MFB for 3 seconds. A beep prompt will confirm the same. Blue LED blinks to indicate the same.
- (2) Power off: In any mode, press and hold MFB for 4 seconds. A beep prompt will confirm the same. At the same time, the red LED blinks to indicate the same.
- (3) Play/Pause: Single press the MFB to play/pause music.
- (4) Volume up: Press the volume "+" button step by step to increase the volume. A beep prompt will indicate maximum volume.
- (5) Volume down: press the volume "-" button step by step to decrease the volume. A beep will indicate minimum volume.

Front

- (6) Answer/End call: Press the MFB once when answering or ending a call to complete the action.
- (7) Reject call: Press and hold the MFB for 2 seconds during an incoming call to reject the call.
- (8) Previous Track: To go to the previous track, press and hold the "-" button for 2 seconds.
- (9) Next Track: To skip to the next track, press and hold the "+" button for 2 seconds.
- (10) Reset Device (Clear Paired List): When on pairing mode (Blue and Red LEDs Flash), Press and hold the "+" and "-" buttons simultaneously for 5 seconds to clear the previous list of connected devices. The blue LEDs will stay on for 2 seconds to indicate the same.
- (11) Dual Pairing: To connect Rockerz 330 Pro to two devices simultaneously, firstly connect the earphone to one of the devices. Then, switch both the earphone and the device off. Thereafter, connect the earphone to the second device, and again switch the first device on. The earphone will get connected to both devices. If not, connect the first device manually once again to activate dual pairing.
- (12) Voice Assistant: Long press the MFB for 1.5 seconds and release to wake up smart voice assistant.
- (13) Redial: Double press the MFB for redialing the last contacted number.

TO CHARGE

- Use a Type C charging cable to charge the earphone through either a laptop or an adaptor.
- (1) Low battery: When the battery is below 10%, there is "tone" prompt and red LED flashes quickly to indicate the same.
 - (2) Charging: Solid red LED indicates that the earphone is being charged (pls noted that the earphone cannot be turned on while charging).
 - (3) Fully charged: Solid blue LED indicates the same.

Fast charging function-This headphone support fast charging function (10 minutes charging, support 20 hours working). if fully of charging, it take 1 hour.

SAFETY PRECAUTIONS

- Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/ manufacturer.
- Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.
- Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.
- Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earphone. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

SPECIFICATIONS

Bluetooth Version:	V5.2
Operating Range:	10m
Frequency:	20Hz-20000Hz
Driver Size:	10mm*2 Drivers
Battery:	150mAh*2
Talk time:	Up to 60 hours
Music time:	up to 60 hours @ 60% volume
Charging Time :	About 1 hour
Fast Charging	10 minutes charging,20 hours working
Charging Port :	Type C
Driver Impedance:	32Ω
Sensitivity:	98dB ±3dB
Dual Pairing:	Yes
Water Resistance:	IPX5

Charging norms & Precautionary Guidelines: -

- 1) Charger/Brick/Adapter : 5V 2A
- 2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

boAt

ROCKERZ
330 Pro



Back

ENx™ TECH

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default. Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space, literally anywhere!