

boAt

## WELCOME

Thank you for purchasing the Stone 1010 and welcome to the boAt family!

The Stone 1010 is a unique portable stereo audio system combining Bluetooth Connectivity, USB, FM Radio, Powerful Lithium Ion Battery & water resistant technologies. The result is a shock resistant, dust resistant, water resistant, full range rechargeable wireless speaker system. Do everything from stream & play your music from your Bluetooth enabled smartphone or audio device, to answering your calls over the built-in speaker phone!



### Accessories

1. BT Speaker
2. Micro USB Cable
3. Aux in Cable
4. User Manual
5. Warranty Card

### User Manual

Stone 1010 is IPX-5 water and dust resistant. To ensure your Stone 1010 is prepared for use in a wet environment, remove all cable connections and tightly close the lid. If the water lid is not properly closed, the speaker will not be water resistant.

### CHARGING

Before using your Stone 1010, please charge it using the micro USB charging cable included in the package. Please note: Most USB chargers are compatible with Stone 1010. For optimal AC charging please use a 1.0A USB charger. Plug the small micro USB pin into the charger port on the side of the speaker and the other end of the cable (the standard USB 2.0 plug) into any standard USB port (such as a computer or USB charger). The LED light will automatically glow indicating charging mode. When it is fully charged, the LED indicator light will turn off. A full charge takes about 4 hours. The speaker can be charged while playing music. The battery of the speaker will be charged until the charging process completes.

### PAIRING

Turn your speaker on. The Bluetooth LED indicator on the control panel will flash blue. Enable your Bluetooth device such as cell phones, tablets or other Bluetooth media and make sure it is in searching mode. Select "boAt Stone 1010 speaker" in the list shown in the Bluetooth device.

Note: -if your Bluetooth device version is below V2.0, please enter password "0000" for a connection. The speaker will automatically reconnect to last connected Bluetooth enabled audio device.

### HANDS-FREE SPEAKERPHONE

You can use Stone 1010 as a portable speakerphone for incoming calls when connected wirelessly and outgoing calls via Bluetooth. Take your calls by pressing the ">||". Press once again for ending the call, double press ">||" button to reject an incoming call. Music will resume automatically. To make a call, simply dial your cell phone and talk through the speaker. Once your call is connected chose Stone 1010 in the headset options.

### FM MODE

Short press the mode button to access FM mode. Once in this mode, long press the mode button to lock into an FM channel. Press and hold the +/- buttons to change channels in FM mode or control volume.

### USB MODE

Simply insert the USB drive to automatically begin playing music. The integrated controls can be used to pause/play, adjust volume and change tracks.

### SPECIFICATION

• Model	: Stone 1010	• Output	: 14W	• Playing Time	: 8-9 hours
• Bluetooth speaker	: Yes	• Driver	: 1.75"	• Charging Time	: 4 hours
• Impedance	: 4Ω	• S/N	: >60dB	• Talk time	: 18 hours
• Frequency range	: 20Hz-20KHz (-10dB)	• BT Range	: 10m	• Battery	: 3000 mAh

NOTE: - Do not expose the built-in battery to excessive heat, including direct sunlight and fire. This speaker is in compliance with the specified BT version it does not guarantee compatibility of all functions on every BT enabled device. Please check with your mobile phone at the compatibility and functionality.

### OPERATION INSTRUCTION

#### VOLUME ADJUSTMENT

At any time during a phone call or while playing music the volume can be changed with the "+" or "-" button. To raise the volume press and hold the "+" for 1 second. To lower the volume press and hold "-" button for 1 second there will be a tone from the speaker to indicate that the level has reached maximum or minimum volume.

#### CHANGING TRACKS

Simply press the ">" or "<" button for 1 second on the stone 1010 to change tracks.

#### PLAY AND PAUSE

Press the ">||" on the speaker's control board to play/pause the music.

#### MODE SWITCH BUTTON

Press the "M" button to disconnect or connect Bluetooth connection. Press the "M" button to switch modes. (BT, Aux In, FM Radio)

#### TROUBLESHOOTING

Unable to pair with a Bluetooth device:

check that you do not have an audio cable connected to the Aux in socket.

Ensure that you are within range of the wireless Speaker for wireless functionality, 10 meters or less (33 feet or less).

Check that the device you are attempting to pair with supports A2DP stereo audio transmission.

### SAFETY INFORMATION

#### WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent product damage.

#### Fire and Electric Shock Hazard

- Do not expose your Stone 1010 to extremely high or low temperatures.
- Do not leave your Stone 1010 in direct sunlight for extended periods of time.
- Do not leave your Stone 1010 near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

#### Battery/Charger Hazard

- Do not dispose of your Stone 1010 in a fire. The battery could explode causing injury or death.
- Only charge the battery in accordance with the user instructions supplied with the Stone 1010.
- Do not attempt to disassemble the Stone 1010 charger or force open the built-in battery because this may result in electric shock.
- Do not clean the Stone 1010 when it is being charged. Always unplug the charger first before cleaning the Stone 1010.

#### Automobile Accident Hazard

- Do not leave or store the Stone 1010 or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys.

#### CAUTION

- Do not use abrasive cleaners to clean your Stone 1010 because this could cause scratches and damage.
- Do not bring your Stone 1010 in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your Stone 1010 unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your Stone 1010 yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your Stone 1010 battery, it is built-in and is not changeable.
- Observe all signs and displays that require an electrical device or RF radio product to be switched in designated area.
- Turn off your Stone 1010 prior to boarding an aircraft. Do not use Stone 1010 inside an aircraft unless allowed by your airline.
- Dispose of the Stone 1010 and the Stone 1010's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

## Controlling System

