

# PLAYER+

MAGNETIC TOUCH SMART SPEAKER



## USER MANUAL

# TABLE OF CONTENTS

<b>GENERAL</b>	<b>3</b>
FEATURES	3
OUR SPEAKER DESIGN	3
BUILT-IN MAGNETIC STRIP	3
WHAT'S IN THE BOX?	4
CHARGING THE DEVICE	4
BASIC OPERATION	5
<b>PLAYER+ SET UP</b>	<b>6</b>
PAIRING VIA BLUETOOTH	6
PLAY GOLF	6
<b>HOW TO USE PLAYER+</b>	<b>7</b>
NAVIGATING UTILITY SCREENS	7
TIME DISPLAY	8
MUSIC PLAYER	8
BATTERY / SETTINGS / ABOUT DEVICE	9
NAVIGATING GOLF SCREENS	10
ROUND CONTROL / MAIN GPS	11
DRIVING DISTANCE	11
SCORE DISPLAY	12
DYNAMIC HAZARDS	12
ACTION BUTTON	13
LINKS PARTY PAIRING	14
INDOOR/OUTDOOR EQ MODE	15
PREMIUM SUBSCRIPTION / MOBILE APP	15
MOBILE APP PLAYER+ SETTINGS	16



# ***TABLE OF CONTENTS***

<b>TROUBLESHOOTING</b>	<b>17</b>
<b>SPECIFICATIONS</b>	<b>18</b>
<b>IMPORTANT SAFETY INFORMATION</b>	<b>19</b>
<b>REGULATORY / LEGAL INFORMATION</b>	<b>20</b>
<b>COMPLIANCE</b>	<b>21</b>
<b>ENHANCED WARRANTY</b>	<b>22</b>

# FEATURES



**TOUCH SCREEN  
DISPLAY**



**360° AUDIO  
EXPERIENCE**



 
**RADICAL  
DEEP BASS**




**HAZARD  
DISTANCES**



**VISUAL + AUDIBLE  
DISTANCES**



**DRIVING  
DISTANCE**

 

**LINKS PARTY  
PAIRING**



**MAGNETIC  
STRIP**



**POWER  
BANK**



**100 FOOT  
RANGE**



**10+ HOURS  
BATTERY**



**IPX7 WATER  
PROOF**

## THE DESIGN

Our team found through meticulous testing stages that we were able to achieve a better, richer outdoor sound experience by double stacking two larger drivers on the right side of the speaker and adding an additional passive radiator on the left side under the buttons, while still keeping two passive radiators on the top and bottom on the speaker. This allows Player+ to give deeper bass and higher fidelity audio while driving or riding in the cart. Given that the speaker is designed to be primarily used on the golf course, our team opted for a better outdoor experience than what we had originally in Player Speaker.

The engineering team had to work through many complex issues to achieve premium sound quality, an innovative touch information system, a super powerful magnet and long-lasting power for hours of enjoyment and recharging.

## BUILT-IN MAGNETIC STRIP

### ATTACHES TO THE CART OR ANY MAGNETIC SURFACES

- The magnetic strip on the Player+ Speaker is specifically designed to only fit on the vertical pole of the golf cart.
- Ensure the magnetic strip is securely flat, aligned, and free of debris when magnetically attaching to a surface.

 
**WARNING:** Use caution when using the built-in magnetic strip to attach the Player+ Speaker to the golf cart. Be careful driving over rough terrain, heavy bumps, potholes and/or curbs as this can cause the speaker to fall off, incurring damage that is not covered under the two-year limited warranty.



# WHAT'S IN THE BOX?




USB-C to USB-A  
Charging/Data Cable

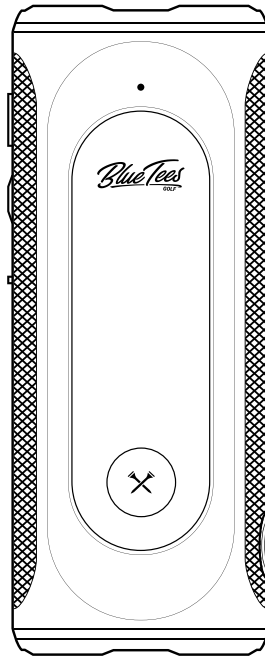

Player+  
Magnetic Touch  
Smart Speaker



 Blue Tees Golf  
Crossed Tees Sticker

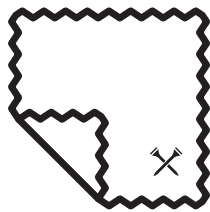

Blue Tees  
Cleaning Cloth



Quick Step  
Guide

# CHARGING THE DEVICE

This device is powered by built-in lithium-ion batteries that can be charged using any standard USB port on your laptop/computer or an AC adapter.

**Note:** This device will not charge/operate outside of the approved temperature range (page 19)





1. Locate and remove the rubber boot covering the USB-C charging port on the device.
2. Insert the small end (USB-C) of the provided charging cable into the USB-C input port.
3. Insert the large end (USB-A) of the provided charging cable into an external power source, such as a USB port on your laptop/computer or an AC adapter (min. 5V/2A).
4. Remain inserted for 3-4 hours or until device is fully charged before use.

**Note:** Battery levels only show in the following percentages: 0%, 25%, 50%, 75%, and 100%

 


# BASIC OPERATION




- Power Button/Multi-function Button**
- Long press  for 5s to Power On/Off
- Short press  for Action Button
- Short press  to Answer/End Call
- Long press  to Reject Call

## Programmable Action Button:

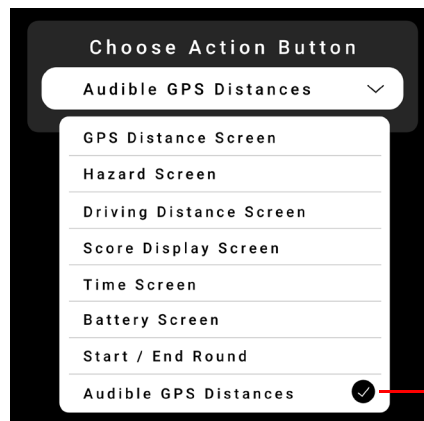

 
Once you have connected your Player+ to both your phone and Blue Tees Game app, go to Device Settings on the home screen of the app and swipe down until you see "Choose Action Button". You will be presented with a list of different actions to select (left)

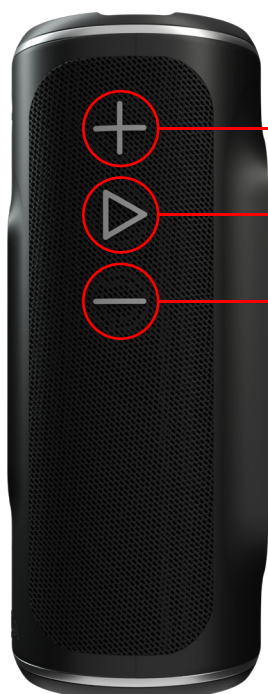



- [▶] Play/Pause Button**
- Short press [▶] to Play/Pause music
- Long press [▶] to Activate TWS
- [+][−] Plus/Minus Button**
- Short press [+] to turn volume up
- Long press [+] to skip to next track
- Short press [−] to turn volume down
- Long press [−] to go to previous track
- Long press [+] and [−] simultaneously to disconnect Bluetooth

# PLAYER+ SETUP

## POWER ON & PAIRING TO MOBILE DEVICE via Bluetooth (1st time)

1. Turn on the Player+ Speaker by pressing and holding  for five (5) seconds until the LCD flashes on. You will hear a prompt tone indicating that the Player+ Speaker has been turned on and will automatically enter Bluetooth pairing mode.
2. On your mobile device, turn on the Bluetooth feature. Select “Blue Tees Player+” from the list of available Bluetooth devices. Keep the mobile device within three (3) feet or one (1) meter away from the Player+ Speaker.

## CONNECTING TO THE BLUE TEES GAME APP & PLAY GOLF

1. Press and hold the  for five (5) seconds until the LCD flashes on.
2. Download/Launch the Blue Tees Game App and follow the on-screen instructions to create an account or login.
3. Navigate to the ‘Devices’ section, add new device, connect/register the Player+ Speaker to your Blue Tees Game account.
4. Once connected, search the location or name of the golf course in the search bar to locate a specific golf course.
5. Select desired course, number of holes and starting tees.
6. Press 



# NAVIGATING UTILITY SCREENS

## PLAYER+ SPEAKER FUNCTIONS:

- Swipe up and down to access the Time, Battery Status, Front / Center / Back Distances\* and Music screens.

 
\*Front / Center / Back screen will only show up when Player+ is paired with Game app and a round of golf has been started.

\*Speaker does not require connectivity to the Blue Tees Game App for Utility Screens.

## UTILITY MODE




▲  
**SWIPE UP  
OR DOWN**  
▼  
TO CHANGE SCREEN

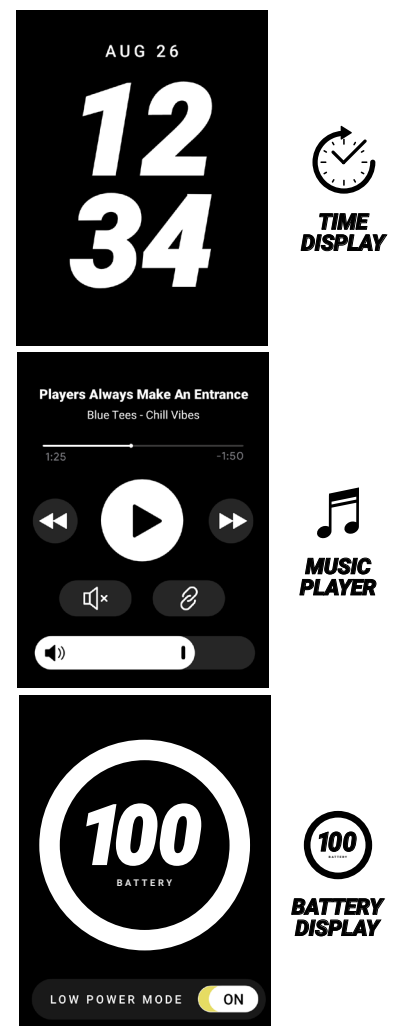



# TIME DISPLAY

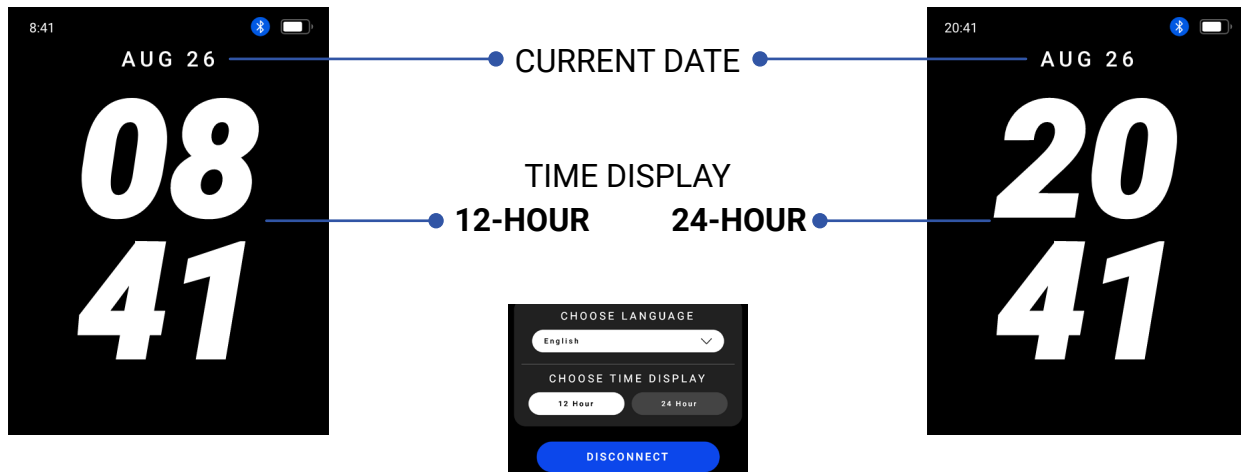 

Navigate to Mobile App Settings  
(page 16) to select.

*NOTE: Time & Date reflect mobile device connected via Bluetooth*

# MUSIC PLAYER

*NOTE: Must be connected via Bluetooth*



# BATTERY / SETTINGS / ABOUT DEVICE

Swipe up or down to navigate to the battery screen.

Toggle ON/OFF for Low Power Mode

Tap 'Settings' to change your color mode, brightness, and Bluetooth connectivity.

Tap 'About Device' to view your device serial number and firmware version.

## LOW POWER MODE

Reduce brightness to 70%

Reduce max volume to 70%

Screen goes to sleep after five (5) seconds of inactivity, tap to wake

**COLOR MODE** - DARK is Default: Choose color mode

**DARK**

**LIGHT**

**BRIGHTNESS** – MAX is Default: Select device screen brightness



**BLUETOOTH** – Connect to the Blue Tees Game Mobile App

**ON**

**OFF**



# NAVIGATING GOLF SCREENS

## GOLF SCREENS:

- From the Front / Center / Back Distances screen, swipe left to see the Driving Distance\* screen. From the Driving Distance screen, swipe left to see Current Score\* screen. From the Current Score screen, swipe left to see Dynamic Hazard Distances\* screen.

\*Driving Distance, Current Score, and Dynamic Hazard Distances screens only available with Player+/Game App Premium Subscription.

CENTER  
**187**  
179 | 192  
FRONT BACK

 
**VISUAL + AUDIBLE  
DISTANCES**



## GOLF MODE




**DRIVING  
DISTANCE**

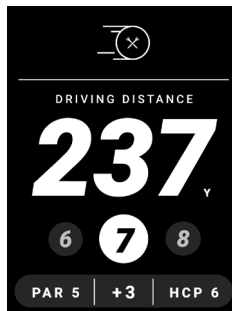


**+3**

 **SCORE  
DISPLAY**

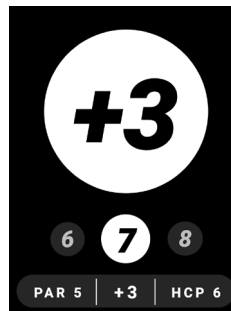

**HAZARD  
DISTANCES**

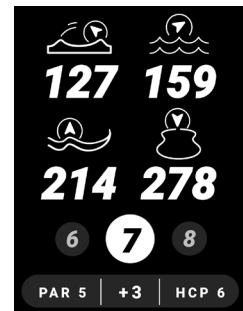 

**SWIPE LEFT  
OR RIGHT**


TO CHANGE SCREEN



# ROUND CONTROL

 Easily navigate the Player+ by clicking the next hole and previous hole buttons to manually change holes. The Player+ will auto-advance to the next hole. (Note: when connected to the Blue Tees Game App)

Below the Hole Selection is the Summary Bar which shows the Hole Par, Round Score, and the Hole Handicap.

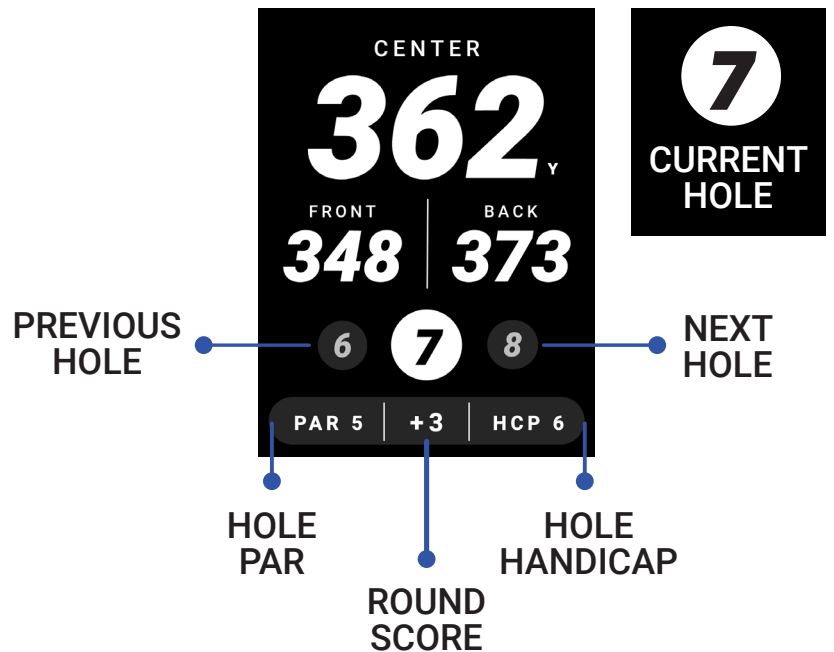

# DRIVING DISTANCE

View the precise distance from the tee box to track how far you hit your tee shot. Select your desired tee box when starting a round of golf in the mobile app for the most accurate measurements. After you hit your tee shot, the Player+ powered by the Blue Tees Game App will do a reverse calculation from your selected tee box to give you your Driving Distance.



 
# SCORE DISPLAY

Easily view brief details about your current score and round. By recording your score in the Blue Tees Game App, your Player+ will actively display your current score to par. When in Idle mode, you will see more details like your total score and current thru hole number



# DYNAMIC HAZARDS

Dynamic Hazards will display up to four (4) hazard distances to give you a quick glance on areas to avoid on the course. The hazards will scale dynamically to one (1) distance. There are four (4) unique icons with dynamic arrows to indicate where the hazards are on the course.

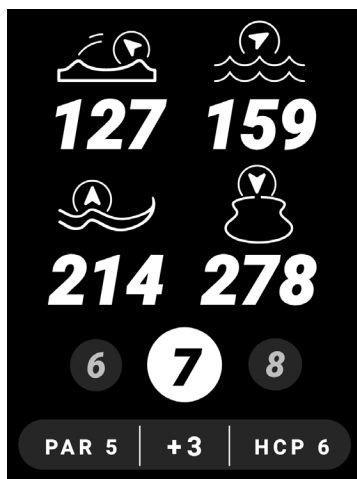

BUNKER HAZARD



WATER HAZARD



CREEK HAZARD



END FAIRWAY HAZARD



CARRY HAZARD



LEFT HAZARD



RIGHT HAZARD

TO HAZARD



# ACTION BUTTON

Customize a single-press shortcut for golf mode in your Blue Tees Game app device settings.  
Press and hold the button for 3s to Power ON/OFF the device.

The Action Button gives you the choice to utilize audible announcements (GPS Distances, Club Recommendations, Driving Distance) or create a shortcut to your favorite screen.

1. Open and connect Player+ to the Blue Tees Game app
2. Select 'Device Settings'
3. Scroll down to 'Choose Action Button'

## ACTION BUTTON – AUDIBLE ANNOUNCEMENTS

When 'Audible GPS Announcement' is selected as your Action Button, select from the following options:

 
- Front / Center / Back
- Center Only
- Center Distance with Club Suggestions \*Must be saved in the mobile app
- Club Suggestions Only \*Must be saved in the mobile app
- Driving Distance

## CLUB SUGGESTIONS

In the Blue Tees Game app, you have the option to add your distances to your profile for quick and simple club suggestions to be made from anywhere on the golf course.  
To add your stock distances on the mobile app, navigate to the 'Club Distances' section in your main menu and select 'My Bag' to customize your setup.



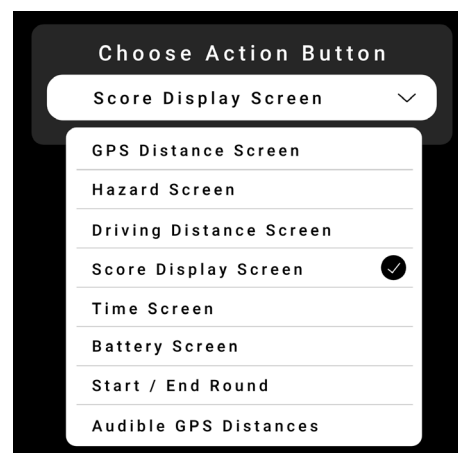

## ACTION BUTTON – SCREEN SHORTCUTS

- GPS Distance
- Hazards
- Driving Distance
- Score Display
- Time
- Battery


 


# LINKS PARTY PAIRING

## PAIRING MULTIPLE PLAYER+ SPEAKERS:

1. Turn on the Player+ Speakers (2) you would like to pair.
2. On your mobile device, connect via Bluetooth to the Host/Main Player+ Speaker, ensure that the Guest Speaker is NOT Bluetooth connected to any mobile device.
3. Place the Player+ Speakers within 3 feet (1 meter) away from each other.
4. Links Party Pairing (TWS) options:
  - A. Tap the  icon to activate TWS pairing on the Host/Main Player+ Speaker. The Player+ Speaker will provide an audible sound once paired and both devices will display a BLUE  icon.
  - B. Long press the  button to activate TWS pairing on the Host/Main Player+ Speaker. The Player+ Speaker will provide an audible sound once paired and both devices will display a BLUE  icon.

## TO DISCONNECT TWS PAIRED DEVICES:

Tap  on the LCD screen on both speakers until it is unhighlighted (gray) or HOLD the  button.




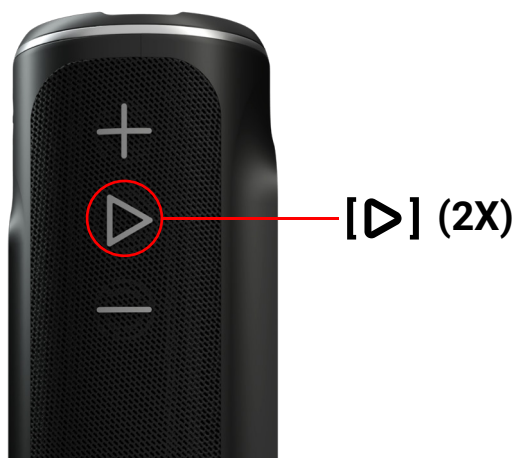 
### NOTE:

- If the Host Speaker is connected to the mobile device playing music, then after TWS disconnects, Host Speaker will continue to play music and Guest Speaker will turn to pairing mode.
- If the Host Speaker does not connect to your phone, then after TWS disconnects, BOTH speakers (Host and Guest) will turn to pairing mode.
- Player+ Speaker cannot TWS link with the Player Speaker.



# INDOOR / OUTDOOR EQ MODE

 
Double Press the  Play/Pause button to switch between Indoor / Outdoor EQ modes.



## PREMIUM SUBSCRIPTION



Log in to your Blue Tees Game app to subscribe and unlock the premium golf features.

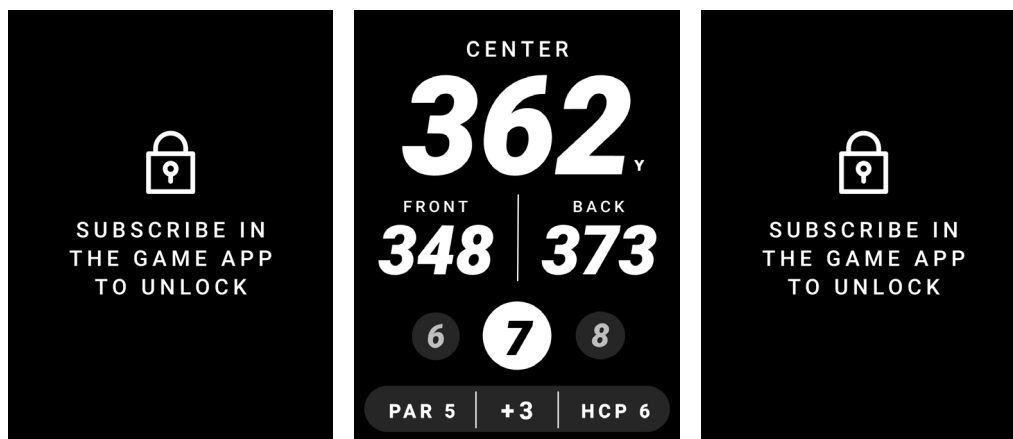

Contact Customer Service for questions regarding the Premium Subscription at [support@blueteesgolf.com](mailto:support@blueteesgolf.com)



# MOBILE APP PLAYER+ SETTINGS

Select device settings underneath 'Devices' on the main page of the app  
OR  
While in a round of golf, swipe up on the footer menu and navigate to 'Devices'

## FIND YOUR PLAYER+

Play Sound: Audibly play a sound to locate your Player+ speaker if connected via Bluetooth to the Blue Tees Game app

**COLOR MODE** - DARK is Default: Choose color mode

**DARK**

**LIGHT**

## LOW POWER MODE

Reduce brightness to 70%

Reduce max volume to 70%

Screen goes to sleep after five (5) seconds of inactivity, tap to wake

**ON**

**OFF**

**UNITS** – YARDS is Default: Choose the unit of measurement

**YARDS**

**METERS**

**CENTER ONLY** – NEVER is Default: Select an option for center distance only past 250 yards (Front/Center/Back under 250 yards), center distance always, or Front/Center/Back always (OFF)

**PAST 250**

**ALWAYS**

**NEVER**

**CHOOSE ACTION BUTTON** – AUDIBLE GPS DISTANCES is Default:

See page 13 for more details

AUDIBLE GPS DISTANCES

GPS DISTANCE

HAZARDS

DRIVING DISTANCE

SCORE DISPLAY

BATTERY

TIME

**DISPLAYED TIME** – 12 HOUR is Default: Choose either 12 HOUR or 24 HOUR time display

**12 HOUR**

**24 HOUR**



# TROUBLESHOOTING

## **If speaker does not power on:**

Firmly press the 'Crossed Tees' Power/Action button for five (5) seconds  
Ensure your unit is fully charged, if power button does not respond after being fully charged, contact customer support

## **If speaker turns off while being used:**

Battery charge level is low, recharge battery for 3-4 hours

## **If speaker audibly turns on but LCD touchscreen does not turn on or respond:**

Firmly press the 'Crossed Tees' Power/Action button for five (5) seconds to turn OFF, keep speaker power OFF for five (5) seconds, firmly press the 'Crossed Tees' Power/Action button for five (5) seconds to turn ON. If LCD screen does not respond after restarting, contact customer support

## **If speaker has no sound:**

Ensure the speaker is connected via Bluetooth to your desired mobile device  
Ensure the volume on your speaker and mobile device are at audible levels  
Firmly press the 'Crossed Tees' Power/Action button for five (5) seconds to turn OFF, keep speaker power OFF for five (5) seconds, firmly press the 'Crossed Tees' Power/Action button for five (5) seconds to turn ON

## **If speaker still has no sound, contact customer support**

## **If speaker has poor sound:**

Move speaker and mobile device within 15 feet or 3 meters of each other

## **If speaker will not pair via Bluetooth:**

Move speaker and mobile device within three (3) feet or one (1) meter of each other  
On your speaker settings and mobile device settings, turn Bluetooth ON and ensure your speaker is in pairing mode

## **If my speaker is playing music, but not displaying yardages:**

Ensure your device is registered and connected to the Blue Tees Game mobile app  
After connecting to the mobile app, select 'Start Round'

## **If my speaker disconnected from my mobile app:**

Speaker will enter auto-pair mode and reconnect once in range of your mobile device, if your device does not reconnect, navigate to your device settings in the mobile app and select "CONNECT"

<b>Product Name</b>	<b>Smart Bluetooth Speaker</b>
<b>Model Name</b>	<b>Player+ Bluetooth</b>
<b>Bluetooth Version</b>	<b>5.3</b>
<b>Bluetooth Working Distance</b>	<b>10 meters (~30 feet)</b>
<b>Power Bank</b>	<b>Output: USB-A 5V/2A</b>
<b>Auto-Off (Bluetooth NOT Connected)</b>	<b>10 minutes</b>
<b>Battery Type</b>	<b>Internal rechargeable lithium-ion battery (non-replaceable)</b>
<b>Battery Capacity</b>	<b>3450mAh</b>
<b>Working Time (Golf Mode)</b>	<b>100% Volume: 4 hours 70% Volume: 8.5 hours 50% Volume: 11 hours 30% Volume: 12.5 hours</b>
<b>Charging Time</b>	<b>4 hours (under 2A)</b>
<b>Input Type (Voltage/Current)</b>	<b>USB-C (5V/0.5-2.0A)</b>
<b>Output Type (Voltage/ Current)</b>	<b>USB-A (10W=5V/2A)</b>
<b>Waterproof Grade</b>	<b>IPX7</b>
<b>Driver Unit</b>	<b>48mm, 30W=15W*2 (10W Rated / 15W Max)</b>
<b>Dimensions</b>	<b>210mm * 83.52mm (+/- 5mm)</b>
<b>Weight</b>	<b>800g (+/-50g)</b>
<b>Temperature Range (Operational)</b>	<b>-5°C to 60°C</b>
<b>Temperature Range (Standby)</b>	<b>-25°C to 75°C</b>
<b>Temperature Range (Charging)</b>	<b>0°C to 45°C</b>
<b>Storage Environment Temperature</b>	<b>-5°C -35°C RH &lt;70%</b>



# IMPORTANT SAFETY INFORMATION

## NOTES:

1. Please read this manual carefully before use and store for reference.
2. Ensure product is fully charged before first use.
3. Use a certified adapter that has passed national safety certification.
4. Be sure to fully charge once a month to maintain its performance.
5. Do not use this product in an extremely cold or hot environment. (Temperature range is beyond 5°C – 35°C) If used beyond the range, the product may stop automatically to protect the internal circuit.
6. When charging in a high temperature environment, the product may automatically stop charging to protect the battery. The charging indicator will quickly flash to indicate that the environmental temperature or the product internal temperature is too high.
7. Storage environment temperature: -5°C ~ 35°C RH<70% (recommended 25°C±5).
8. Use caution when using the built-in magnetic strip to attach the Player+ Speaker to the golf cart. Be careful driving over rough terrain, heavy bumps, potholes and/or curbs can cause the speaker to fall off, incurring damage that is not covered under the two-year limited warranty.
9. The magnetic strip on the Player+ Speaker is specifically designed to only fit on the vertical golf cart pole.
10. Ensure the magnetic strip is securely flat, aligned, and free of debris when magnetically attached to a surface.

## IMPORTANT SAFETY INSTRUCTIONS:

1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.
2. Do not use this product in dusty, humid, dry, and high-temperature environments.
3. Do not place this product near mechanical vibration, a heat source, in direct sunlight, or in dusty areas.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains, etc., during use.
5. If the product is damaged (power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls, etc.), it must be repaired.
6. When the product is fully charged, do not connect it to the charger for further long-term charging.
7. The maximum ambient temperature should not exceed 40°C.
8. This speaker supports mobile phones/tablets/PCs, etc.

# REGULATORY / LEGAL INFORMATION

## Agency Approvals

United States FCC, Canada IC, Europe CE, United Kingdom (UKAS)

## FCC STATEMENT

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

**FCCID: 2A5DA-PLYR-P**

**ICCID: 28315-PLYRP**



# COMPLIANCE



## Disposal of Electric and Electronic Equipment

(Applicable in the EU and other European countries with separate collection systems)  
This device contains electric parts; therefore, it cannot be disposed of as normal household waste. Instead, it should be taken to your respective collection point for community recycling, your local waste company, or the store where you originally purchased your device.

1. Registration and Declaration - EEE manufacturers are required to register with the National Authority in each EU member state where they market products. The contact points for every member state are published on the europa.eu website. Each member state authorizes private organizations to register producers and to collect and prepare materials for recycling.

A common method has been established per 2017/699 for the calculation of the weight of EEE put into the market for each EU member state along with an associated method for the calculation of the quantity of WEEE generated in each EU member state. The EU has WEEE calculation tools customized for each one of the member states.

If you manufacture a product in the EU but export 100% of it to non-EU markets, then your organization is not considered to be a manufacturer for the purposes of the WEEE Directive. However, if any portion of the production is sold within the EU, the company is considered to be a producer under EU WEEE regulations.

**△ WARNING:** This device contains a neodymium magnet. Magnets could affect the functioning of pacemakers and implanted heart defibrillators. If you use these devices, keep sufficient distance from the magnet. Warn others who wear these devices from getting too close to magnets. Magnet may lose part of its adhesive force permanently if exposed to temperatures above 1750F (800C). Magnets produce far-reaching, strong magnetic fields. They could damage TVs and laptops, computer hard drives, credit and ATM cards, data storage media, mechanical watches, hearing aids and speakers. Keep unit away from devices and objects that could be damaged by strong magnetic fields.

## ISED STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

# ENHANCED WARRANTY

Blue Tees Golf® ensures your Player+ GPS Speaker is protected against defects in materials and workmanship for 2 years from the date of purchase. Should a defect occur, we'll either repair or replace the product at our discretion. Simply return the product using our prepaid postage labels. Remember to include your proof of purchase for warranty validation.

Our warranty now includes coverage for the glass screen but excludes damage caused by misuse or improper handling. Any repairs must be carried out by the Blue Tees Golf® Authorized Service Department to maintain warranty coverage.

We advise against the use of polish or buffing compounds on the screen as they could deteriorate the factory surface. Any usage of such materials will void the warranty. Instead, consult our Blue Tees Golf customer service team for any questions

At Blue Tees Golf®, we're committed to ensuring your satisfaction and enhancing your golfing experience.





## **Need Help?**

Questions or concerns about your Player+?  
Reach out to us at [support@blueteesgolf.com](mailto:support@blueteesgolf.com)

---

[www.blueteesgolf.com](http://www.blueteesgolf.com)

---

[@blueteesgolf](https://www.instagram.com/blueteesgolf)



***DESIGNED IN CALIFORNIA***

CHINA. CHINE. CINA. KINA.