

PLAYER GO

COMPACT GPS MAGNETIC GOLF SPEAKER



USER MANUAL

TABLE OF CONTENTS

FEATURES	3
GENERAL	4
Get to know the Player GO	4
Built-In Magnetic Strip	4
What's in the Box?	5
Basic Operation	5
Player GO SETUP/HOW TO USE	6
Turning Power On/Off	6
Pairing to your speaker	6
Play Golf	6
CHARGING THE DEVICE	7
INDOOR/OUTDOOR EQ MODE	8
LINK PARTY PAIRING	8
MOBILE APP- DEVICE SETTINGS	9
ACTION BUTTON	9
Audible Announcements	9
Shot Tracking	9
Driving Distance	9
TROUBLESHOOT/FAQ	10
PRODUCT SPECIFICATIONS	11
IMPORTANT NOTES	12



TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	13
COMPLIANCE	14
ENHANCED WARRANTY	15

DOWNLOAD THE FULL DIGITAL MANUALS



FEATURES


((238))
Yards
AUDIBLE DISTANCES


ACTION BUTTON


AUTO-COURSE RECOGNITION


PARTY MODE PAIRING


MAGNETIC STRIP


COMPACT DESIGN


150 FOOT RANGE


16+ HOURS BATTERY


IPX7 WATER PROOF

SUPPORTED BY



 | **GAME**
GPS GOLF APP

Get access to 40K global course maps, track your shots, analyze your stats and unlock new features in your Player GO to take your game to the next level.

GET TO KNOW THE PLAYER GO

- ① Power/Action Button
- ② Magnetic Strip
- ③ Play/Pause
- ④ Volume Up (+)
- ⑤ Volume Down (-)
- ⑥ USB-C Charge & Data Port



BUILT-IN MAGNETIC STRIP

SUPER STRONG MAGNET


ATTACHES TO THE CART OR ANY MAGNETIC SURFACES

- The magnetic strip on the RINGER is specifically designed to only fit on the vertical pole of the golf cart.
- Ensure the magnetic strip is securely flat, aligned, and free of debris when magnetically attaching to a surface.

WARNING: Use caution when using the built-in magnetic strip to attach the Ringer to the golf cart. Be careful driving over rough terrain, heavy bumps, potholes and/or curbs as this can cause the device to fall off, incurring damage that is not covered under the two-year limited warranty.




WHAT'S IN THE BOX?

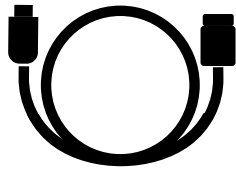


USB-C to USB-A
Charging/Data Cable




Blue Tees Golf
Crossed Tees Sticker

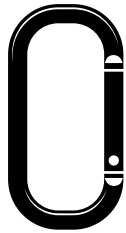

Mountaineer
Buckle

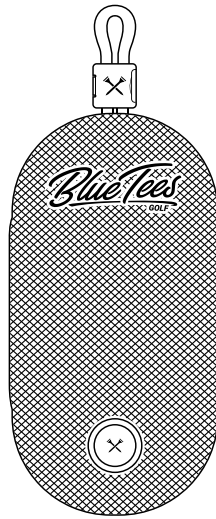

Player GO
GPS Connected
Compact Speaker

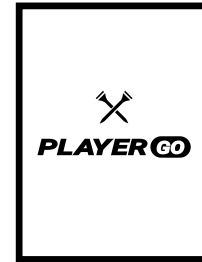

Quick-Start
Guide

BASIC OPERATION

✕ Power Button/Multi-function Button

Short press ✕ for Action Button

Long press ✕ for 3s to Power On/Off

Short press ✕ to Answer/End Call

Long press ✕ to Reject Call

Long press ✕ to Transfer Call to Phone (while on call)

[▶] Play/Pause Button

Short press [▶] to Play/Pause music

Long press [▶] to Activate TWS

[+][-] Plus/Minus Button

Short press [+] to turn volume up

Long press [+] to skip to next track

Short press [-] to turn volume down


Long press [-] to go to previous track

Long press [+] and [-] simultaneously to disconnect Bluetooth



PLAYER GO SETUP

POWER ON/OFF & PAIRING (1st time)

- Turn on your Player GO Speaker by pressing and holding  for three (3) seconds. You will hear a prompt tone indicating that the Player GO Speaker has been turned on. The Player GO Speaker will automatically enter into Bluetooth pairing mode.
- On your mobile device, turn on the Bluetooth feature. Select “Blue Tees Player GO” from the available Bluetooth devices list. Keep the mobile device within three (3) feet or one (1) meter away from your Player GO Speaker.

CONNECTING TO THE BLUE TEES GAME APP & PLAY GOLF

- Turn on your Player GO Speaker by pressing and holding [add “X” image] for three (3) seconds. You will hear a prompt tone indicating that the Player GO Speaker has been turned on and will automatically enter into Bluetooth pairing mode.
- Download/Open the Blue Tees Game App. Follow the on-screen instructions to create an account or login.
- Navigate to the ‘Devices’ section, add new device, connect Player GO to your Blue Tees Game account.
- Once connected, type the name of the golf course or location in the search bar to locate a specific golf course.
- Select desired course, number of holes and starting tees.
- Press [add image for “Start Round”]



CHARGING THE DEVICE

This device is powered by a non-removable, built-in lithium-ion battery that can be charged using any standard USB port on your laptop/computer or an AC adapter.

⚠ WARNING: This product uses a Lithium based battery. Lithium batteries can overheat and cause damage if physically abused. Do not use batteries that are damaged or show signs of physical wear.

Note: This device will not charge/operate outside of the approved temperature range (page X)

1. Insert the small end (USB-C) of the provided charging cable into the USB-C charging port on the device.
2. Insert the large end (USB-A) of the provided charging cable into an external power source, such as a USB port on your laptop/computer or an AC adapter.
3. Remain inserted until device is fully charged.


LED CHARGING INDICATION	STATUS
Solid Red	The battery is below 10% or charging
Blinking White	The device is in pairing mode
Solid White	The device is paired and powered on
Solid Green	The device battery is fully charged

INDOOR/OUTDOOR EQ MODE

Double Press the [▶] Play/Pause button to switch between Indoor / Outdoor EQ modes.

- **Indoor:** delivers a richer and more pronounced low-frequency experience for small, immersive listening environments.
- **Outdoor:** prioritizes clarity by enhancing sound projection and amplifying high frequencies, ensuring optimal audio performance in open spaces.

LINK PARTY PAIRING

1. Turn on the two (2) speakers (Player+ and/or Player GO) you would like to pair.
2. On your mobile device, connect via Bluetooth to the Host/Main Player+ or Player GO Speaker, ensure that the Guest Speaker is NOT Bluetooth or BLE connected to any mobile device.
3. Place the speakers within 3 feet (1 meter) away from each other.
4. Long press the [▶] button to activate TWS pairing on the Host/Main Speaker. The speaker will provide an audible sound once paired and, if applicable, a BLUE  icon will display on Player+

Note:

- If the Host Speaker is connected to the mobile device and playing music, then after TWS disconnects, Host Speaker will continue to play music and Guest Speaker will turn to pairing mode.
- If the Host Speaker does not connect to your phone, then after TWS disconnects, BOTH speakers (Host and Guest) will turn to pairing mode.
- Player GO Speaker cannot TWS link with the Player Speaker.



MOBILE APP PLAYER GO SETTINGS

Select device settings underneath 'Devices' on the main page of the app

FIND YOUR PLAYER GO

Can't find your speaker in the golf cart? If still Bluetooth connected, tap the 'PLAY SOUND' to hear a brief sonar cue to locate your device

ACTION BUTTON

Customize a single-press action for golf mode in your Blue Tees Game app device settings. Press and hold the button for 3s to Power ON/OFF the device.

1. Open and connect Player+ to the Blue Tees Game app
2. Select 'Device Settings'
3. Scroll down to 'Choose Action Button'

- **AUDIBLE ANNOUNCEMENT**
 - Front/Center/Back Distances
 - Center Distance
 - Center Distance with Club Assist
 - Must be saved in the mobile app
 - Club Assist
 - Must be saved in the mobile app
 - Driving Distance

UNDERLINE = SUBSCRIPTION

CLUB ASSIST

In the Blue Tees Game app, you have the option to add your distances to your profile for quick and simple club suggestions to be made from anywhere on the golf course. To add your stock distances on the mobile app, navigate to the 'Club Distances' section in your main menu and select 'My Bag' to customize your setup.

DRIVING DISTANCE

When choosing the desired golf course in the Blue Tees Game mobile app, a tee box selection is also made, using this tee box and starting location on each hole, our GPS data system calculates for the distance from the tee box, 'Driving Distance', by using a predetermined location for each tee box set.

TROUBLESHOOTING

If speaker does not power on:

- Firmly press the 'Crossed Tees' Power/Action button for five (5) seconds
- Ensure your unit is fully charged, if power button does not respond after being fully charged, contact customer support

If speaker turns off while being used:

- Battery charge level is low, recharge battery for 2-3 hours

If speaker has no sound:

- Ensure the speaker is connected via Bluetooth to your desired mobile device
- Ensure the volume on your speaker and mobile device are at audible levels
- Firmly press the 'Crossed Tees' Power/Action button for five (5) seconds to turn OFF, keep speaker power OFF for five (5) seconds, firmly press the 'Crossed Tees' Power/Action button for five (5) seconds to turn ON
- If speaker still has no sound, contact customer support

If speaker has poor sound:

- Move speaker and mobile device within 15 feet or 3 meters of each other
- If speaker will not pair via Bluetooth
- Move speaker and mobile device within three (3) feet or one (1) meter of each other
- On your speaker settings and mobile device settings, turn Bluetooth ON and ensure your speaker is in pairing mode

If my speaker is playing music, but not announcing yardages:

- Ensure your device is registered and connected to the Blue Tees Game mobile app
- Ensure your 'Action Button' is saved as "Audible GPS Announcement" and save desired options
- After connecting to the mobile app, select 'Start Round'

If my speaker disconnected from my mobile app:

- Speaker will enter auto-pair mode and reconnect once in range of your mobile device, if your device does not reconnect, navigate to your device settings in the mobile app and select "CONNECT"



PRODUCT SPECIFICATIONS


Model Name	Player GO
Bluetooth Version	BT 5.3
Bluetooth Working Distance	Up to 50m (~150ft)
Auto-Off (Bluetooth NOT connected)	10 minutes
Battery Type	2 x 18650 lithium battery cells (UN 38.3)
Battery Capacity	3.7V / 2600mAh
Working Time (Active GPS)	50% Volume: ~ 16 hours
Charging Time	2-3 hours (under 2A)
Input Voltage/Current	Type-C USB 5V/0.5-1.0A
Waterproof Grade	IPX7
Driver Unit	48mm, 15W*1 (10W Rated / 15W Max)
Dimensions	149mm X 77mm X 48mm
Weight	12.5 ounces (354.37 grams)
Temperature Range (Operational)	-5°C to 35°C
Temperature Range (Standby)	-5°C to 60°C
Temperature Range (Charging)	0°C to 45°C
Storage Environment Temperature	-5°C ~ 35°C RH<70% (recommended 25°C±5)



IMPORTANT NOTES


To help ensure reliable operation, the following care and maintenance guidelines are recommended:

1. Please read this manual carefully before use and store for reference.
2. Do not put the device in an environment out of a temperature range between -5-60° C.
3. Before use, fully charge the device using a certified adapter that has passed national safety certification and the provided USB-C charging cable for minimum 2-3 hours.
4. Do not attempt to open the Player GO Speaker. Unit contains a lithium ion battery.
5. Do not attempt to open, disassemble or service the internal battery. The battery is not replaceable.
6. Do not crush, puncture or short the battery's external contacts.
7. Be sure to fully charge once a month to maintain its performance.
8. Do not use this product in an extremely cold or hot environment. (Temperature range is beyond 5°C – 35°C) If used beyond the range, the product may stop automatically to protect the internal circuit.
9. When charging in a high temperature environment, the product may automatically stop charging to protect the battery. The charging indicator will quickly flash to indicate that the environmental temperature or the product internal temperature is too high.
10. Storage environment temperature: -5°C ~ 35°C RH<70% (recommended 25°C±5).
11. Use caution when using the built-in magnetic strip to attach the Player Go Speaker to the golf cart. Be careful driving over rough terrain, heavy bumps, potholes and/or curbs can cause the speaker to fall off, incurring damage that is not covered under the two-year limited warranty.
12. The magnetic strip on the Player GO Speaker is specifically designed to only fit on the vertical golf cart pole.
13. Ensure the magnetic strip is securely flat, aligned, and free of debris when magnetically attached to a surface.
14. This unit is not waterproof and should not be submerged in any liquids.

-  **WARNING:** The Magnetic Strip feature included with The Player GO Speaker contains a Neodymium magnet. Magnets could affect the functioning of pacemakers and implanted heart defibrillators. If you use these devices, keep sufficient distance from magnet. Warn others who wear these devices from getting too close to magnets.
- Magnet may lose part of its adhesive force permanently if exposed to temperatures above 175° F (80° C).
 - Magnets produce far-reaching, strong magnetic field. They could damage TVs and laptops, computer hard drives, credit and ATM cards, data storage media, mechanical watches, hearing aids and speakers. Keep unit away from devices and objects that could be damaged by strong magnetic fields.
 - Keep magnets at least 3 feet away from these devices.

IMPORTANT SAFETY INFORMATION

1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.
2. Do not use this product in dusty, humid, dry, and high-temperature environments.
3. Do not place this product near mechanical vibration, a heat source, in direct sunlight, or in dusty areas.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains, etc., during use.
5. If the product is damaged (power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls, etc.), it must be repaired.
6. When the product is fully charged, do not connect it to the charger for further long-term charging.
7. The maximum ambient temperature should not exceed 40°C.
8. This speaker supports mobile phones/tablets/PCs, etc.

 **WARNING:** This product uses a Lithium based battery. Lithium batteries can overheat and cause damage if physically abused. Do not use batteries that are damaged or show signs of physical wear.

COMPLIANCE

⚠ CAUTION: use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.

Important Note: Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 0 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC: 2A5DA-PLYR-GO

IC: 28315-PLYRGO



ENHANCED WARRANTY

TWO-YEAR LIMITED WARRANTY

Your Blue Tees Golf® speaker is warranted to be free of defects in materials and workmanship for two years after the date of purchase. In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than a Blue Tees Golf® Authorized Service Department.

REGISTER YOUR SPEAKER WARRANTY

Scan the QR code below to register your two year limited warranty or visit us at www.blueteesgolf.com/pages/register



PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

Legal Disclaimer

By using this product, you agree that Blue Tees Enterprises, LLC Products will not be held legally responsible for any injury or damage to you or any person or property caused by the user's improper operation and/or poor judgment while using this product.

Note: See Limited Warranty for other limitations to our liability.





Need Help?

Questions or concerns about your Player GO?
Reach out to us at support@blueteesgolf.com

www.blueteesgolf.com

[@blueteesgolf](https://www.instagram.com/blueteesgolf)



DESIGNED IN CALIFORNIA

CHINA. CHINE. CINA. KINA.