



SERIES 2 PRO

 
RANGEFINDER USER MANUAL

Component Description


- 1 - Laser Emitter / Objective Lens
- 2 - Laser Receiving Lens
- 3 - Battery Compartment (CR2-3V)
- 4 - Eyepiece
- 5 - Focus Ring
- 6 - Power / Start Button
- 7 - Mode / Meter & Yard Button




Display

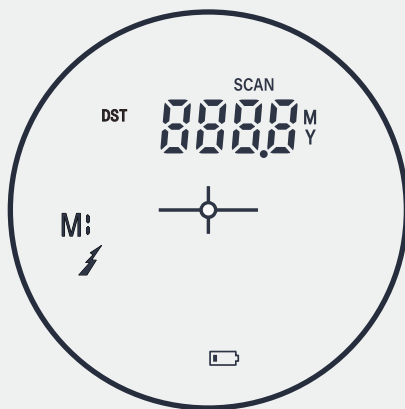

Scan Mode

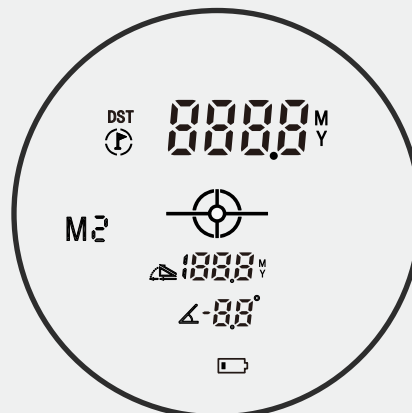 

Golf Mode

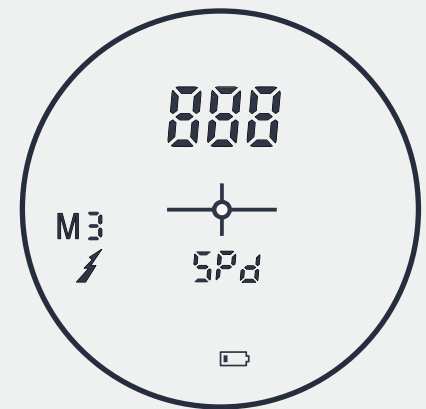 

Speed Detection Mode

SCAN ----- Continuous Measuring Icon

DST ----- Distance Icon

M
Y ----- Meter or Yard Icon

M: ----- Mode Icon

⚡ ----- Laser Icon

⊕ ----- Aiming Cross

0000 ----- Beeline Distance

🚩 ----- Flaglock Icon

⊕ ----- External circle keeps flash before flaglock

🔋 ----- Low Battery Indicator

▲ 1000 ----- Slope Adjustment

∠-00° ----- Angle Data

000 ----- Speed Data

SPD ----- Speed Icon

(Used for Hunting Applications
- Default Unit: KM/h)


Operation Instruction & Settings

Eyepiece

To focus the eyepiece, rotate the focus ring clockwise or counterclockwise.



Battery

This Series 2 Pro is charged by one CR2-3V battery. A brand new battery usually supports 5,500 - 6,000 times measuring. When the low battery indicator “” appears on the LCD screen, indicates that the battery should be replaced.

Notice: The CR2 battery is a non-rechargeable battery. In order to avoid any



harm to yourself or the environment, please throw the disposed battery in a designated trash can.

Power ON/OFF

1. Press the power button to activate the device
2. The Series 2 Pro will automatically deactivate after 8 seconds without any operation. To re-activate the device, follow the step 1.

Unit Change (M ↔ Y)

Press and hold the Mode button for 3 seconds, the measuring unit will automatically change from meter to yard, and vice versa.



Continuous Scan Mode

Hold down “Power/Start” button, the data on the LCD screen will change as you move. (Applicable to Mode 1)

Flaglock

Select Mode 2, and simply press the power button. The rangefinder will automatically search for the flag. The external circle around the aiming cross will keep flashing, once the flag is locked. It stops flashing, you will feel a pulse vibration to notify you have locked on and the flaglock icon will appear on the screen.



Start



Searching



Target Captured

Slope Distance Correction Technology

 
Slope Technology provides the golfer with elevation adjusted distances to the hole. Instead of a straight-line distance to the target, slope technology instantly calculates what the uphill or downhill position means in terms of yards/meters. Example: A 156 yard, 7 degree uphill shot really plays at 176.8 yards, 20 yards longer than a straight line distance (applicable to **Mode 2**).



Mode Selection


Press the “M” button to change the setting between the following modes.

M1- Continuous Scan Mode

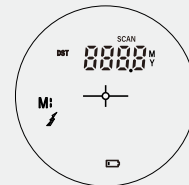


M2- Golf Mode

 (Flaglock + Jolt + Slope + Angle)

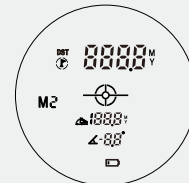

M3- Speed Mode

 (Used for Hunting Applications - Default Unit: KM/h)

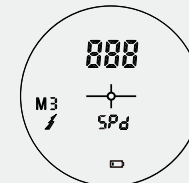

Packing List

Series 2 Pro Rangefinder x 1	Blue Tees Sticker x 1
Blue Tees Care Insert x 1	Mountaineering Buckle x 1
Instruction Manual x 1	Premium Carrying Case x 1
CR2 3.0V Battery x 2	Blue Tees Cleaning Cloth x 1
Lanyard x 1	

Technical Data

Max. Range	800 Yards
Magnifications	6X
Field of View	7 Degrees
Objective Lens	25mm
Eyepiece Lens	16mm
Exit Pupil Diameter	3.9mm
Laser Type	905nm(safe to eyes)
Lens Coating	Fully Multi-Coated(FMC)
Battery	CR2-3V *2
Measuring Time	0.5-1 Sec
Distance Measurement Accuracy	±1m or 0.1%
Net Weight	167g
Dimensions	112*43*74mm
Low Battery Indicator	Yes
Slope	Yes
Flagpole Lock	Yes
Scan Mode	Yes
Vibration	Yes
Weather-proof	Yes

Notice

1. To protect the lens coating, do not touch lens surface.
2. If the lens becomes dirty, gently wipe with your Blue Tees cleaning cloth.
3. Series 2 Pro has been precisely calibrated. Do not disassemble. If a repair is needed, please contact support@blueteesgolf.com.
4. Please store the Series 2 Pro in a dry, cool, and ventilated place in the carrying case provided. Avoid direct sunlight and high temperature.
5. Avoid collision or heavy pressure when carrying or using it.
6. Rain and fog may affect the laser raypath, which may cause incorrect measurements.

Ranging Tips

- Lighter colors will usually reflect better than darker colors.
- Be aware that snow, rain and fog will have an adverse effect on ranging ability.
- Shiny, reflective surfaces will usually reflect better than dull, textured surfaces.
- Ranging under cloud cover can improve laser performance compared to bright sunny conditions.
- The position of the sun compared to the rangefinder and/or range target will greatly affect performance.
- Flat surfaces perpendicular to the laser pulse will reflect better than curved surfaces or surfaces angled in relation to the laser pulse.
- At longer distances, larger objects will be easier to range than smaller objects.

Warning

1. Do not stare directly at or into the laser beam.
2. Do not aim device at the sun. Your eyes and the components inside can be permanently damaged looking into the sun with this device.
3. Keep the eyepiece away from direct sunlight.
4. Do not put the device in an environment out of a temperature range between 50 - 140°F or 10 - 60°C.
5. Before use, remove plastic wrap from battery. Lift the battery compartment door and insert the battery at a 25 degree angle so that the flat end of the battery touches the coiled part of the battery chamber.



FDA SAFETY

Class 1 laser product in accordance with IEC 60825-1:2007

Complies with 21 CFR 1040.10 and 1040.11 for laser products except for deviations pursuant to laser Notice No.50, dated June 24, 2007.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off or on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver.
3. Consult the dealer or an experienced radio / TV technician for help.

 
Disposal of Electric and Electronic Equipment

This device contains electric parts. Therefore, it cannot be disposed of as normal household waste. Instead, it should be taken to your respective collection point for community recycling, your local waste company or the store where you originally purchased your device.

AIM. CLICK. SHOOT.

Series 2 Pro is designed to work right out of the box.
The easiest and most accurate rangefinder you will ever use.

TWIST TO FOCUS



MODE

*Press once
for Mode 1*

*Press twice
for Mode 2*

*Press three
times for
Mode 3*

*Hold for 3
seconds to
switch
between
yards &
meters*



POWER

*Press once to
turn on*

*Aim at the flag
or target*

*Press again to
lock on flag*



Need Help?

Questions or concerns about your new Series 2 Pro?
Reach out to us at support@blueteesgolf.com

www.blueteesgolf.com

[@blueteesgolf](https://www.instagram.com/blueteesgolf)



DESIGNED IN CALIFORNIA