



oice **XL**

User Guide

Components



GB VOICE XL



GB VOICE XL_RC
(Remote control)



USB cable
(C-Type)



Quick guide

Device Overview



1	Time/Distance display LED
2	Vibration membrane
3	Remote control
4	Mic.
5	Button part
6	Battery/Status LED
7	Charging port
8	Rope bar
9	Tweeter
10	Woofer
11	QUICK MOUNT (Built-in magnet)

Button Overview



1	Press for 3 sec.: Power ON/OFF One-click while the speaker is on: Check battery level
2	One click: Play/Pause music Double click: Play next song, Triple click: Play previous song
3	Click or hold: Volume up
4	Click or hold: Volume down
5	Power ON: Press for 3 sec., Power OFF: Press for 7 sec. One click: Distance voice guidance and shot tracking recording Double click: Play/Pause music Press for 3 sec.: Applause/Cheering Sound ※ Operates only when connected to the app

Charging and Power Bank Usage Instructions

- Charging: Charge the speaker by connecting the USB-C cable.
 - Power Bank Usage: Use the USB-A port to charge smartphones or other devices.
- ※ If using the power bank while the speaker is turned off, press the power button once.



When using a power bank (USB-A)

When Charging the Voice XL speaker(USB-C)

Battery/Status LED Overview

 
- To check the battery level, press the power button once. The battery level is indicated by four white LEDs, and automatically turn off after 10 sec..



4LEDs : 75~100%



3LEDs : 50~75%



2LEDs : 25~50%

 
 


1LEDs : 25% 이하

- If the battery level drops below 5%, the status LED will flash in red and a battery level warning sound will play every 10 min..



- When charging the speaker while it is turned off, the status LED will light up in red and the white LED will fill up as the battery charges.



- When the charging is complete, the LED will change to green.



- When the speaker is powered on while the USB-C cable is connected during charging or when charging is complete, the LED will change to blue.



Time/Distance LED Overview

- The speaker must be connected to the GOLFBUDDY app for time synchronization. (Time will not be synchronized through Bluetooth connection in smartphone settings.)
- LED ON/OFF, time display format (12-hour/24-hour), LED brightness and inversion can be changed in the settings of GOLFBUDDY app.
- The default display is the time when the app is connected and during golf rounds. When receiving distance voice guidance by clicking the remote control, the distance will be displayed on the LED for 5 seconds.

Voice XL_RC

▶ Detachment of the remote control from the speaker



- Push the attached remote control on the speaker upwards to detach it.

▶ The remote control battery drops below 5%



- When the remote control is powered on and the battery level is below 5%, the LED blinks for 3 sec. with a battery level warning sound every 10 min.

LED

▶ To replace the remote control battery

- By widening the groove on the side of the remote control, disassemble the cover, then insert the CR2032 battery correctly in the +/- direction, and assemble it by aligning it with the side groove.

※ Since there is a risk of injury if you disassemble the remote control with your hands, please use a tool to disassemble it."



Features

▶ Voice XL Speaker Power On/Off

- Press and hold the power button for 3 sec. to turn the speaker on/off with a sound effect.
- ※ If the speaker is not connected via Bluetooth for 10 min. after it is turned on, it will automatically turn off.

▶ Voice XL Remote Control Power On/Off

- Press and hold the remote control button for 3 sec. to turn on with a sound effect.
- Press and hold the remote control button for 7 sec. when the product is turned on to turn it off.
- ※ If no button is pressed for 1 hour, the product will automatically turn off.

▶ Voice XL Speaker Bluetooth Connection and GOLFBUDDY App Device Connection

- After connecting via Bluetooth in your smartphone settings, device connection is required in the GOLFBUDDY app.

 
 
 
 
- Step 1: Connect via Bluetooth in Smartphone Settings

- When the power of the speaker is turned on, the blue LED will flash with a sound effect and automatically search for Bluetooth.




- Connect Voice XL in the Bluetooth settings of your smartphone.

Android smartphone

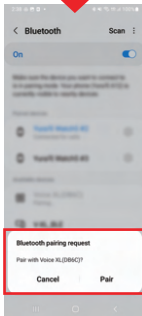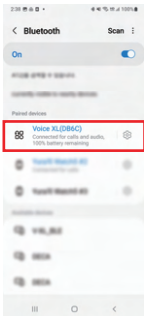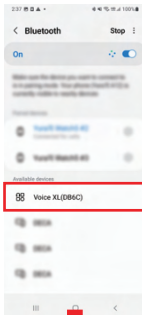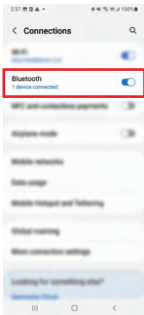

iOS smartphone

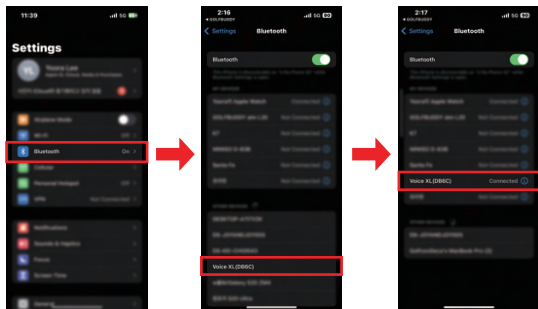 

- After Bluetooth connection, the sound of the smartphone is output through the speaker.
- After Bluetooth connection, you can make phone calls using the built-in microphone in the speaker. When a call is received, press the play button to answer or end the call, and press and hold the play button to reject the call.

 
 
 
 
► Installing the GOLFBUDDY app

- Please download and install the GOLFBUDDY app from Google Play Store or Apple App Store on your smartphone, and proceed with the membership registration.




- Step 2: Connecting the device in the GOLFBUDDY app




- Follow the steps below to connect the device for Voice XL Speaker app integration.

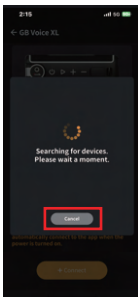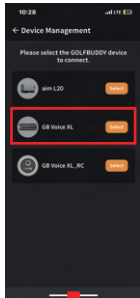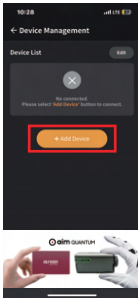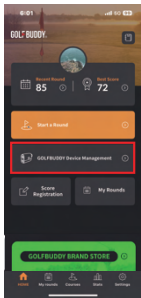

 - After the Bluetooth and device connection for the Voice XL Speaker are completed, the following Voice XL remote control device connection message is displayed, and you can proceed with the device connection by pressing 'Connect'.

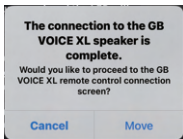

 
 
 
- If you attempt to connect the speaker the GOLFBUDDY app without completing "Step 1: Connecting via Bluetooth in Smartphone Settings", the following message is displayed, and if you press 'Connect', you will move to the Bluetooth connection screen in the smartphone settings.

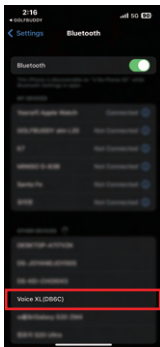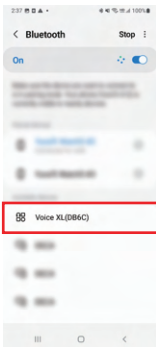
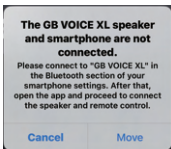


▶ Voice XL Remote Control GOLFBUDDY App Device Connection

※ The remote control is only connected through the GOLFBUDDY app, not through Bluetooth connection in smartphone settings.

    
 
- Press and hold the button for 3 seconds to turn on the remote control. The LED will flash with a sound effect, and it will automatically search for Bluetooth.
- After completing the speaker connection in the Golf Buddy app, proceed with the remote control connection as follows.
- When the remote control is connected, it will light up for 3 seconds with a notification sound.

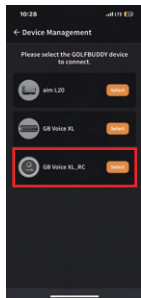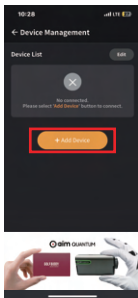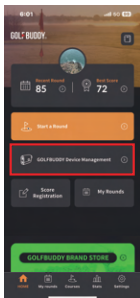

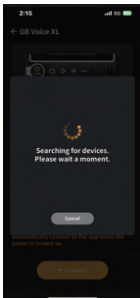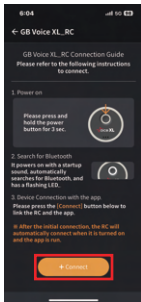




▶ Deleting Connected Devices

 
 
- On the device management screen, press 'Edit' to delete connected devices.

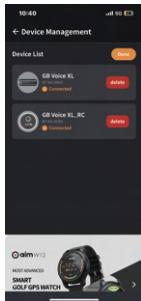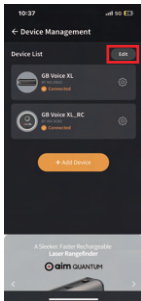

► Voice XL Speaker and Remote Control Device Settings

     - You can access the device settings through the device management screen or the round hole map screen.

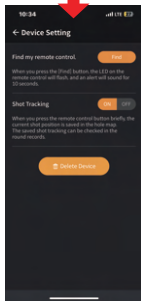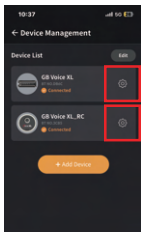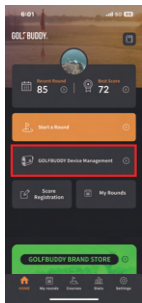

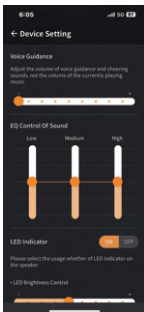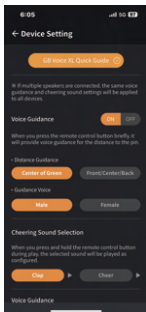

► To reset the Voice XL speaker

 
- Press and hold the power&- button of the speaker for 5 seconds at the same time.
- The speaker will automatically turn on after resetting and require Bluetooth and GOLFBUDDY app device connections.
- Additionally, you can also reset the device from GOLFBUDDY app device settings.



GOLFBUDDY app Features

► Starting a Round with GOLFBUDDY app

- After completing the device connection and setup, follow the steps below to set up your round and start playing.

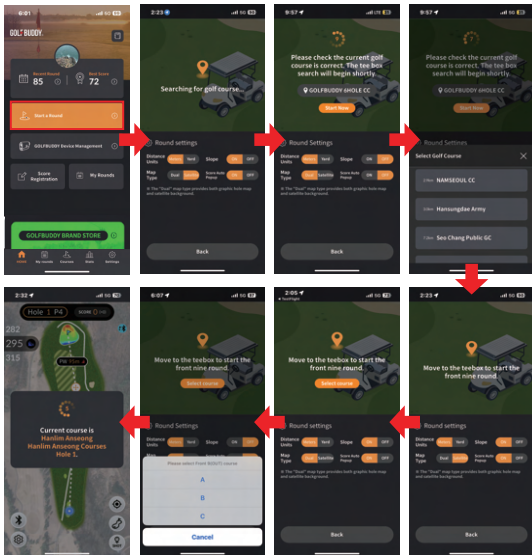

▶ Round Hole Map




1	Hole/Par Info. and changes
2	Score info. and edit
3	Distance to front/Center/back of green
4	Smart Pin Connection icon
5	Switching left/right green
6	Touch IP icon
7	Club recs and distance to touch IP from current location

8	Current location icon
9	Connected device info. and settings
10	Round settings
11	GPS ON/OFF
12	Switching green map/hole map
13	Shot tracking manual entry

▶ GOLFBUDDY App Round Recording and Statistics

 - Based on the entered scores and shot tracking information, various insights are provided.

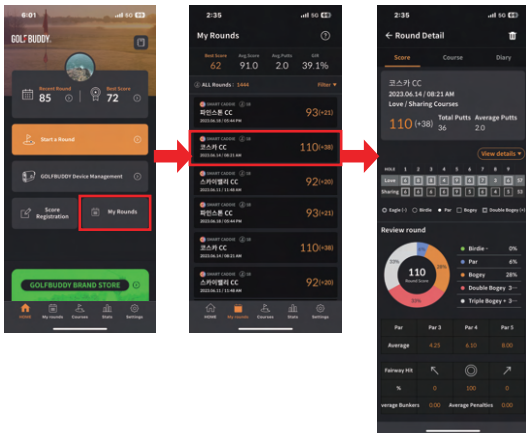

Disclaimer

Before using the device, please carefully review the following precautions.

- After fully charging the product's battery, it can be used for approximately 10 hours at medium volume.
※ The usage time may vary depending on the operating environment.
- Using the product as a power bank may result in decreased usage time.
- If the smartphone moves away from the product, the Bluetooth connection will be lost
- If the Bluetooth has been connected to multiple smartphones, it will connect to the last connected smartphone.
- The product includes a built-in magnet (QUICK MOUNT) that can be attached to golf carts, trolleys, and iron surfaces. Due to its strong magnetic field, caution is required to prevent finger injuries during attachment. Also, please exercise caution while using it, as there is a risk of damage to pacemakers, defibrillators, and other electronic devices.
- There is a risk of damage if the vibration membranes located on both sides of the speaker are pressed with sharp objects or fingers.
- Using the speaker at high volume for an extended period can potentially cause permanent hearing damage or loss. Please exercise caution during use.
- Do not leave the product in direct sunlight for a long period of time, as it may cause damage on the unit.
- Do not store the product in a hot vehicle during the summer months.
- Do not disassemble the product arbitrarily as this will void the warranty.
- Excessive exposure to water or moisture can potentially cause malfunctions.
- Use of 5V/300mA adapter is recommended as fast charging adapters may damage the unit.
- Images on the manual may change after software update.

WARNING

**GOLFBUDDY is not liable for damages caused by user misuse.
(Warranty is void even if it is still in effect.)**

Product Specification

Items	Specification
Size	Voice XL : 192 X 71 X 71 mm Voice XL_RC : 14mm X Φ 32mm
Weight	Voice XL : 24.7oz (700g) Voice XL_RC : 0.4oz (12g)
Usage time	About 10 hours
water resistance	IPX6
Battery	Voice XL : Li-ion-polymer 7.2V 2,600mAh(Rechargeable) Voice XL_RC : CR2032(Replace)
charging time	4~5 hours (Vary depending on the charger)
Speaker	Woofer : 20W, Tweeter : 10W
FREQUENCY RESPONSE (+/- 3dB)	Woofer : 165Hz-16 kHz Tweeter : 1850 Hz-18 kHz
Operating temperature	10°C ~ 50°C, 14°F ~ 122°F

How to Obtain Warranty Service or Other Information

한국	A/S 접수 : 경기도 성남시 중원구 상대원동 442-17, 쌍용 IT 트윈타워 A동 507호 피케이테크 전화번호 : 1644-5721(평일 오전 10시~17시, 토/일/휴일 휴무) 홈페이지 : www.golfbuddy.com
USA	Toll-free : 888-251-6058 / Fax : 888-441-5237 Email : support@golfbuddyglobal.com Address : 10700 Norwalk Blvd. Santa Fe Springs, CA 90670, U.S.A. (USA Office) Website : www.golfbuddyamerica.com

※ If you have any inquiry regarding warranty service, please contact to the shop where you purchased the product

KC 전자파 적합성

상호명 : (주)골프존데카

제품명 : Golf Bluetooth Speaker / Remote Control of Golf Bluetooth Speaker

모델명 : GB Voice XL / GB Voice XL_RC

정격: 스피커 Li-ion-polymer 7.2V 2600mAh/리모컨 CR2023 3V 입력:5V 1A

제조사/제조국가: Shenzhen huaxin communication co.,ltd/중국

인증번호: R-R-DET-GBVOICEXL / R-R-DET-GBVOICEXLRC



FCC

Name of company: GolfzonDeca Inc.

Product name: Golf Bluetooth Speaker / Remote Control of Golf Bluetooth Speaker

Model: GB Voice XL / GB Voice XL_RC

FCC ID:2ALG4GBVOICEXL / 2ALG4GBVOICEXLR

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter

FCC Part 15B

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void your authority to operate the equipment under FCC rules.

For Golf Bluetooth Speaker, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter, End-Users must be provided with transmitter operation conditions for satisfying RF exposure compliance.

ISED

Name of company: GolfzonDeca Inc.

Product name: Golf Bluetooth Speaker / Remote Control of Golf Bluetooth Speaker

Model: GB Voice XL / GB Voice XL_RC

IC ID:27071-GBVOICEXL / 27071-GBVOICEXLR

ISED RF Radiation Exposure Statement: This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF du FCC et IC d'exposition aux radiations: Cet équipement est conforme à l'exposition de FCC et IC rayonnements RF limites établies pour un environnement non contrôlé. L'antenne pour ce transmetteur ne doit pas être même endroit avec d'autres émetteur sauf conformément à FCC et IC procédures de produits Multi-émetteur.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Pour le haut-parleur Bluetooth Golf, Les antennes utilisées pour cet émetteur doivent être installées pour assurer une distance de séparation d'au moins 20 cm par rapport à toutes les personnes et ne doivent pas être localisées ou fonctionner conjointement avec d'autres antennes ou émetteurs. Les utilisateurs doivent avoir des conditions de fonctionnement de l'émetteur pour satisfaire à la conformité à l'exposition RF.

Innovation, Science and Economic Development Canada

Article	RSS-Gen Issue 5, A1 March 2019 8.4 User manual notice (English)
Category	General
Warning	This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Article	RSS-Gen Issue 5, A1 March 2019 8.4 User manual notice (French)
Category	General
Warning	L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) L'appareil ne doit pas produire de brouillage; 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Article	RSS-102 Issue 5 March 2015 2.6 User Manual Requirement
Category	RF Exposure
Warning	This equipment complies with ICSED RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

구성품



GB VOICE XL



GB VOICE XL_RC
(리모컨)



USB 케이블
(C-Type)



퀵가이드

각부 명칭



1	시간/거리 표시 LED
2	진동판
3	리모컨
4	마이크
5	버튼부
6	배터리/제품 상태 표시 LED
7	충전 단자
8	로프 걸이
9	스피커(트위터)
10	스피커(우퍼)
11	퀵마운트(자석)

버튼 설명



1	3초간 클릭 : 전원 ON/OFF 제품이 켜진 상태에서 원클릭 : 배터리 레벨 확인
2	원 클릭 : 음악 재생/정지 더블 클릭 : 다음곡 재생, 트리플 클릭 : 이전 곡 재생
3	클릭 또는 홀드 : 음량 UP
4	클릭 또는 홀드 : 음량 DOWN
5	전원 ON : 3초간 클릭, 전원 OFF : 7초간 클릭 원 클릭 : 거리 음성 안내 및 샷 트래킹 기록 더블 클릭 : 음악 재생/정지 3초간 클릭 : 박수/환호 소리 재생 ※ 앱 기기 연결 시에만 작동

충전 및 보조배터리 사용 설명

- 충전 : USB C-Type 단자에 동봉 된 케이블을 연결하여 제품을 충전합니다.
 - 보조배터리 사용 : USB A-Type 단자를 이용하여 스마트폰 등을 충전할 수 있습니다.
- ※ 제품이 꺼진 상태에서 보조 배터리로 사용 시, 전원 버튼을 한번 눌러주세요.



보조 배터리 사용 시

Voice XL 충전

배터리/상태 표시 LED 설명

- 배터리 잔량 확인을 위하여 전원 버튼을 한번 클릭 합니다.
흰색 LED 4개가 배터리 잔량을 표시하며 10초 후 자동으로 LED가 꺼집니다.



- 배터리 잔량이 5% 이하이면 상태 표시 LED가 빨간색으로 점멸되며, 10분에 한번 씩 배터리 잔량 경고음이 재생 됩니다.



- 제품이 꺼진 상태에서 충전을 하면 상태 표시 LED가 빨간색으로 점등 되며, 배터리가 충전됨에 따라 흰색 LED가 채워집니다.



- 충전이 완료되면 LED가 초록색으로 변경 됩니다.



- 충전 중 또는 충전 완료 시 USB C-Type이 연결된 상태에서 제품 전원을 키면 LED가 파란색으로 변경 됩니다.



시간/거리 표시 LED 설명

- 골프버디 앱에서 기기 연결이 되어야 시간이 동기화 됩니다.
(스마트폰 설정 내 블루투스 연결으로는 시간이 동기화 되지 않습니다.)
- 골프버디 앱의 기기 설정에서 LED ON/OFF, 시간 표시 방식(12시간/24시간), LED 밝기 및 반전 등 변경 가능합니다.
- 앱 연결 및 골프 라운딩 시 기본화면은 시간이며, 리모컨을 클릭하여 거리 음성 안내를 받을 때 LED에 5초간 거리가 표시 됩니다.

Voice XL_RC

▶ 리모컨 분리 방법



- Voice XL 스피커에 결합되어 있는 리모컨을 위로 밀어서 분리 합니다.

▶ 리모컨 배터리 5% 미만 시



- 리모컨의 전원이 켜진 상태에서 배터리 잔량이 5% 이하이면, 10분마다 배터리 잔량 경고음과 함께 LED가 3초간 깜빡입니다.

▶ 리모컨 배터리 교체 방법

- 리모컨 측면의 홈을 벌려 리모컨을 분해 후 CR2032 건전지를 +/- 방향에 맞게 끼우고 측면 홈에 맞추어 조립합니다.

※ 손으로 분해 시 부상의 위험이 있으므로, 도구를 사용하여 리모컨을 분해해주세요.



제품 사용법 및 주요 기능 설명

▶ Voice XL 스피커 켜기/끄기

- 전원 버튼을 3초간 누르면 효과음과 함께 제품이 켜지고/꺼집니다.
- ※ 제품이 켜진 상태에서 10분 동안 블루투스 연결이 되지 않으면, 제품이 자동으로 꺼집니다.

▶ Voice XL 리모컨 켜기/끄기

- 리모컨 버튼을 3초간 누르면 효과음과 함께 제품이 켜집니다.
- 제품이 켜진 상태에서 리모컨 버튼을 7초간 누르면 제품이 꺼집니다.
- ※ 1시간 동안 버튼을 누르지 않으면 자동으로 제품이 꺼집니다.

▶ Voice XL 스피커 블루투스 연결 및 골프버디 앱 기기 연결

- 스마트폰 설정 내 블루투스 연결 후 골프버디 앱에서 기기 연결이 필요합니다.

 
 
 
 
- 1단계 : 스마트폰 설정 내 블루투스 연결하기

- 제품의 전원이 켜지면 효과음과 함께 파란색 LED가 점멸되며 자동으로 블루투스를 검색합니다.




- 스마트폰 블루투스 설정 내 블루투스에서 Voice XL을 연결합니다.

안드로이드 스마트폰

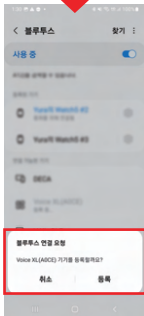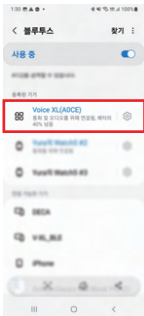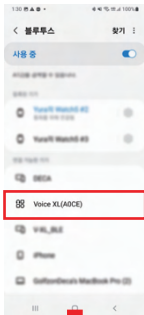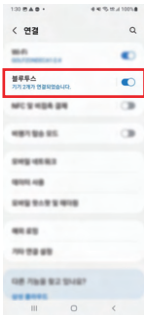

IOS 스마트폰

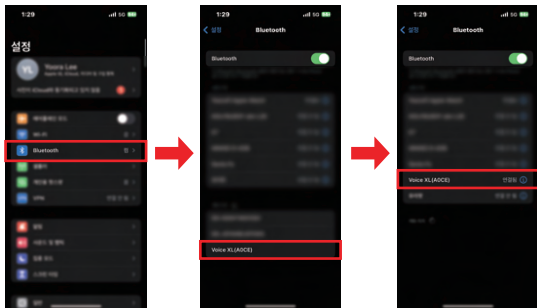 

- 블루투스 연결 후에 스마트폰의 소리가 스피커로 출력됩니다.
- 블루투스 연결 후에 제품에 내장 된 마이크를 이용하여 전화 통화가 가능합니다.
전화가 수신 되면 재생 버튼을 눌러 전화를 받거나/종료하고, 재생 버튼을 길게 눌러 수신 거부를 할 수 있습니다.

 
 
 
 
▶ 골프버디 앱 설치

- 스마트폰의 구글 플레이 스토어 또는 애플 앱 스토어에서 골프버디 앱 다운로드 및 설치 후 회원가입을 진행해주세요.



- 2단계 : 골프버디 앱에서 기기 연결하기




• Voice XL 스피커의 앱 연동을 위하여 아래 화면을 따라 기기 연결을 진행합니다.

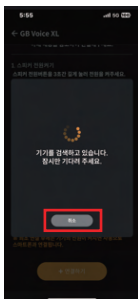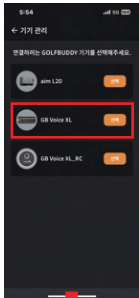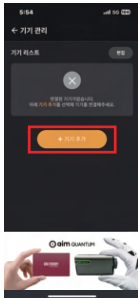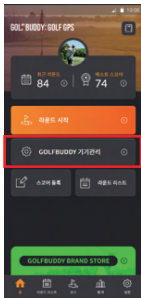

- Voice XL 스피커의 블루투스 연결 및 기기 연결이 완료되면 아래와 같이 Voice XL 리모컨 기기 연결 메시지가 안내되며, ‘연결’을 눌러 기기 연결을 진행합니다.



 
 
 
- “1단계 : 스마트폰 설정 내 블루투스 연결하기” 미 진행 및 골프버디 앱에서 기기 연결을 시도하면 아래와 같은 메시지가 안내되며, 연결하기를 누르면 스마트폰 설정 내 블루투스 연결 화면으로 이동합니다.

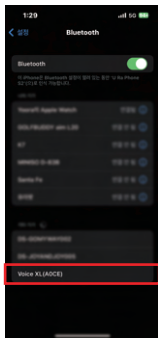
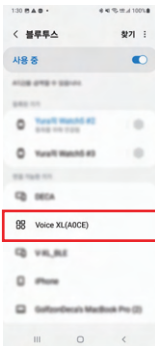
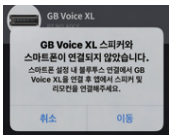


▶ Voice XL 리모컨 골프버디 앱 기기 연결

※ 리모컨은 스마트폰 설정 내 블루투스 연결이 아닌 골프버디 앱에서 기기 연결만 진행합니다.

     
 
- 버튼을 3초간 눌러 제품 전원이 켜지면 효과음과 함께 LED가 점멸되며 자동으로 블루투스를 검색합니다.
- 골프버디 앱에서 스피커 연결을 완료 후 아래와 같이 리모컨 연결을 진행합니다.
- 리모컨이 연결 되면 알림음과 함께 LED가 3초간 점등 됩니다.

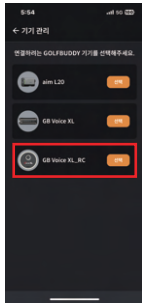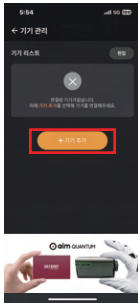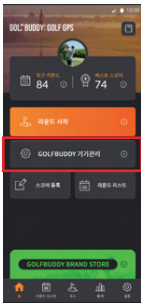

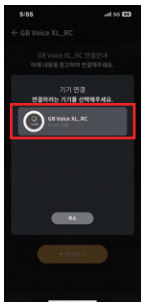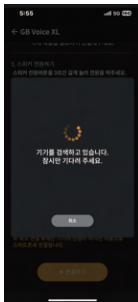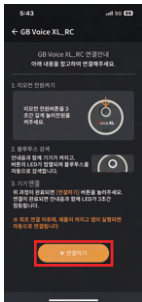



▶ 연결 기기 삭제 하기

  - 기기 관리 화면에서 '편집'을 눌러 연결 된 기기 삭제가 가능합니다.

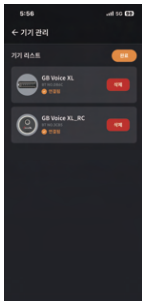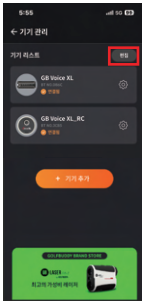

▶ Voice XL 스피커 및 리모컨 기기 설정

  - 기기 관리 화면 또는 라운드 홀 맵 화면에서 기기 관리로 진입하여 설정이 가능합니다.

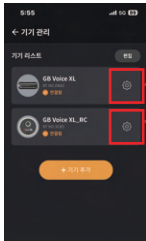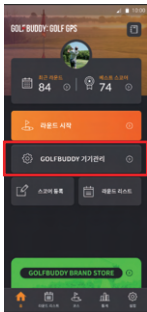



▶ Voice XL 스피커 기기 초기화

 
- 제품의 전원 & - 버튼을 동시에 5초 동안 누르면 초기화를 시작합니다.
- 초기화 이후 제품이 자동으로 켜지며 블루투스 및 골프버디 앱 기기 연결이 필요합니다.
- 기기 초기화는 골프버디 앱 기기 설정에서도 가능합니다.



골프버디 앱 사용법 및 주요 기능 설명

▶ 골프버디 앱 라운드 시작

- 제품 연결 및 설정 완료 후 아래 순서에 따라 라운드 설정 및 라운드를 시작 합니다.

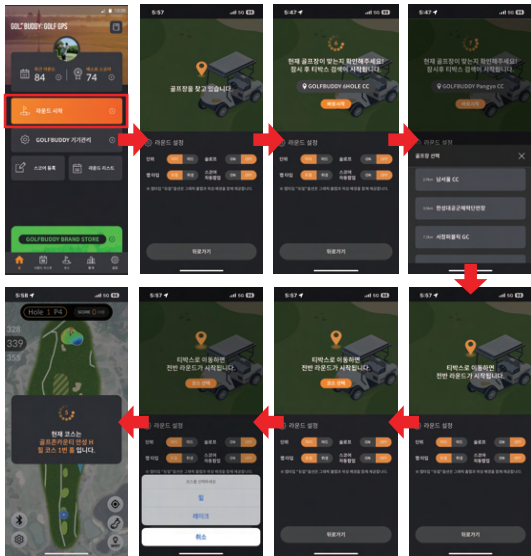

▶ 골프버디 앱 라운드 화면





1	홀/파 정초 및 변경
2	스코어 정보 및 입력
3	그린 앞/중/뒤 까지 거리
4	스마트핀 연결 표시
5	그린 좌/우 전환
6	터치 IP 아이콘
7	클럽 추천 및 현재 위치부터 터치 IP까지의 거리



8	현재 위치 아이콘
9	연결 기기 정보 및 설정
10	라운드 설정
11	GPS ON/OFF
12	그린 맵/홀 맵 전환
13	수동 샷 트랙킹

▶ 골프버디 앱 라운드 기록 및 통계

  - 입력 된 스코어 및 샷 트래킹 정보를 바탕으로 다양한 정보가 제공 됩니다.

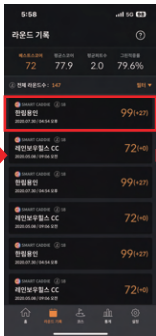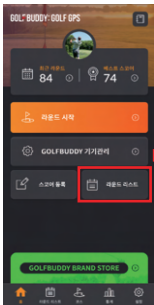

유의사항

기기 사용 전에 아래의 유의사항을 충분히 확인하시기 바랍니다.

- 제품의 배터리가 완전히 충전 된 이후 중간 볼륨에서 약 10시간 정도 작동합니다.
※ 사용 환경에 따라 사용 시간이 상이 할 수 있습니다.
- 제품을 보조 배터리 용도로 활용하면 제품의 사용 시간이 감소 됩니다.
- 스마트폰과 제품의 거리가 멀어지면 블루투스 연결이 끊깁니다.
- 여러 대의 스마트폰에 블루투스를 연결했던 경우, 마지막에 연결 된 스마트폰과 블루투스 연결이 됩니다.
- 제품에 골프 카트/트롤리 및 철제에 부착할 수 있는 자석이 내장(QUICK MOUNT)되어 있습니다. 강한 자기장으로 인해 부착 시 손가락 부상에 주의가 필요하며, 심장 박동기 및 체세동기 등의 장치의 사용자 및 전자 제품의 손상 위험이 있으므로 사용 시 주의하시기 바랍니다.
- 스피커 양쪽에 위치한 진동판을 날카로운 물체 및 손가락 등으로 누를 시 파손의 위험이 있습니다.
- 방수 기능을 위해서 배터리 충전 단자를 완벽히 닫아 주시기 바랍니다.
- 스피커를 높은 볼륨으로 장시간 사용하면 영구적인 청력 손상/손실의 원인이 될 수 있으므로 사용에 주의하시기 바랍니다.
- 직사광선에 제품을 오래 노출되지 않도록 주의하십시오.
(제품 고장의 원인이 됩니다.)
- 여름 온도가 높은 차량 내부에 제품 보관을 피해 주시기 바랍니다.
(배터리 발열 및 폭발의 위험성 있습니다.)
- 제품을 임의 분해하지 마십시오.(분해 시 A/S를 받을 수 없습니다.)
- 물이나 습기에 노출될 시 제품 고장의 원인이 될 수 있습니다.
- 고속 충전이 지원되지 않으며, 5V/300mA 충전기 사용을 권장합니다.
- 매뉴얼에 표현된 SW 이미지는 프로그램 업데이트로 인해 변경될 수 있습니다.



경고

사용자 부주의로 인한 고장 및 제품의 손상이나 상해에 대해서는 당사가 책임지지 않습니다.
(보증 기간 내에도 무상 A/S 불가)

제품 사양 및 규격

항목	규격
외형 크기	Voice XL : 192 X 71 X 71 mm Voice XL_RC : 14mm X Φ 32mm
무게	Voice XL : 24.7oz (700g) Voice XL_RC : 0.4oz (12g)
사용 시간	약 10시간
방수 등급	IPX6
배터리	Voice XL : Li-ion-polymer 7.2V 2,600mAh(충전식) Voice XL_RC : CR2032(교체식)
충전 시간	4~5시간(충전기에 따라 상이)
스피커	Woofer : 20W, Tweeter : 10W
주파수 응답률	Woofer : 165Hz-16 kHz Tweeter : 1850 Hz-18 kHz
사용 온도	-10°C ~ 50°C, 14°F ~ 122°F

품질 보증서

- 본 제품은 엄격한 품질관리 및 철저한 검사과정을 거쳐서 생산되었으며, 재정경제원 고시 소비자 피해 보상규정에 의거, 소비자의 정당한 피해를 보상해 드립니다.
- 보증기간 이내에 정상적인 사용상태에서 발생한 고장의 경우 무상 서비스를 받을 수 있습니다.
- 무상수리 보증기간 이내임에도 사용자의 부주의로 제품에 이상이 발생한 경우 유상 서비스가 가능합니다.
- A/S 및 피해보상 요청 시에는 본 보증서 및 구입 증빙서류(영수증)를 반드시 제시해 주시기 바랍니다.

제품명	GOLFBUDDY	보증기간	
모델명		제품 구입 후 2년간	
시리얼번호			
판매일자		성명	
구입자 주소		전화	

본 제품의 상세설명은 골프버디 홈페이지에서 확인 가능합니다.

www.golfbuddy.com

GOLF BUDDY[®]
ACCURACY MATTERS[™]

GOLF BUDDY®

GOLFZON DECA