

**PILOT  
AND  
FLIGHT ENGINEERS  
NOTES**



**KINGSBURY  
1983 XL PILOT**




# CALIBRE 8217



## OPERATING THE SCREWDOWN CROWN

The crown screws on and off like a bottle cap. Please be careful to unscrew it all the way before pulling the crown to the 2nd or 3rd positions. After setting the watch, the crown should always be screwed back on and locked in order to keep the movement protected from all exterior elements.

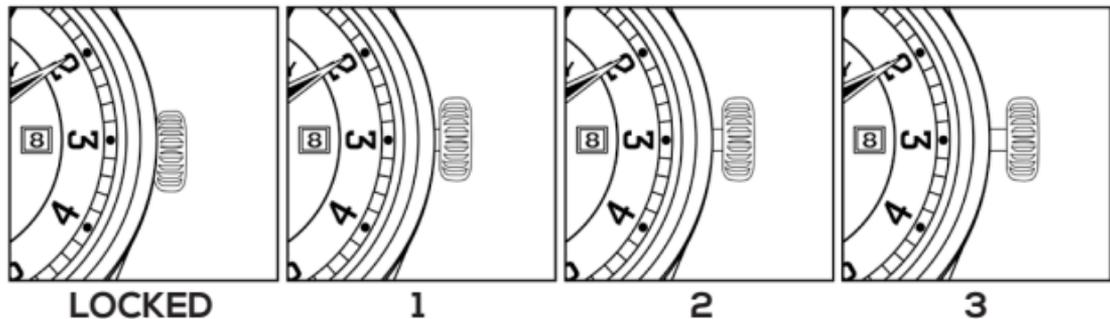

**NOTICE: NOT LOCKING THE CROWN AFTER ADJUSTMENTS WILL COMPROMISE THE WATER-RESISTANCE AND VOID THE LIMITED WARRANTY.**

## **WHAT IS AN AUTOMATIC MOVEMENT?**

An automatic watch, is a type of mechanical watch. These watches do not use an internal battery and instead uses the natural motion of the wearer to provide energy to run the watch (making manual winding unnecessary).

Once fully "charged", your 1983 XL has a typical power reserve of around 40 hours. If you stop wearing your watch, you may notice that it has stopped running after a certain length of time. Don't be alarmed, you simply need to energize your watch.

## **AUTOMATIC AND MANUAL WINDING**

The 1983 XL Pilot is capable of both automatic and manual winding. The self-winding mechanism allows the watch to be wound simply by being worn during daily activities.

To manually wind the watch, unscrew the crown until it pops into the first position (do not pull the crown). Once in position 1, the movement can be wound by turning the crown clockwise.

If the watch has stopped after having been left unworn, it should always receive a dozen crown winds before being worn again.

To fully wind the watch, turn the crown clockwise a total of 40 times.

Once you have finished winding the watch, make sure to screw the crown back into the locked position.

## SETTING DATE/TIME

- 1.1** To set the date, fully unscrew the crown into position 1, then gently pull it out to the position 2.
- 1.2** Turn the crown counter-clockwise to change the date. \*Do not set the date between 9PM and 4AM otherwise the date might not change at the correct time.
- 1.3** To set the time, gently pull the crown to the position 3. Turn the crown clockwise to adjust the hour / minute hands to the desired time. Pay attention to the 24-hour dial in order to set the time to the correct AM/PM setting.
- 1.4** Push the crown back in to the normal resting position and then screw it back down to the locked position.

1.1




1.2



1.3



1.4

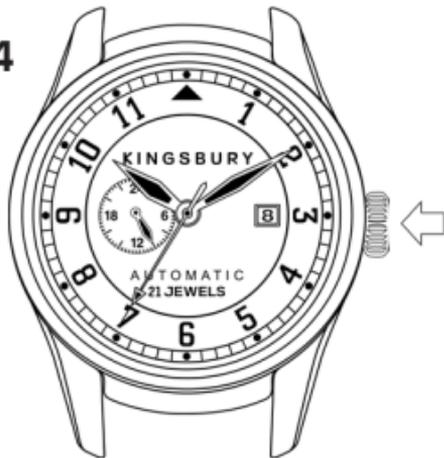

## WARRANTY INFORMATION

**Kingsbury Watch Co.** offers a limited warranty against defects in materials and workmanship for a period of One (1) year after original purchase from Kingsbury Watch Co.

This means that if the components or materials of your watch have any issues, or if the watch isn't functioning correctly, we'll repair or replace it (at our discretion). We don't cover normal wear and tear, broken or damaged crystal, watch case, strap, bracelet and loss or theft. You will void your warranty if you open the caseback, or forget to screw down or push in the crown and expose the internal components of your watch to moisture.

Proof of purchase is required for all warranty claims and service requests. Kingsbury will not accept a warranty claim or repair request if a watch has evidence of excessive wear or misuse.