



RENDITION AUTOMATIC

We hope you enjoy your new Kingsbury Watch Co. time-piece. We continue to strive to make exceptional pieces for watch lovers who value individuality and appreciate design.

Please take a moment to carefully read this easy-to-use manual. By doing so, you will help give your watch a long life and keep it operating at the high quality standards by which it was crafted.

For help please contact us at **www.kingsburywatch.com**



WHAT IS AN AUTOMATIC WATCH?

An automatic watch, is a type of mechanical watch. These watches do not use an internal battery and instead uses the natural motion of the wearer to provide energy to run the watch (making manual winding unnecessary).

Once fully “charged”, your Rendition Automatic has a typical power reserve of around 38 hours. If you stop wearing your watch, you may notice that it has stopped running after a certain length of time. Don't be alarmed, you simply need to energize your watch.



JAPAN

EPSON

2

TWENTY-FOUR JEWELS

YN77A

AUTOMATIC & MANUAL WINDING

The **Rendition Automatic** is capable of both automatic and manual winding. The self-winding mechanism allows the watch to be wound just by being worn during daily activities.

To manually wind the watch, simply leave your crown in the closed position (position 0) and then turn the crown clockwise. ***It is not recommended that you do this often as it can cause the crown stem to wear over time.***



Hour hand

Minute hand



0 → 1



Crown

Small second hand

SETTING THE TIME

1. Pull the crown out gently into position 1
2. Turn the crown clock-wise to set hour and minute hands.
3. After the time has been set, push the crown back to the Normal '0' position. Next push the crown back into position 0. You must push in the crown into the locked position to ensure you maintain water resistance.

WARRANTY INFORMATION

Kingsbury Watch Co. offers a limited warranty against defects in materials and workmanship for a period of One (1) year after original purchase from Kingsbury Watch Co.

This means that if the components or materials of your watch have any issues, or if the watch isn't functioning correctly, we'll repair or replace it (at our discretion). We don't cover normal wear and tear, broken or damaged crystal, watch case, strap, bracelet and loss or theft.

You will void your warranty if you open the caseback, modify the watch in any way, or forget to screw down or push in the crown and expose the internal components of your watch to moisture.

Proof of purchase is required for all warranty claims and service requests. Kingsbury will not accept a warranty claim or repair request if a watch has evidence of excessive wear or misuse.

PRECAUTIONS & PREVENTIVE MEASURES

Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures.

Do not expose your watch to intense magnetic fields such as loud- speakers, portable telephones, computers or refrigerators and other electromagnetic appliances.

Avoid thermal or other shocks as it may harm your watch.

Avoid direct contact with solvents, detergents, perfumes, cosmetic products etc., since they may damage the bracelet, the case or the gaskets.

Never activate the time-setting crown while the watch is under water and make sure that the crown has been pushed into the locked position at all times when not setting the time.

Have Questions or Need Support? Contact Us

www.kingsburywatch.com | support@kingsburywatch.com