
If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

# **Quick Start Guide**

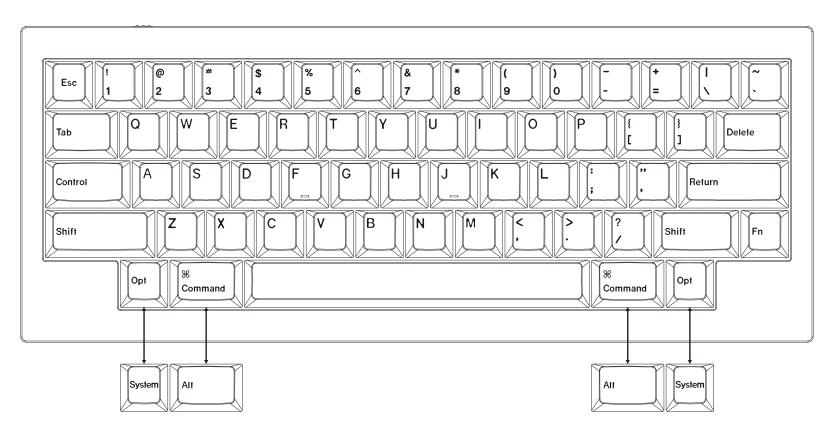

## 1 Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.



# 3 The Layers

There are three layers of key settings on the keyboard.
The layer 0 is for the Mac system.
The layer 1 is for the Windows system.
The layer 2 is for the Function keys.



If your system toggle is switched to Mac, then the layer 0 will be activated.



If your system toggle is switched to Windows, then the layer 1 will be activated.



#### 5 The Backlight

Press Fn + Q to change the lighting effect







### 7 Adjust The Backlight Speed

Press Fn + T to increase the light effect speed



Press Fn + G to decrease the light effect speed



### **9** Watch The Building Tutorial On Our Website

If you are building the keyboard for the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yourself.





### 2 The VIA Key Remapping Software

Please visit <u>caniusevia.com</u> to download the latest VIA software to remap the keys. If the VIA software cannot recognize your keyboard, please reach out to our support to get the instruction.



#### 4 Function Kev

#### Function Keys

F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12

In order to get Function Key, you need to press Fn and

# 6 Adjust The Backlight Brightness

Press Fn + W to increase the backlight brightness



Press Fn + S to decrease the backlight brightness



### 8 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



### 10 Factory Reset



Troubleshooting? Don't know what's going on with the keyboard?

- ① Plug in the power cable and factory reset the keyboard by pressing Fn + J + Z (for 4 seconds).
- 2 Download the right firmware and QMK Toolbox from our website.
- ③ Unplug the power cable and remove the space bar keycap to find the reset button on the PCB.
- (4) Hold the reset key first, then plug in the power cable. Release the reset key, and the keyboard will now enter DFU mode.
- ⑤ Flash the firmware with the QMK Toolbox.
- 6 Factory reset the keyboard again by pressing Fn + J + Z (for 4 seconds).
- \* Step by step guide can be found on our website.