USER GUIDE AND INSTALLATION MANUAL



ALTERNATOR EXCITOR & LED PILOT LIGHT MODULE

Sometimes fitting new LED lights & Pilot Lights can be a challenge on older cars & trucks, Below is a wire diagram to get past the Alternator exciter to switch on the alternator & using LED as the warning light.

Part No: BWA-ALTEXC

IMPORTANT INFORMATION!

Disconnect the battery before fitting.

Always best fitted by a professional auto

electrician.

Unit Installation

