



# Alternator (Generator) GM DENSO & MITSUBISHI

**GM DENSO 2pin ALTERNATOR**

**MITSUBISHI 2pin ALTERNATOR**




## **IMPORTANT INFORMATION!**

*Disconnect the battery before fitting.*

*Always best fitted by a professional auto electrician.*

## **Unit Installation**

### **GM DENSO ALTERNATOR ONLY**

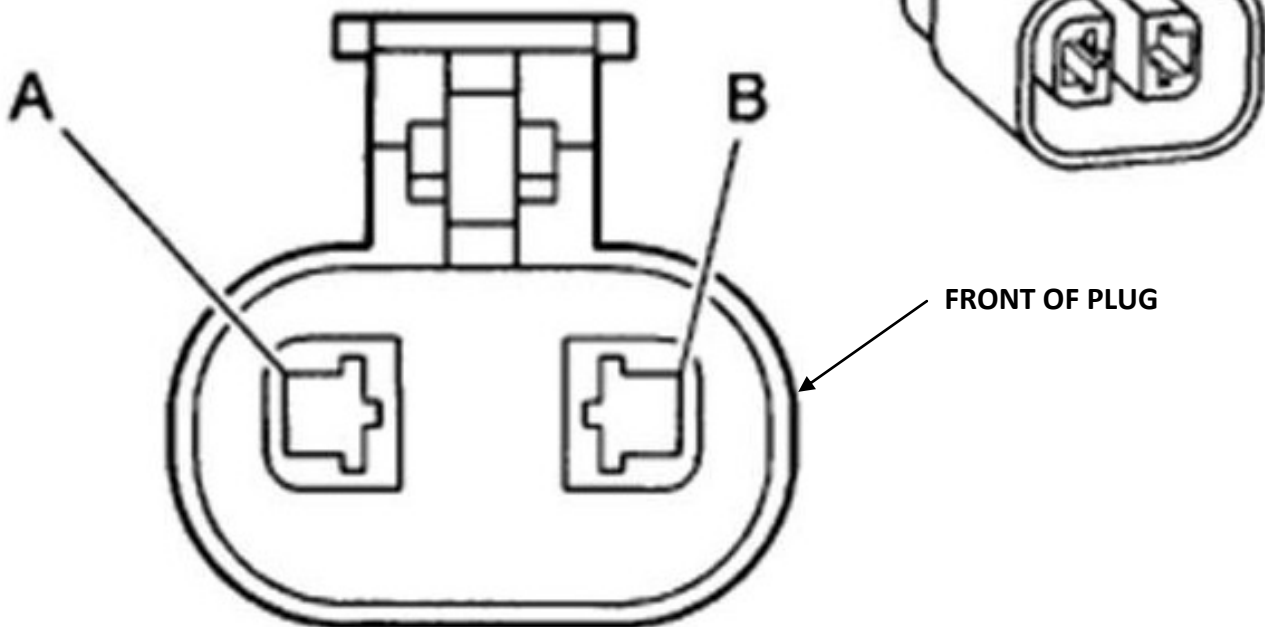


### **CONNECTOR PINOUT DETAILS**

<b>PIN</b>	<b>WIRE</b>	<b>FUNCTION</b>
A	16ga RED or WHT	BATTERY POSITIVE VOLTAGE +
B	16ga BRN	CHARGE INDICATOR CONTROL -



## MITSUBISHI ALTERNATOR ONLY

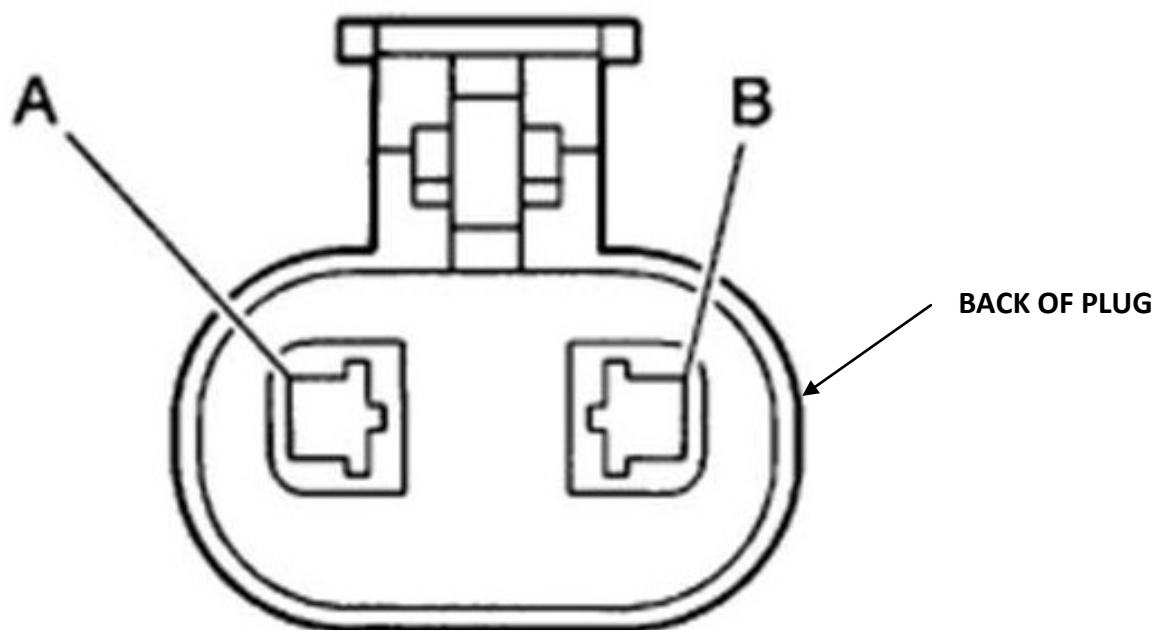

### CONNECTOR PINOUT DETAILS

PIN	WIRE	FUNCTION
A	16ga BRN	CHARGE INDICATOR CONTROL -
B	16ga RED or WHT	BATTERY POSITIVE VOLTAGE +