



DASH PILOT LIGHT INSTALLATION GUIDE

Instructions for our universal LED dash pilot Lights. Used for countless applications including turn signal indicators, Oil & Temp warnings etc. Install in dash, overhead console, or wherever the application.




IMPORTANT INFORMATION!

Disconnect the battery before fitting.
Always best fitted by a professional auto electrician.

Unit Operation

3 COLOUR LED DASH PILOT LIGHT


Part No: BWAPLSSRBG-10

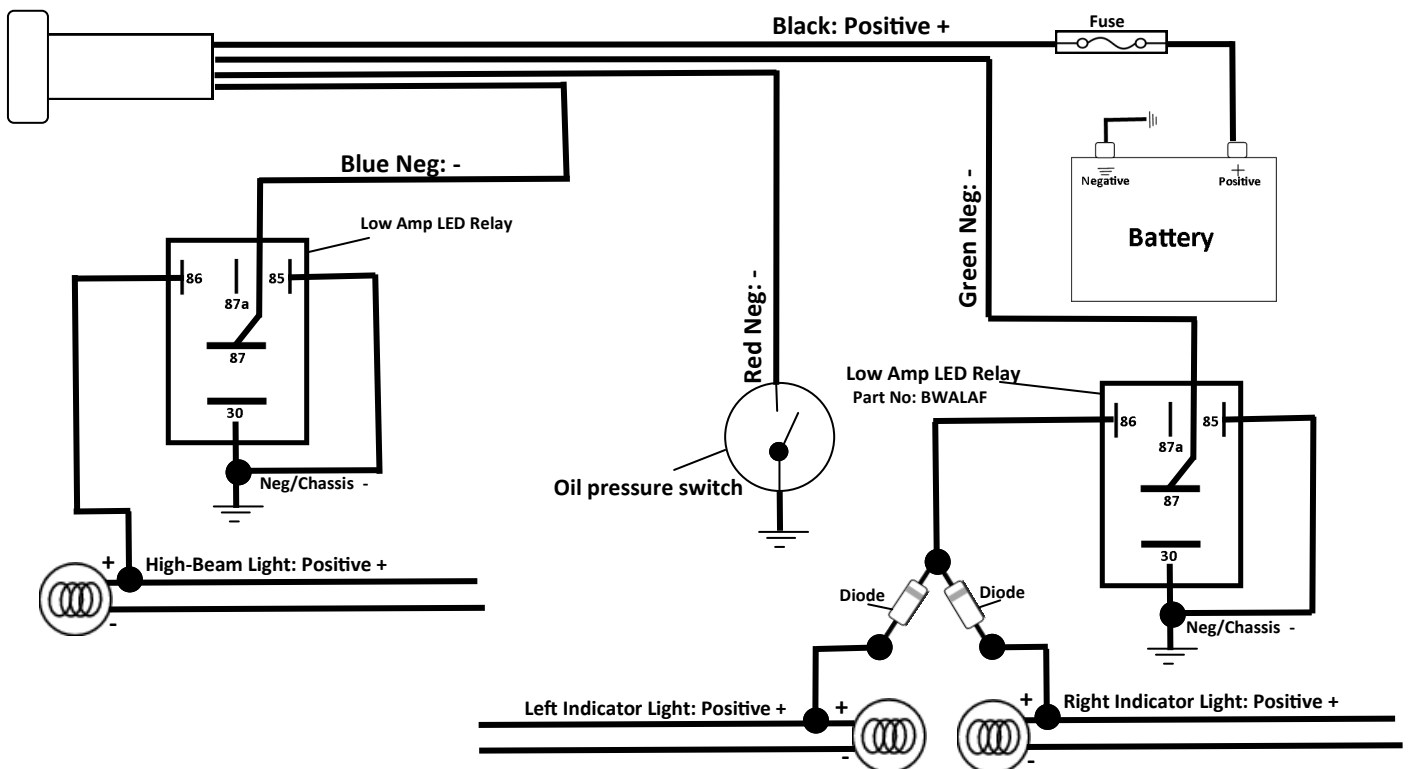

Black: Positive Power + Green: Neg: - Blue: Neg: - Red: Neg: - (Red will overcome all colours and stay on)

2 COLOUR LED DASH PILOT LIGHT

Part No: BWAPLSSRB-8

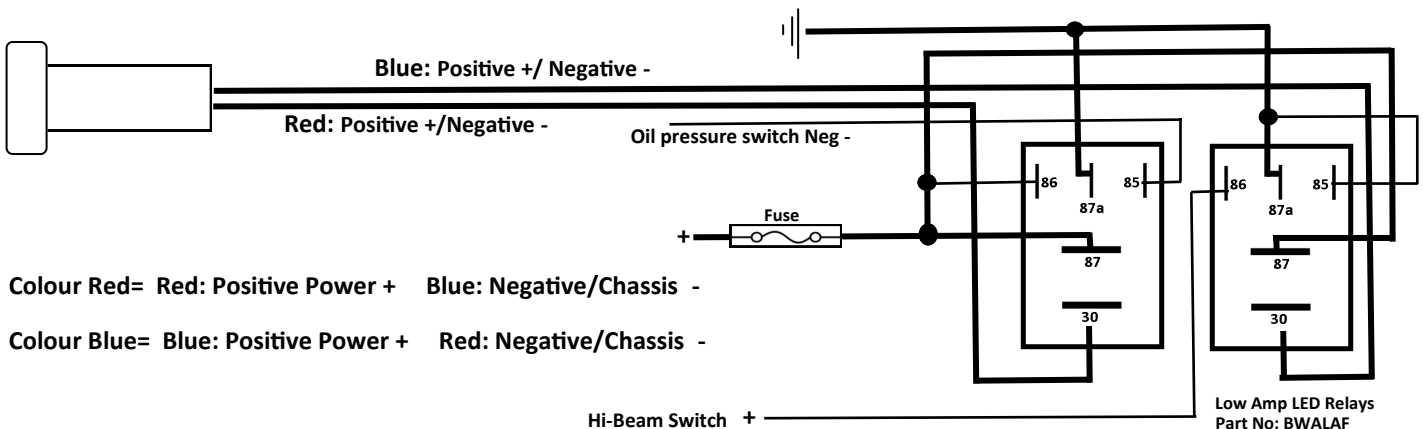


Colour Red= Red: Positive Power + Blue: Negative/Chassis -


Colour Blue= Blue: Positive Power + Red: Negative/Chassis -




INDICATOR PILOT LIGHT SET UP LEFT & RIGHT

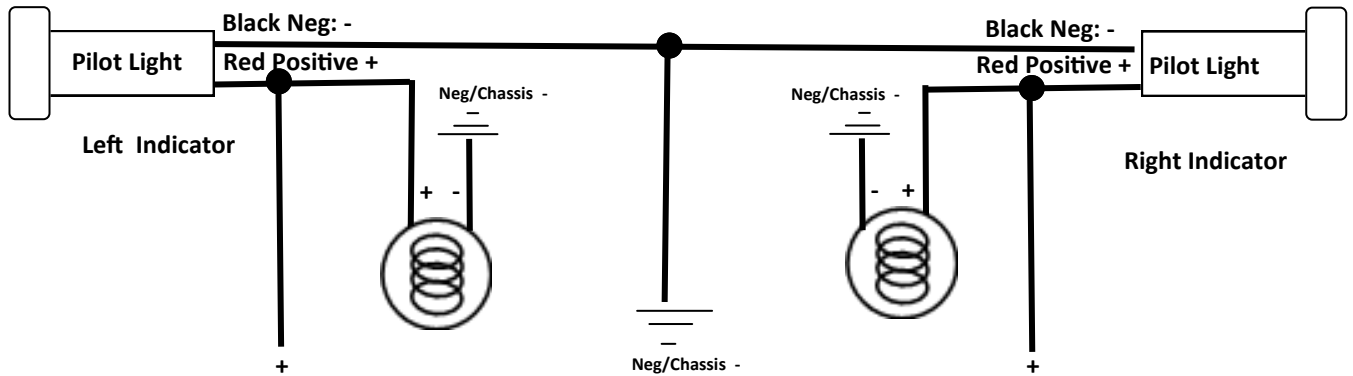


HIGH-BEAM PILOT LIGHT

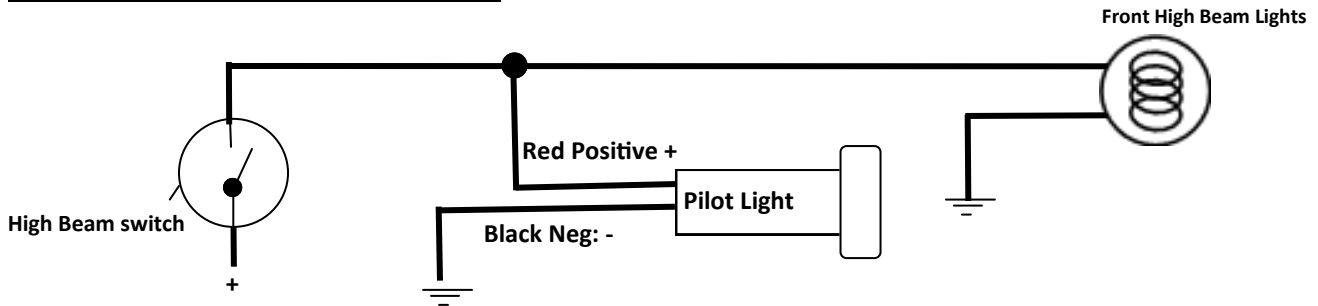

HANDBRAKE PILOT LIGHT

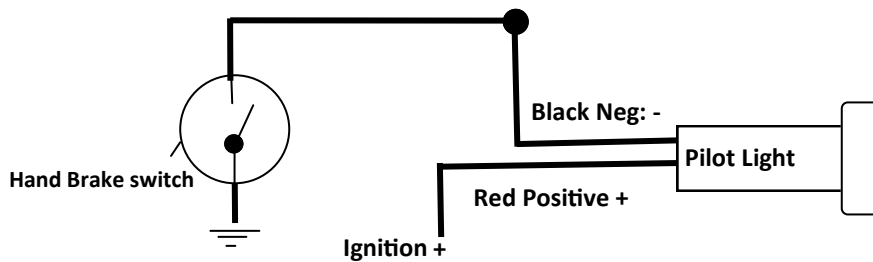

WATER TEMPERATURE PILOT LIGHT

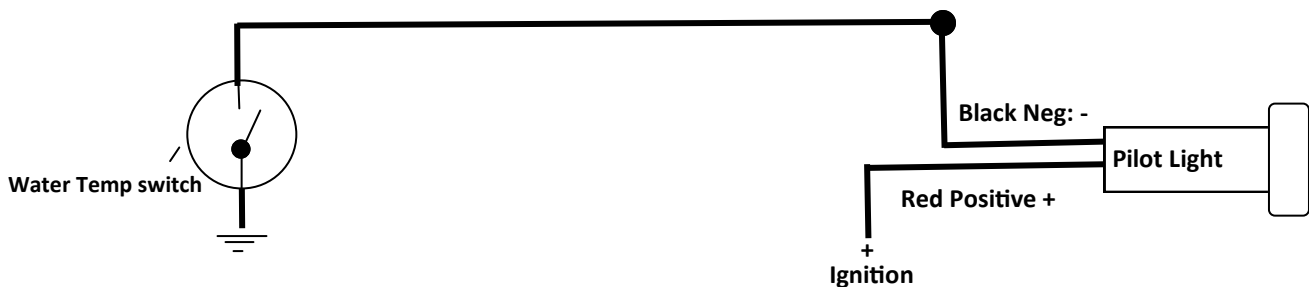





OIL PRESSURE WARNING PILOT LIGHT




DOOR OPEN PILOT LIGHT

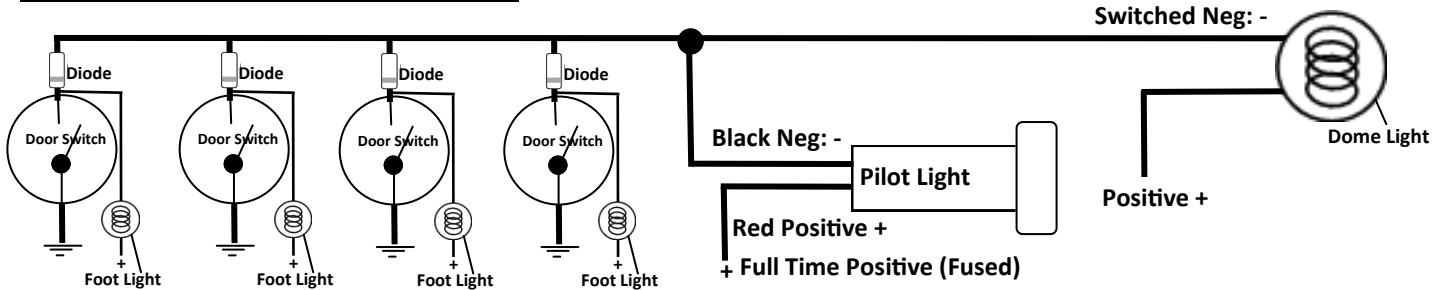

BOOT/TRUNK OPEN PILOT LIGHT

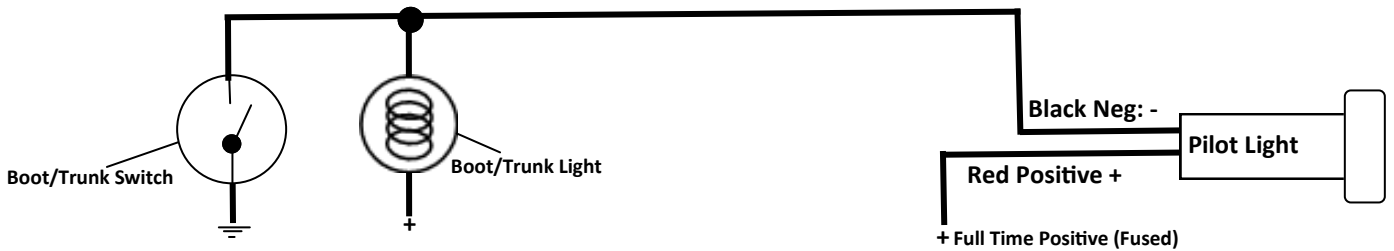

CAR ALARM "FLASHING KEY" PILOT LIGHT

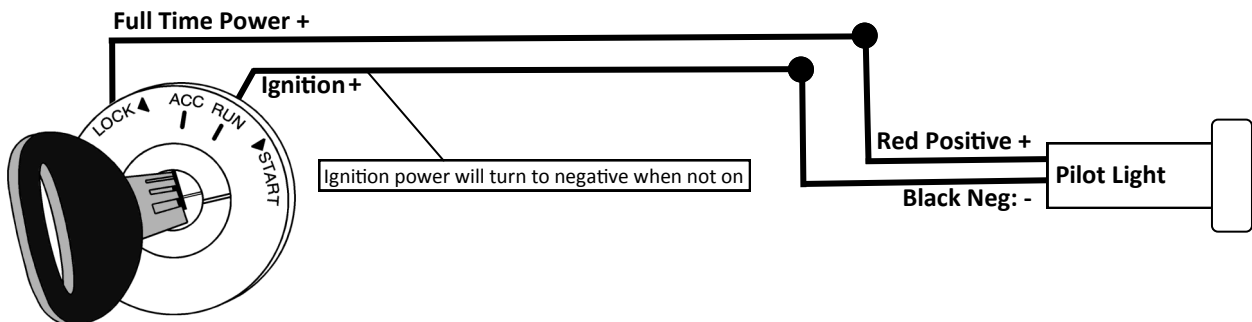



ALTERNATOR PILOT LIGHT WITH EXCITER WIRE SET UP

