



## HOLDEN HT HG SEDAN-WAGON-UTE-COUPE CLASSIC UPDATE WIRE HARNESS

Easy to install design and allow for expandability for future growth & all our wiring systems use only the highest quality wire and parts resulting in the ultimate Holden HT & HG Sedan, Wagon, Ute or Coupe wiring harness.



Part No: BWAGMHTHG

### IMPORTANT INFORMATION!

*Disconnect the battery before fitting.*


*Always must be fitted by a professional auto electrician.*

### Unit Installation

Whilst every endeavour has been made to ensure these fitting instructions are correct they are intended as a guide only and should be used in conjunction with the schematic wire diagram for your vehicle.



# USER GUIDE AND INSTALLATION MANUAL

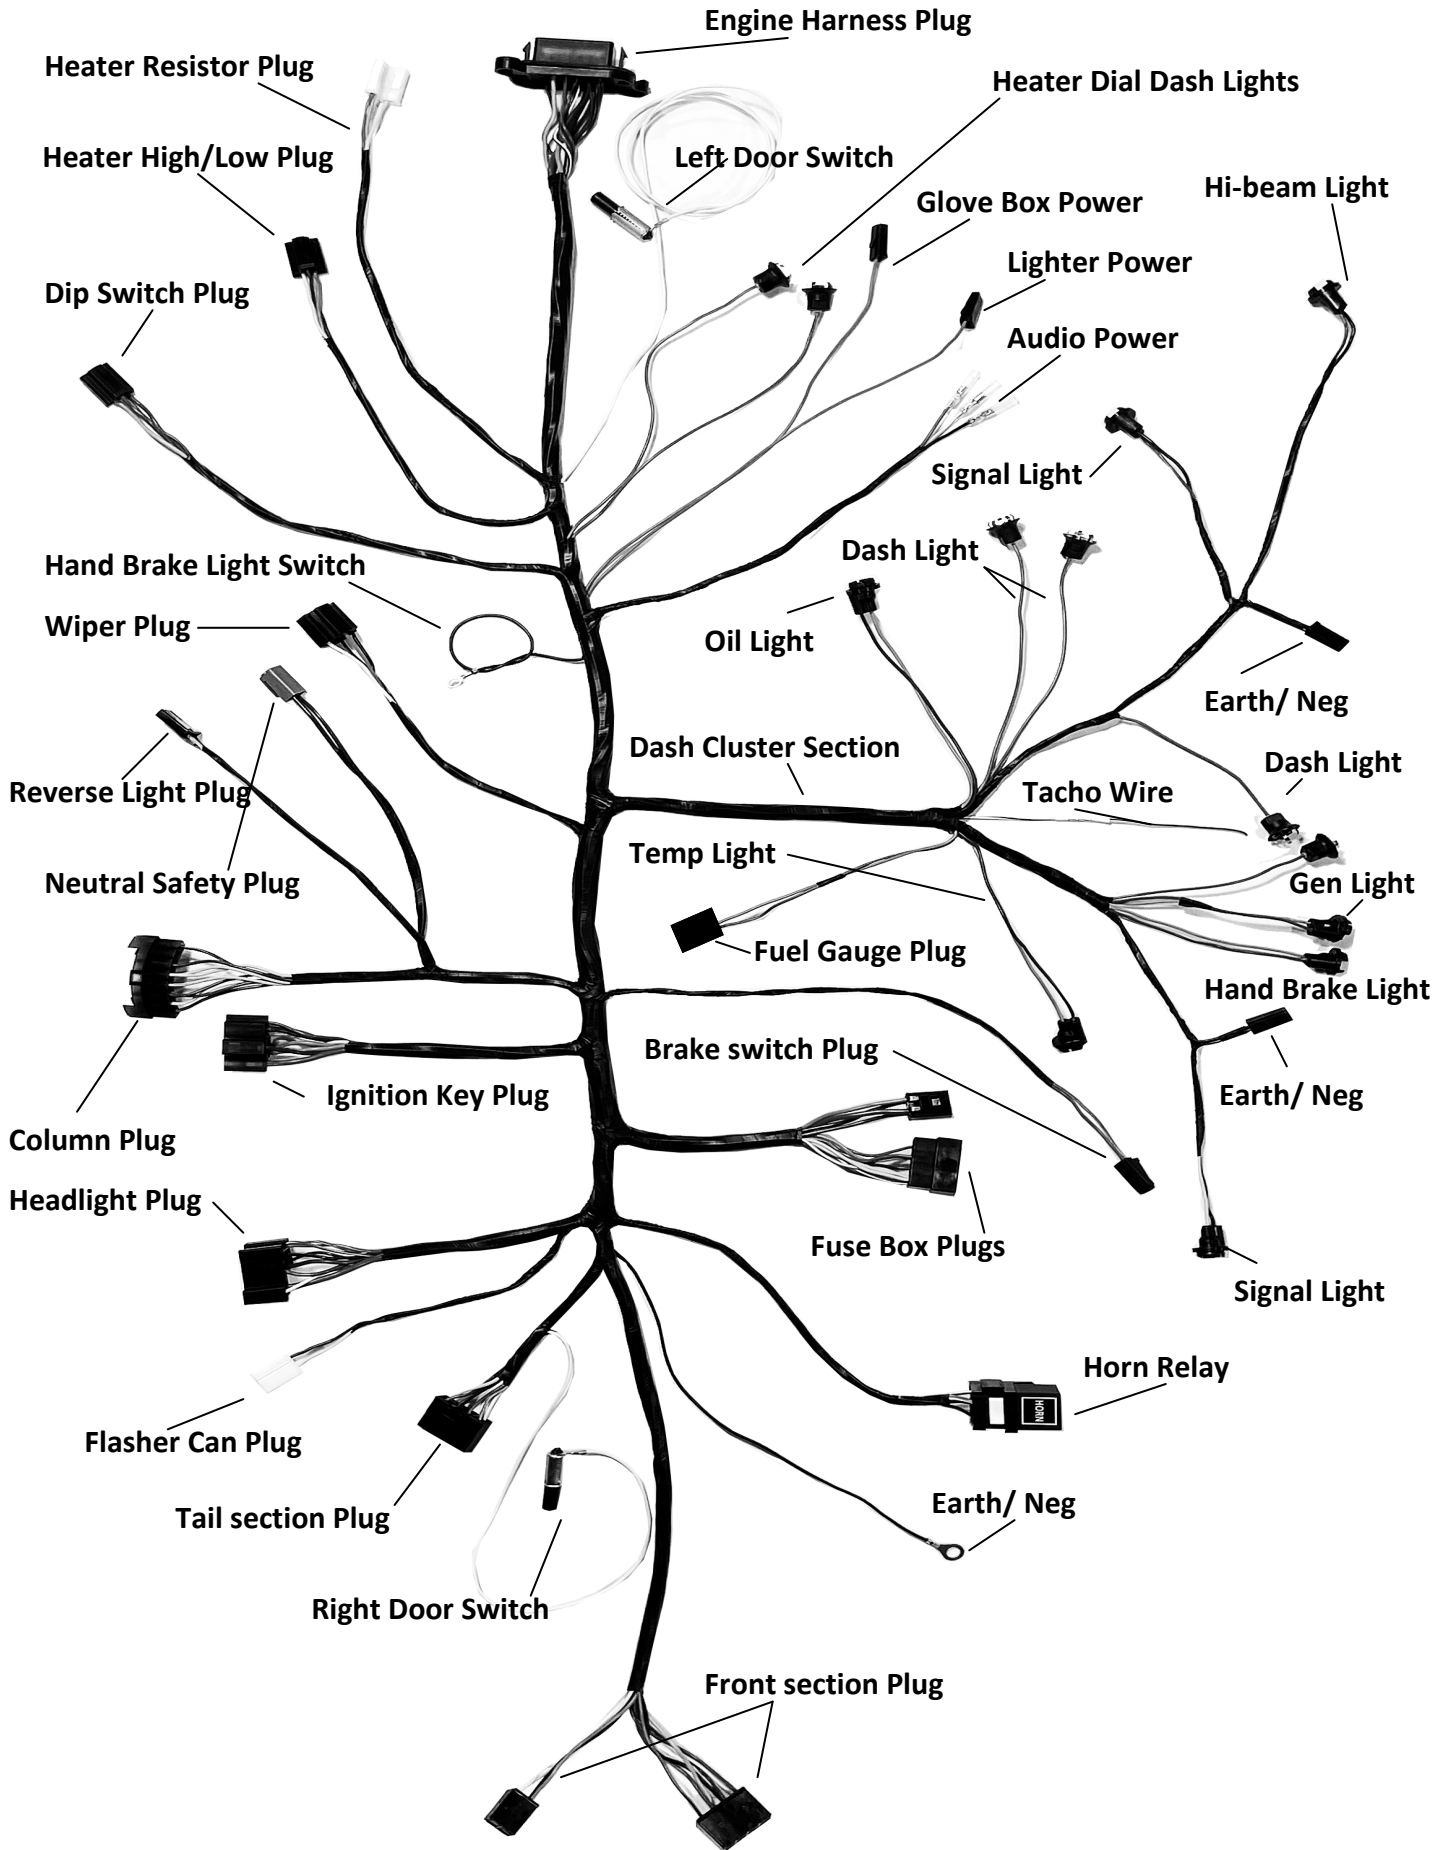



## USER GUIDE AND INSTALLATION MANUAL

### DASH SECTION

#### USE THE DASH SECTION DIAGRAM FOR THE FOLLOWING CONNECTIONS:

**GAUGE POWER - PINK "I"** terminal on the gauges that require 12 volt power.

**OIL SENDING - BLUE "S"** terminal on the oil pressure gauge.

**LEFT SIGNAL IND - LIGHT BLUE** left turn signal indicator.

**HIGH BEAM IND - GREEN** high beam indicator light.

**RIGHT SIGNAL IND - DARK BLUE** right turn signal indicator.

**TEMP SENDER - GREEN "S"** terminal on the water temp. gauge.

**FUEL GAUGE - PINK "S"** terminal on the fuel gauge.

**TACHOMETER - ORANGE "S"** terminal on the tachometer.

#### USE THE HEADLIGHT SWITCH DIAGRAM FOR THE FOLLOWING CONNECTIONS:

**MAIN POWER - RED** 12 Volt feed, connect to bat. terminal on the headlight switch.

**FRONT PARK - PURPLE** Connect to the front park lights that go off when headlights are on.

**TAIL PARK - BROWN** Connect to the parking light terminals at the rear..

**DASH DIMMER POWER - GREEN (FUSED) to GREY** Connect to Dash Lights

**HEADLIGHT POWER - BLUE** Connected to the High Beam Dipswitch

#### BRAKE LIGHT SWITCH CONNECTIONS:

**BRAKE SWITCH POWER - ORANGE** input side of the brake light switch.

**BRAKE SWITCH - RED** output side of the brake light switch.

#### FUSED 12 VOLT POWER FOR RADIO & ACCESSORIES:

**RADIO CONSTANT POWER - YELLOW** Connect to radio Memory power wire.


**RADIO ACC POWER - RED** Connect to radio ACC -ON wire.

**RADIO EARTH - BLACK** Connect to earth Black Wire

**ACC POWER - BLUE** Blank on Fuse Box (for Air-Cond, Fule Pump eg)

# USER GUIDE AND INSTALLATION MANUAL

## FRONT SECTION DIAGRAM

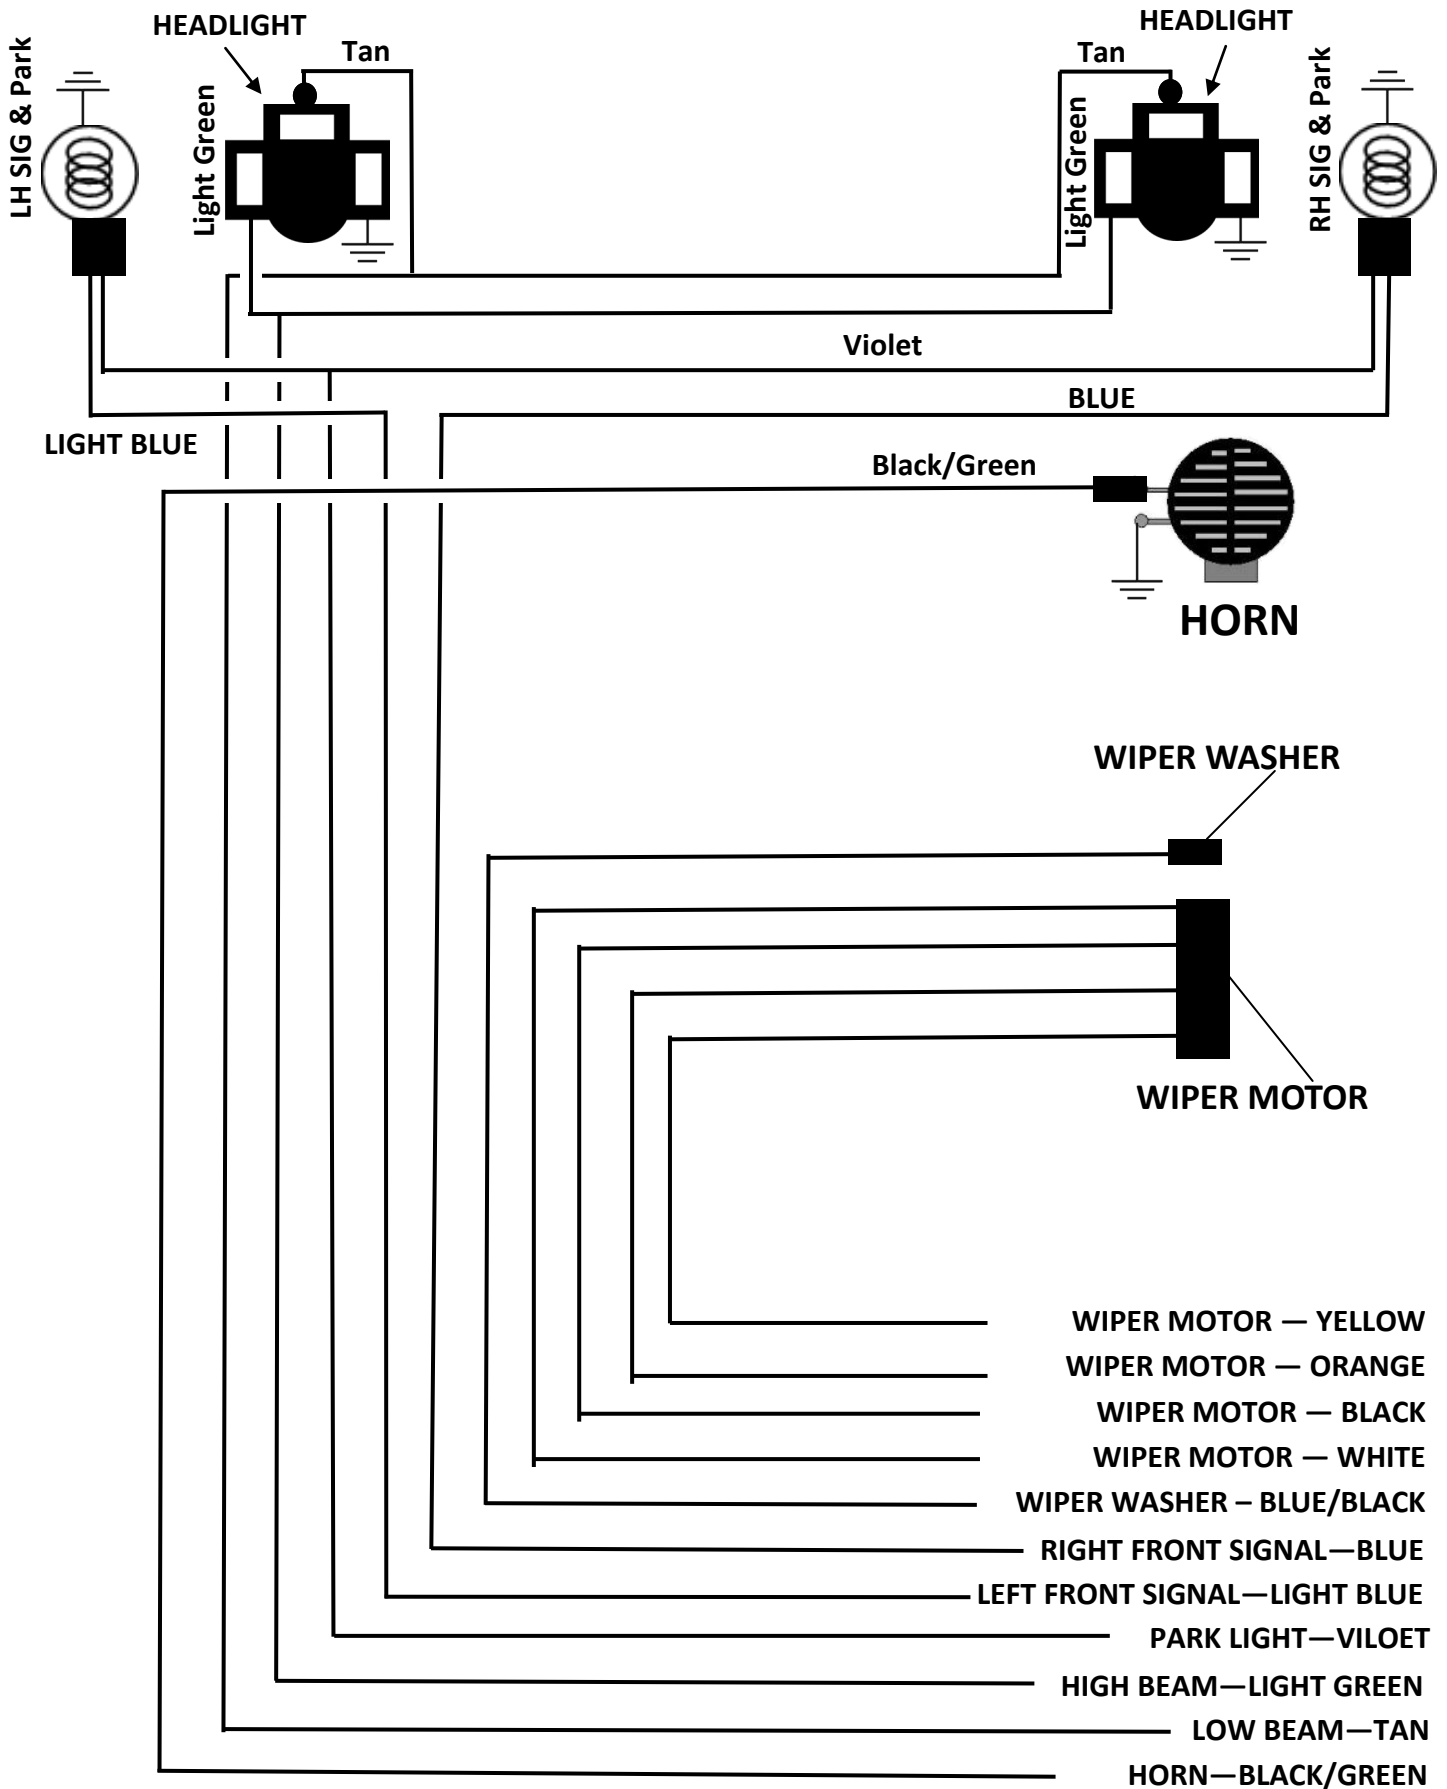



# USER GUIDE AND INSTALLATION MANUAL

## CENTER & REAR BODY CLIP SECTION DIAGRAM

LEFT REAR TURN — YELLOW

RIGHT REAR TURN — DARK GREEN

TAIL PARK LIGHT — BROWN

BRAKE LIGHT — RED

FUEL GAGE — TAN

TRUNK/BOOT LIGHT — ORANGE

DOMELIGHT POWER — ORANGE or BLACK

DOMELIGHT SWITCH — WHITE

