### **USER GUIDE AND INSTALLATION MANUAL**



# RFI REMOTE ENGINE HOLDEN HK HT HG START/STOP SYSTEM

Instructions for our GMH HOLDEN KTG RFI remote Engine Start system. Our Passive keyless RFI Remote system adds the luxury of a keyless Remote and push button start system to your Classic Holden.

IMPORTANT INFORMATION!

Disconnect the battery before fitting.

Always best fitted by a professional auto electrician.

### **Unit Operation**

#### **Passive Lock Status**

When the RFI remote is taken away from the car of 3-5 meters a horn or siren will chirp once. Then the system will be in arming status automatically & lock the car door automatically. Under the mute mode horn/siren will not sound if connected to horn. We recommend not to use horn but a soft chirping siren only if you want a chirp from the system.

#### **Passive Unlock Status**

When the RFI remote is with in 2 meters the system will automatic in disarm status & unlock Under the mute mode horn/siren will not sound if connected to siren or horn.

### Remote Control & Car Starting ATT:: Remote Starting Automatic Trans Only

In arm mode press and hold the Lock button on the remote control more than 5 seconds then the engine will attempt to start. When you want to stop the engine running, once again press and hold the Lock button on the remote control more than 5 seconds. If you keep the engine running more than 10 mins the engine will automatically shut off. Also if you started the car by remote and you unlock the car and step on the foot brake the engine system will shut off.

There is no auto engine shut off if the RFI remote is out of range, that is for safety purpose. If the engine is off and the remote is out of range the car will not start. This is your security so no one can start the car with out the remote control. If you want the car to start by remote control you must connect the Green wire to a oil checking line or connect to the ACC thick Brown wire.

#### **Engine Stop**

Step on the brake pedal and hold on, press the START / STOP button one time, then the engine will be cut off, the indication LED will turn OFF.

#### **ACC, IGN, OFF RECYCLE MODE**

Don't step on the foot brake, press the START / STOP button one time, it enter ACC mode.

Press the button again, it enter IGN mode,

Press the button again, it enter OFF Mode.

#### **LONG PRESS START FOR COLD START**

When normal short press sometimes wont start engine in cold weather, To crank for a longer time press and hold for more cranking time to start in cold start.

## **USER GUIDE AND INSTALLATION MANUAL**



# **BWA RFI REMOTE GM ENGINE START/STOP SYSTEM**



