



UPGRADE KEYLESS ENGINE START BUTTON SYSTEM

Part: BWAST9001

MANUAL AND INSTALLATION GUIDE

START

At disarmed mode, Step on the foot brake and hold on, press the START/STOP button once, then the engine will be started, the indication LED will be keeping ON.

STOP

Step on the foot brake, and hold on, press the START/STOP button once, then the engine will stop, the indication LED will turn OFF.

ACC, ON, OFF RECYCLE MODE

Dont press your foot on the brake pedal , press the START/STOP button one time, it enter ACC mode.

Press the button again, it enter ON mode,

Press the button again, it enter OFF mode.

LONG PRESS START

When cannot start engine in cold winter car press and hold the START/STOP button on for 3 seconds.

REMOTE START

Continuously press the unlock button on the remote for three times within 5 seconds to remote engine. Once the engine have been started, you have to get on the car and step on the footbrake within 10 minutes, otherwise it will be off in 10 minutes.

Match car alarm anti-hijacking function if equipped with car alarm system.

Working Parameter

Voltage: 12V

Current 4 mA

ACC Output: Stop current supply when engine start in instant

ON.1 Output: Keep current supply when engine start

ON.2 Output: Stop current supply when engine start in instant

Motor Output: Keep current supply when engine start



UPGRADE KEYLESS ENGINE START BUTTON SYSTEM

Part: BWAST9001

