




18 CALDIA LT 5000D-CXH

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

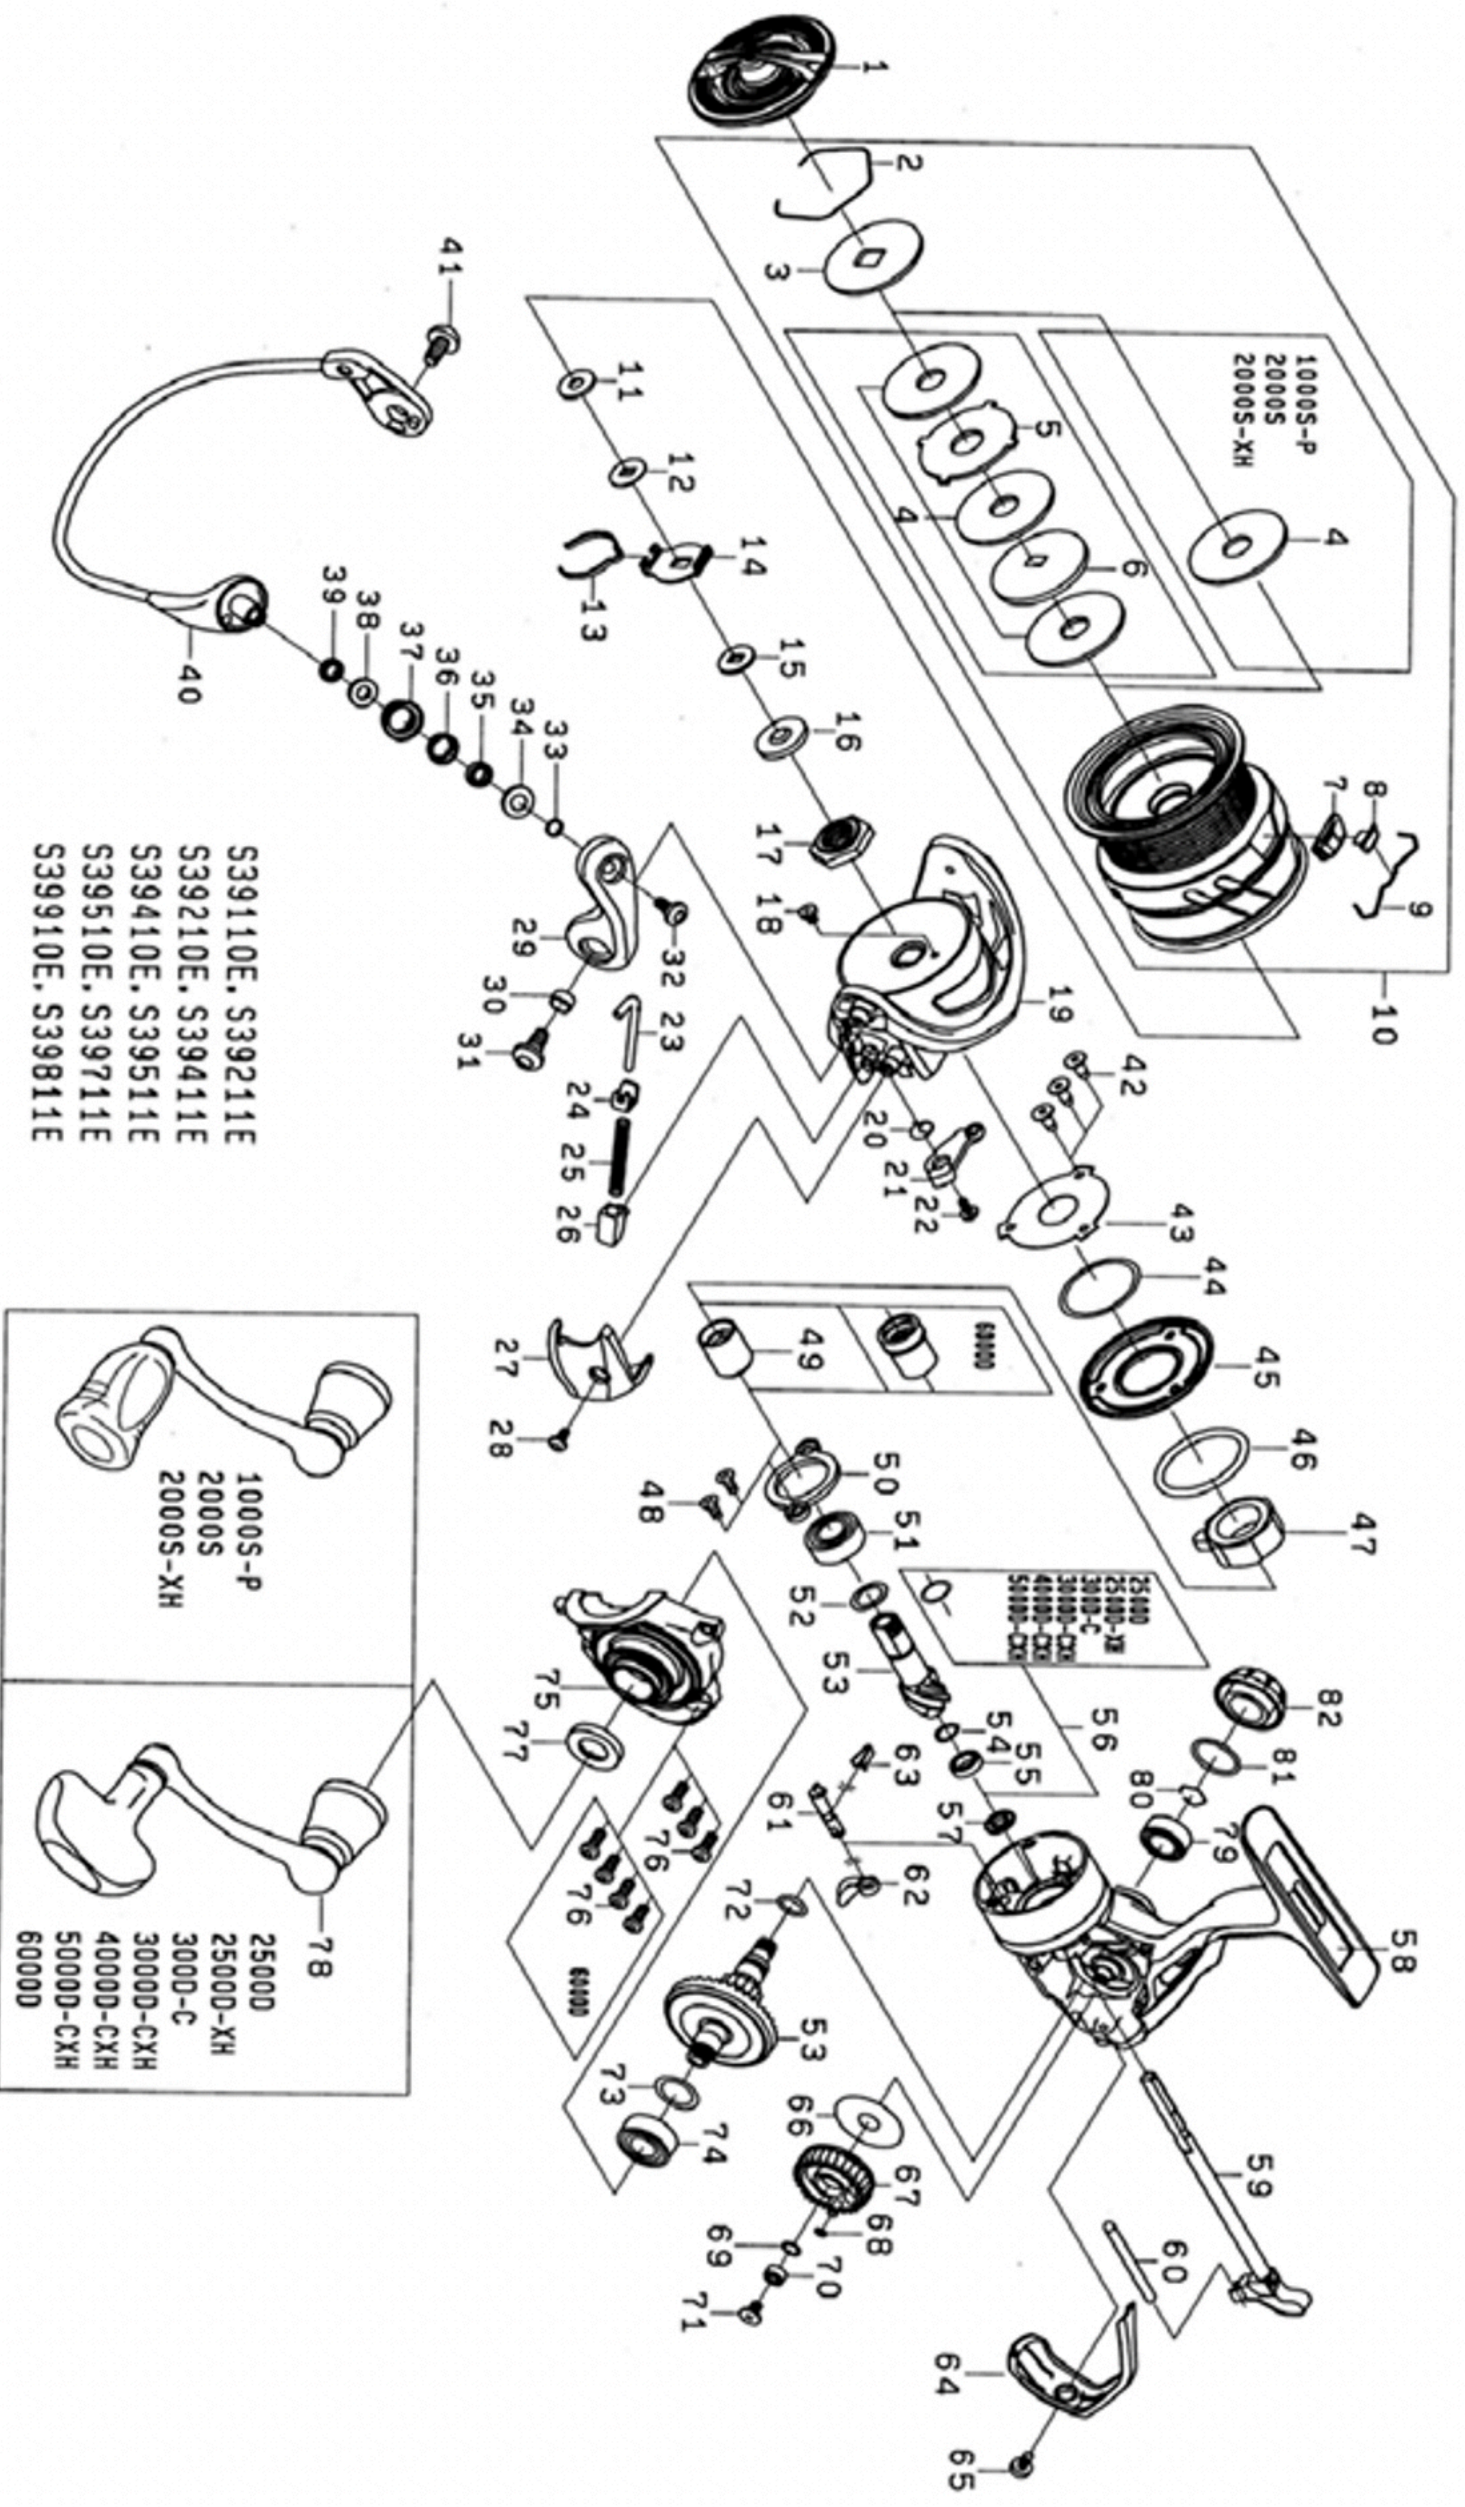

18 CALDIA LT 1000S-P ~ LT 6000D

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
18 CALDIA LT 5000D-CXH	S39811E	1	6J698701	DRAG KNOB
18 CALDIA LT 5000D-CXH	S39811E	2	6J547101	DRAG RING
18 CALDIA LT 5000D-CXH	S39811E	3	6J547001	DRAG DISC WASHER
18 CALDIA LT 5000D-CXH	S39811E	4	6J678801	ATD DRAG WASHER (1 pack - 3pcs)
18 CALDIA LT 5000D-CXH	S39811E	5	6J546902	DRAG LIP WASHER
18 CALDIA LT 5000D-CXH	S39811E	6	6J547001	DRAG DISC WASHER
18 CALDIA LT 5000D-CXH	S39811E	7	6J568601	LINE STOPPER PLATE
18 CALDIA LT 5000D-CXH	S39811E	8	6J558001	LINE STOPPER
18 CALDIA LT 5000D-CXH	S39811E	9	6J314801	LINE STOPPER SPRING
18 CALDIA LT 5000D-CXH	S39811E	10	6J700801	SPOOL ASSY (2~10)
18 CALDIA LT 5000D-CXH	S39811E	11	6E398000	SPOOL WASHER (A)
18 CALDIA LT 5000D-CXH	S39811E	12	6E467101	SPOOL WASHER (B)
18 CALDIA LT 5000D-CXH	S39811E	13	6J525101	CLICK LEAF SPRING
18 CALDIA LT 5000D-CXH	S39811E	14	6J546201	CLICK HOLDER
18 CALDIA LT 5000D-CXH	S39811E	15	6J703101	CLICK HOLDER WASHER
18 CALDIA LT 5000D-CXH	S39811E	16	6H986901	ROTOR NUT PACKING
18 CALDIA LT 5000D-CXH	S39811E	17	6H961101	ROTOR NUT
18 CALDIA LT 5000D-CXH	S39811E	18	6H022701	ROTOR NUT SCREW
18 CALDIA LT 5000D-CXH	S39811E	19	6H986325	ROTOR
18 CALDIA LT 5000D-CXH	S39811E	20	6H413601	KICK LEVER SPRING
18 CALDIA LT 5000D-CXH	S39811E	21	6J072301	KICK LEVER ASSY
18 CALDIA LT 5000D-CXH	S39811E	22	6H417701	KICK LEVER SCREW
18 CALDIA LT 5000D-CXH	S39811E	23	6H572001	ARM LEVER SHAFT
18 CALDIA LT 5000D-CXH	S39811E	24	6H576101	ARM LEVER SHAFT PLATE
18 CALDIA LT 5000D-CXH	S39811E	25	6J089301	ARM LEVER SHAFT SPRING
18 CALDIA LT 5000D-CXH	S39811E	26	6J089401	ARM LEVER SHAFT HOLDER
18 CALDIA LT 5000D-CXH	S39811E	27	6H986401	ARM LEVER SP COVER
18 CALDIA LT 5000D-CXH	S39811E	28	6H431301	ARM LEVER SP COVER SCREW
18 CALDIA LT 5000D-CXH	S39811E	29	6H960102	ARM LEVER
18 CALDIA LT 5000D-CXH	S39811E	30	6H962401	ARM LEVER COLLAR
18 CALDIA LT 5000D-CXH	S39811E	31	6H431201	ARM LEVER SCREW
18 CALDIA LT 5000D-CXH	S39811E	32	6H697701	ROLLER SCREW
18 CALDIA LT 5000D-CXH	S39811E	33	6H961001	ROLLER COLLAR (A)
18 CALDIA LT 5000D-CXH	S39811E	34	6H038301	ROLLER BEARING PACKING
18 CALDIA LT 5000D-CXH	S39811E	35	6G686903	ROLLER BALL BEARING
18 CALDIA LT 5000D-CXH	S39811E	36	6H960901	ROLLER BEARING COLLAR
18 CALDIA LT 5000D-CXH	S39811E	37	6G686703	LINE ROLLER
18 CALDIA LT 5000D-CXH	S39811E	38	6H960801	ROLLER COLLAR (B)
18 CALDIA LT 5000D-CXH	S39811E	39	6H960701	ROLLER COLLAR (C)
18 CALDIA LT 5000D-CXH	S39811E	40	6H986501	BAIL ASSY
18 CALDIA LT 5000D-CXH	S39811E	41	6H431201	BAIL HOLDER SCREW
18 CALDIA LT 5000D-CXH	S39811E	42	6J429301	MAGSEALED PLATE SCREW
18 CALDIA LT 5000D-CXH	S39811E	43	6J675201	MAGSEALED PLATE
18 CALDIA LT 5000D-CXH	S39811E	44	6J354801	MAGSEALED PLATE ORING
18 CALDIA LT 5000D-CXH	S39811E	45	6J406701	MAGSEALED CAP
18 CALDIA LT 5000D-CXH	S39811E	46	6J639900	ONEWAY CLUTCH WASHER
18 CALDIA LT 5000D-CXH	S39811E	47	6J388401	ONEWAY CLUTCH
18 CALDIA LT 5000D-CXH	S39811E	48	6G997301	PINION BEARING PLATE SCREW
18 CALDIA LT 5000D-CXH	S39811E	49	6J001403	CLUTCH RING
18 CALDIA LT 5000D-CXH	S39811E	50	6H411501	PINION BEARING PLATE
18 CALDIA LT 5000D-CXH	S39811E	51	6G535104	PINION BALL BEARING (A)
18 CALDIA LT 5000D-CXH	S39811E	52	63758500	PINION BEARING WASHER
18 CALDIA LT 5000D-CXH	S39811E	53	62023907	PINION + DRIVE GEAR SET
18 CALDIA LT 5000D-CXH	S39811E	54	6J683001	PINION BEARING SPRING WASHER
18 CALDIA LT 5000D-CXH	S39811E	55	6G466202	PINION BALL BEARING (B)
18 CALDIA LT 5000D-CXH	S39811E	56	6G466103	PINION COLLAR WASHER
18 CALDIA LT 5000D-CXH	S39811E	57	6J387701	PINION COLLAR
18 CALDIA LT 5000D-CXH	S39811E	58	6J698201	BODY ASSY
18 CALDIA LT 5000D-CXH	S39811E	59	6J566903	MAIN SHAFT
18 CALDIA LT 5000D-CXH	S39811E	60	6J084804	OSCILLATING POST
18 CALDIA LT 5000D-CXH	S39811E	61	6H595501	STOPPER CAM
18 CALDIA LT 5000D-CXH	S39811E	62	6H595401	STOPPER LEVER
18 CALDIA LT 5000D-CXH	S39811E	63	6H697801	STOPPER CAM LEAF SPRING
18 CALDIA LT 5000D-CXH	S39811E	64	6J406801	REAR CAP
18 CALDIA LT 5000D-CXH	S39811E	65	6J389001	REAR CAP SCREW
18 CALDIA LT 5000D-CXH	S39811E	66	6J644701	OSCILLATING GEAR WASHER
18 CALDIA LT 5000D-CXH	S39811E	67	6J566701	OSCILLATING GEAR
18 CALDIA LT 5000D-CXH	S39811E	68	6G466001	OSCILLATING GEAR ORING
18 CALDIA LT 5000D-CXH	S39811E	69	6H129200	OSCILLATING GEAR BALL BEARING WASHER
18 CALDIA LT 5000D-CXH	S39811E	70	6G469005	OSCILLATING GEAR BALL BEARING
18 CALDIA LT 5000D-CXH	S39811E	71	6G997001	OSCILLATING GEAR BALL BEARING SCREW
18 CALDIA LT 5000D-CXH	S39811E	72	6G670501	DRIVE GEAR ORING
18 CALDIA LT 5000D-CXH	S39811E	73	63758500	DRIVE WASHER
18 CALDIA LT 5000D-CXH	S39811E	74	6G467302	DRIVE GEAR BALL BEARING (A)
18 CALDIA LT 5000D-CXH	S39811E	75	6J647101	BODY COVER ASSY
18 CALDIA LT 5000D-CXH	S39811E	76	6J389801	BODY COVER SCREW
18 CALDIA LT 5000D-CXH	S39811E	77	6J130201	HANDLE CAP PACKING
18 CALDIA LT 5000D-CXH	S39811E	78	6J698401	HANDLE ASSY
18 CALDIA LT 5000D-CXH	S39811E	79	6G522706	DRIVE GEAR BALL BEARING (B)
18 CALDIA LT 5000D-CXH	S39811E	80	6G472401	DRIVE BEARING RING
18 CALDIA LT 5000D-CXH	S39811E	81	6G162401	HANDLE CAP ORING
18 CALDIA LT 5000D-CXH	S39811E	82	6J389701	HANDLE CAP