




AIRD LT 2000

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

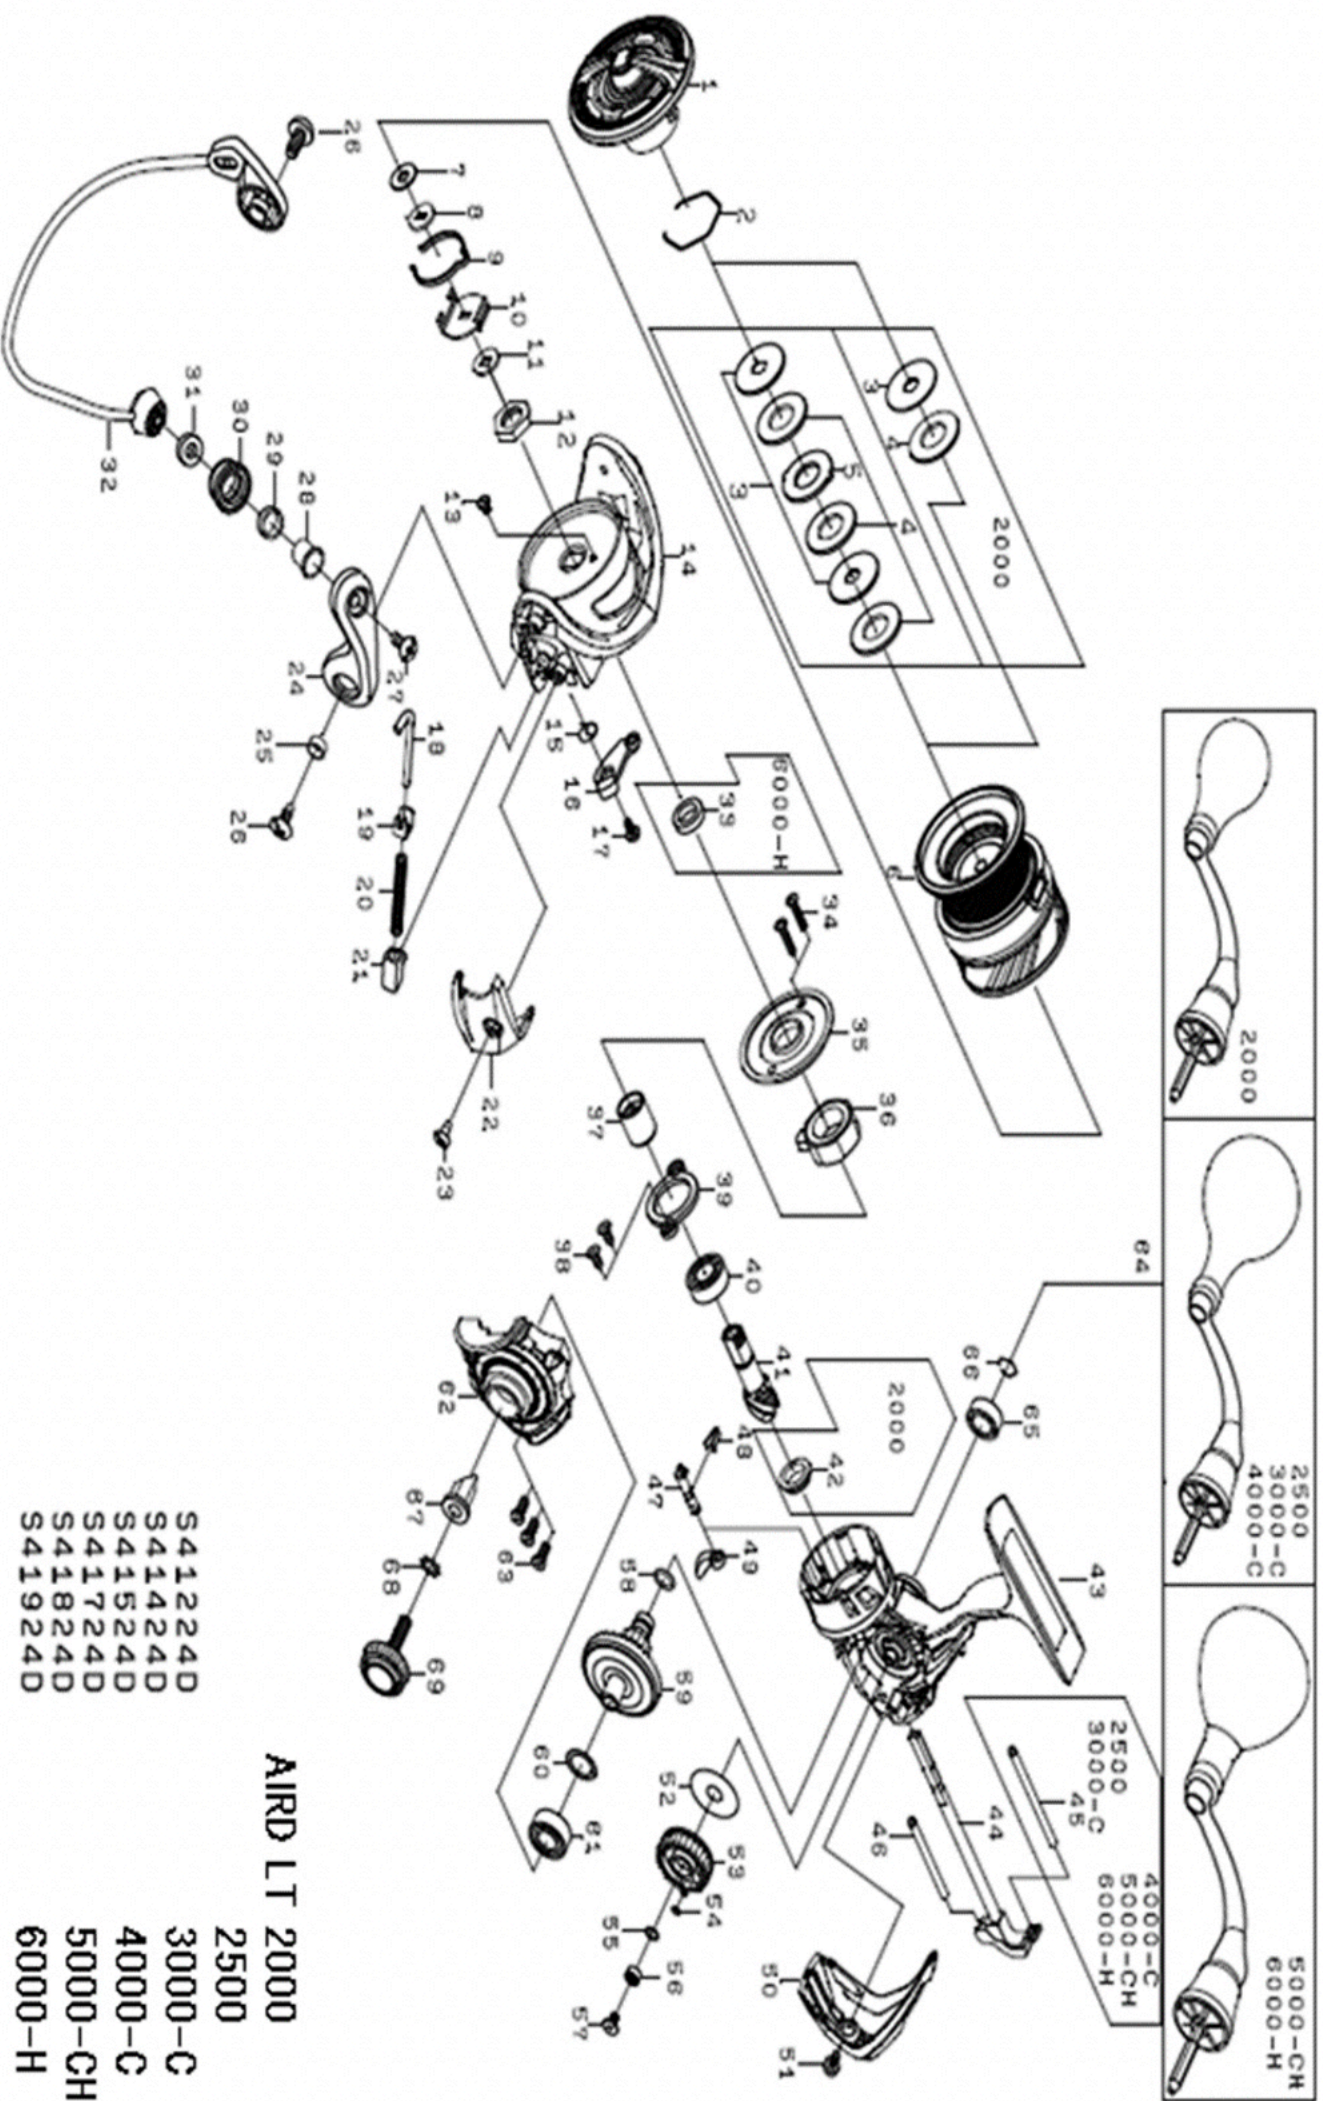

- S412224D
- S414224D
- S415224D
- S417224D
- S418224D
- S419224D

AIRD LT 2000

- 2500
- 3000-C
- 4000-C
- 5000-CH
- 6000-H

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD LT 2000	S41224D	1	6Q376801	DRAG KNOB
AIRD LT 2000	S41224D	2	6Q346101	DRAG RING
AIRD LT 2000	S41224D	3	6J547001	DRAG DISC WASHER
AIRD LT 2000	S41224D	4	6J546801	ATD WASHER ASSY (1pack-3 pcs)
AIRD LT 2000	S41224D	5	-----	-----
AIRD LT 2000	S41224D	2~6	6Q555901	SPOOL ASSY(2-6)
AIRD LT 2000	S41224D	7	6Q348502	SPOOL WASHER (A)
AIRD LT 2000	S41224D	8	6E398000	SPOOL WASHER (B)
AIRD LT 2000	S41224D	9	6Q457701	CLICK LEAF SPRING
AIRD LT 2000	S41224D	10	6Q457601	CLICK HOLDER
AIRD LT 2000	S41224D	11	6Q344001	CLICK HOLDER WASHER
AIRD LT 2000	S41224D	12	6Q122401	ROTOR NUT
AIRD LT 2000	S41224D	13	6H022701	ROTOR NUT SCREW
AIRD LT 2000	S41224D	14	6Q139510	ROTOR
AIRD LT 2000	S41224D	15	6H443301	KICK LEVER SPRING
AIRD LT 2000	S41224D	16	6Q139601	KICK LEVER
AIRD LT 2000	S41224D	17	6H417701	KICK LEVER SCREW
AIRD LT 2000	S41224D	18	6Q139801	ARMLEVER SHAFT
AIRD LT 2000	S41224D	19	6H576101	ARMLEVER SHAFT PLATE
AIRD LT 2000	S41224D	20	6H442401	ARMLEVER SPRING
AIRD LT 2000	S41224D	21	6Q121501	ARMLEVER SPRING HOLDER
AIRD LT 2000	S41224D	22	6Q146504	ARMLEVER SPRING COVER
AIRD LT 2000	S41224D	23	6G205003	ARM LEVER SCREW
AIRD LT 2000	S41224D	24	6Q121607	ARMLEVER
AIRD LT 2000	S41224D	25	6Q121701	ARMLEVER SCREW COLLER
AIRD LT 2000	S41224D	26	6G205003	ARM LEVER SCREW
AIRD LT 2000	S41224D	27	6G195606	ROLLER SCREW
AIRD LT 2000	S41224D	28	6G195501	ROLLER COLLAR (A)
AIRD LT 2000	S41224D	29	6G220701	ROLLER COLLAR (B)
AIRD LT 2000	S41224D	30	6J089902	LINE ROLLER
AIRD LT 2000	S41224D	31	6Q203401	ROLLER COLLAR (C)
AIRD LT 2000	S41224D	32	6Q555801	BAIL ASSY
AIRD LT 2000	S41224D	33	-----	-----
AIRD LT 2000	S41224D	34	6G837101	SEALED PLATE SCREW
AIRD LT 2000	S41224D	35	6Q139401	SEALED PLATE
AIRD LT 2000	S41224D	36	6Q308301	ONEWAY CLUTCH
AIRD LT 2000	S41224D	37	6J001401	CLUTCH RING
AIRD LT 2000	S41224D	38	6Q126201	PINION BEARING PLATE SCREW
AIRD LT 2000	S41224D	39	6Q195601	PINION BEARING PLATE
AIRD LT 2000	S41224D	40	6G467302	DRIVE BALL BEARING(A)
AIRD LT 2000	S41224D	41	6Q419301	PINION GEAR
AIRD LT 2000	S41224D	42	6Q419201	PINION GEAR COLLAR
AIRD LT 2000	S41224D	43	6Q555701	BODY
AIRD LT 2000	S41224D	44	6Q375301	MAIN SHAFT
AIRD LT 2000	S41224D	45	-----	-----
AIRD LT 2000	S41224D	46	6Q119104	OSCILLATING POST
AIRD LT 2000	S41224D	47	6Q118101	STOPPER CAM
AIRD LT 2000	S41224D	48	6H697801	STOPPER LEVER SPRING
AIRD LT 2000	S41224D	49	6Q118001	STOPPER LEVER
AIRD LT 2000	S41224D	50	6Q450902	REAR COVER
AIRD LT 2000	S41224D	51	6G270804	REAR COVER SCREW
AIRD LT 2000	S41224D	52	6H607902	OSCILLATING GEAR WASHER
AIRD LT 2000	S41224D	53	6Q375201	OSCILLATING GEAR
AIRD LT 2000	S41224D	54	6H770601	OSCILLATING GEAR ORING
AIRD LT 2000	S41224D	55	6H129200	OSCILLATING GEAR BEARING WASHER
AIRD LT 2000	S41224D	56	6G469005	OSCILLATING GEAR BALL BEARING
AIRD LT 2000	S41224D	57	6Q126101	OSCILLATING GEAR SCREW
AIRD LT 2000	S41224D	58	6G670501	DRIVE GEAR O-RING
AIRD LT 2000	S41224D	59	6Q375901	DRIVE GEAR
AIRD LT 2000	S41224D	60	63758500	DRIVE WASHER
AIRD LT 2000	S41224D	61	6G467302	DRIVE BALL BEARING(A)
AIRD LT 2000	S41224D	62	6Q559301	BODY COVER
AIRD LT 2000	S41224D	63	6G115001	BODY COVER SCREW
AIRD LT 2000	S41224D	64	6Q556101	HANDLE ASSY
AIRD LT 2000	S41224D	65	6G522706	DRIVE BALL BEARING(B)
AIRD LT 2000	S41224D	66	6G472401	DRIVE BEARING RETAINER
AIRD LT 2000	S41224D	67	6F721001	HANDLE SCREW COLLAR
AIRD LT 2000	S41224D	68	61608401	HANDLE SCRER WAWSHER
AIRD LT 2000	S41224D	69	6Q132401	HANDLE SCREW
AIRD LT 2000	S41224D	200	6Q281801	HANDLE KNOB ASSY
AIRD LT 2000	S41224D	201	6G720001	HANDLE KNOB BEARING COLLAR
AIRD LT 2000	S41224D	202	6B411700	HANDLE KNOB WASHER
AIRD LT 2000	S41224D	203	6B679308	HANDLE KNOB SCREW
AIRD LT 2000	S41224D	204	6Q281901	SCREW ASSY