




AIRD X 4000

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

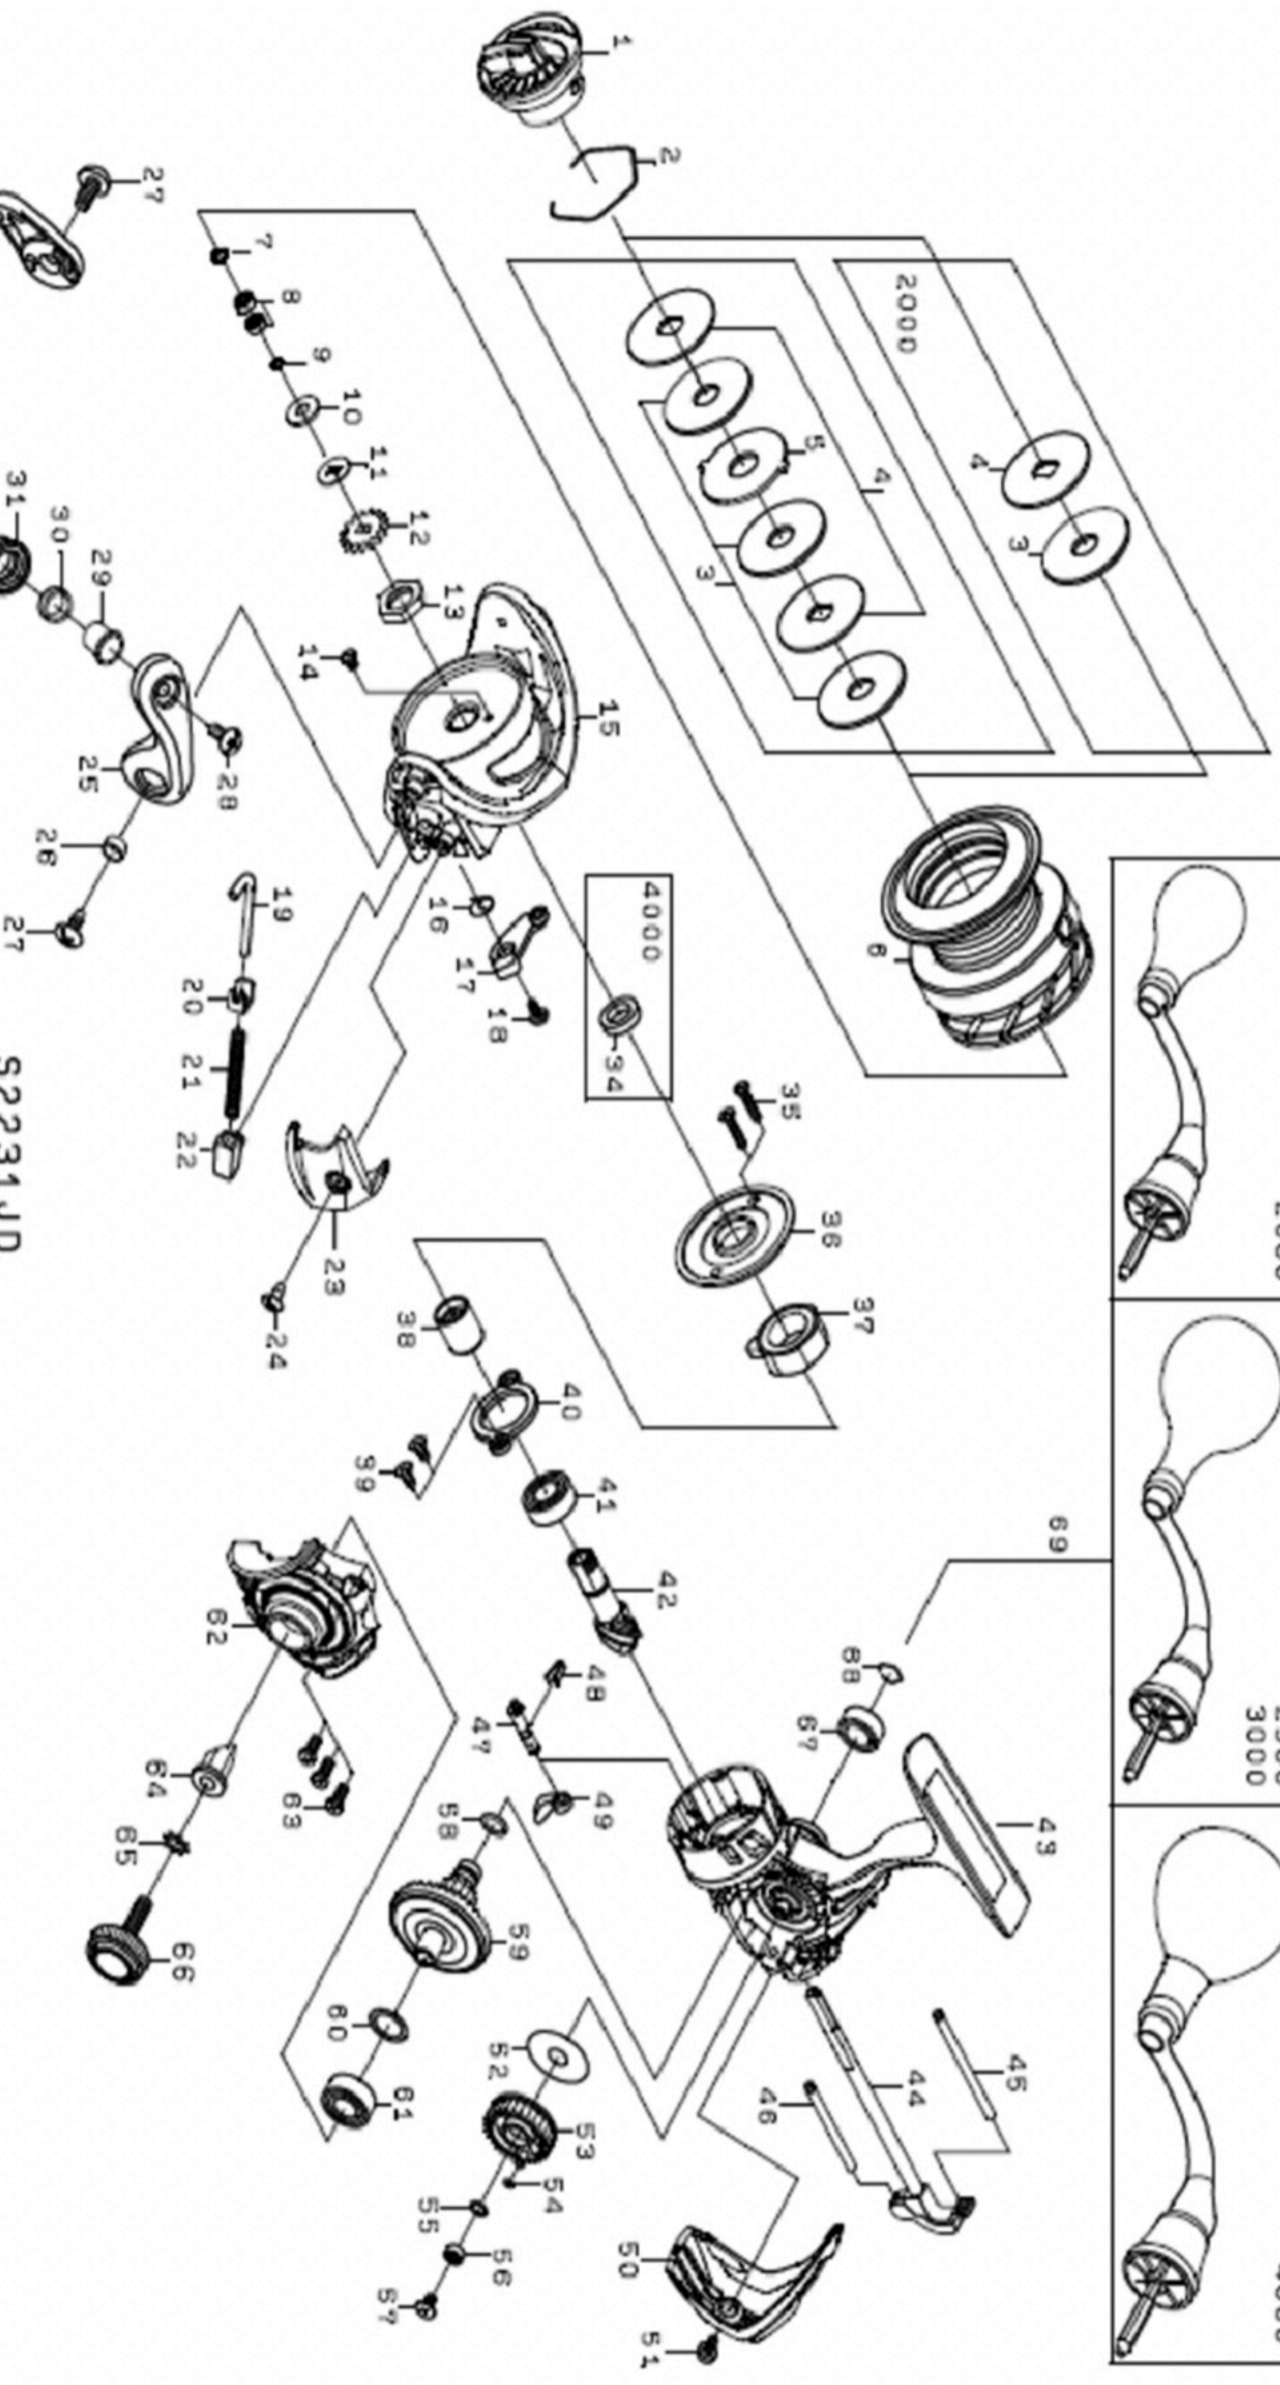

S22231JD
 S22241JD
 S22261JD
 S22281JD

AIRD X 2000 2500 3000 4000

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD X 4000	S2281JD	1	6Q184601	Drag Knob
AIRD X 4000	S2281JD	2	6F373301	Drag Washer Retainer
AIRD X 4000	S2281JD	3	6E136001	Drag Washer
AIRD X 4000	S2281JD	4	6E467201	Key Washer
AIRD X 4000	S2281JD	5	63733606	Eared Washer
AIRD X 4000	S2281JD	2~6	6Q283101	Spool Assembly
AIRD X 4000	S2281JD	7	6G213001	"O"-Ring (A)
AIRD X 4000	S2281JD	8	6G469005	Ball Bearing (A)
AIRD X 4000	S2281JD	9	6B411706	Washer (A)
AIRD X 4000	S2281JD	10	6E398000	Washer (B)
AIRD X 4000	S2281JD	11	6E467101	Washer (C)
AIRD X 4000	S2281JD	12	6G839301	Click Gear
AIRD X 4000	S2281JD	13	6Q135201	Rotor Nut
AIRD X 4000	S2281JD	14	6H022701	Screw (A)
AIRD X 4000	S2281JD	15	6Q134504	Rotor
AIRD X 4000	S2281JD	16	6H413601	Bail Trip Lever Spring
AIRD X 4000	S2281JD	17	6Q134601	Bail Trip Lever
AIRD X 4000	S2281JD	18	6H417701	Screw (B)
AIRD X 4000	S2281JD	19	6Q134801	Bail Spring Shaft
AIRD X 4000	S2281JD	20	6H576101	Retainer
AIRD X 4000	S2281JD	21	6H640701	Bail Spring
AIRD X 4000	S2281JD	22	6Q121501	Bail Spring Holder
AIRD X 4000	S2281JD	23	6Q134902	Cover (A)
AIRD X 4000	S2281JD	24	6G270801	Screw (C)
AIRD X 4000	S2281JD	25	6Q121604	Bail Arm
AIRD X 4000	S2281JD	26	6Q121701	Collar (A)
AIRD X 4000	S2281JD	27	6G205001	Screw (D)
AIRD X 4000	S2281JD	28	6G195602	Screw (E)
AIRD X 4000	S2281JD	29	6G195501	Collar (B)
AIRD X 4000	S2281JD	30	6G220701	Collar (C)
AIRD X 4000	S2281JD	31	6J089902	Line Roller
AIRD X 4000	S2281JD	32	6Q203401	Collar (D)
AIRD X 4000	S2281JD	33	6Q282901	Bail Assembly
AIRD X 4000	S2281JD	34	6H640301	Collar (E)
AIRD X 4000	S2281JD	35	6G837101	Screw (F)
AIRD X 4000	S2281JD	36	6Q134301	Cap
AIRD X 4000	S2281JD	37	6J015701	Roller Clutch
AIRD X 4000	S2281JD	38	6J021301	Spacing Sleeve
AIRD X 4000	S2281JD	39	6Q126201	Screw (G)
AIRD X 4000	S2281JD	40	6J020801	Bearing Retainer (A)
AIRD X 4000	S2281JD	41	66354801	Ball Bearing (B)
AIRD X 4000	S2281JD	42	6Q208701	Pinion Gear
AIRD X 4000	S2281JD	43	6Q282701	Body
AIRD X 4000	S2281JD	44	6Q168701	Main Shaft
AIRD X 4000	S2281JD	45	6Q126303	Stabilizer Bar (A)
AIRD X 4000	S2281JD	46	6Q119103	Stabilizer Bar (B)
AIRD X 4000	S2281JD	47	6Q133401	Anti-Reverse Cam
AIRD X 4000	S2281JD	48	6H697801	Anti-Reverse Cam Spring
AIRD X 4000	S2281JD	49	6Q118001	Anti-Reverse Lever
AIRD X 4000	S2281JD	50	6Q134402	Rear Cover
AIRD X 4000	S2281JD	51	6G270801	Screw (H)
AIRD X 4000	S2281JD	52	6G644201	Washer (D)
AIRD X 4000	S2281JD	53	6Q133501	Oscillate Gear
AIRD X 4000	S2281JD	54	6B853101	"O"-Ring (B)
AIRD X 4000	S2281JD	55	6G522100	Washer (E)
AIRD X 4000	S2281JD	56	6G467105	Ball Bearing (C)
AIRD X 4000	S2281JD	57	6H463401	Screw (I)
AIRD X 4000	S2281JD	58	6G645301	"O"-Ring (C)
AIRD X 4000	S2281JD	59	6Q167401	Drive Gear
AIRD X 4000	S2281JD	60	63737800	Washer (F)
AIRD X 4000	S2281JD	61	6G523405	Ball Bearing (D)
AIRD X 4000	S2281JD	62	6Q282801	Side Cover
AIRD X 4000	S2281JD	63	6G115001	Screw (J)
AIRD X 4000	S2281JD	64	6F721202	Collar (F)
AIRD X 4000	S2281JD	65	61608401	Washer (G)
AIRD X 4000	S2281JD	66	6Q136102	Handle Screw
AIRD X 4000	S2281JD	67	6B861705	Ball Bearing (E)
AIRD X 4000	S2281JD	68	6G525101	Bearing Retainer (B)
AIRD X 4000	S2281JD	69	6Q283001	Handle Assembly
AIRD X 4000	S2281JD	200	6Q283501	Handle Knob As
AIRD X 4000	S2281JD	201	6G469005	Ball Bearing
AIRD X 4000	S2281JD	202	6B411700	Washer
AIRD X 4000	S2281JD	203	6B679308	Truss Head Screw
AIRD X 4000	S2281JD	204	6J313201	Screw As