


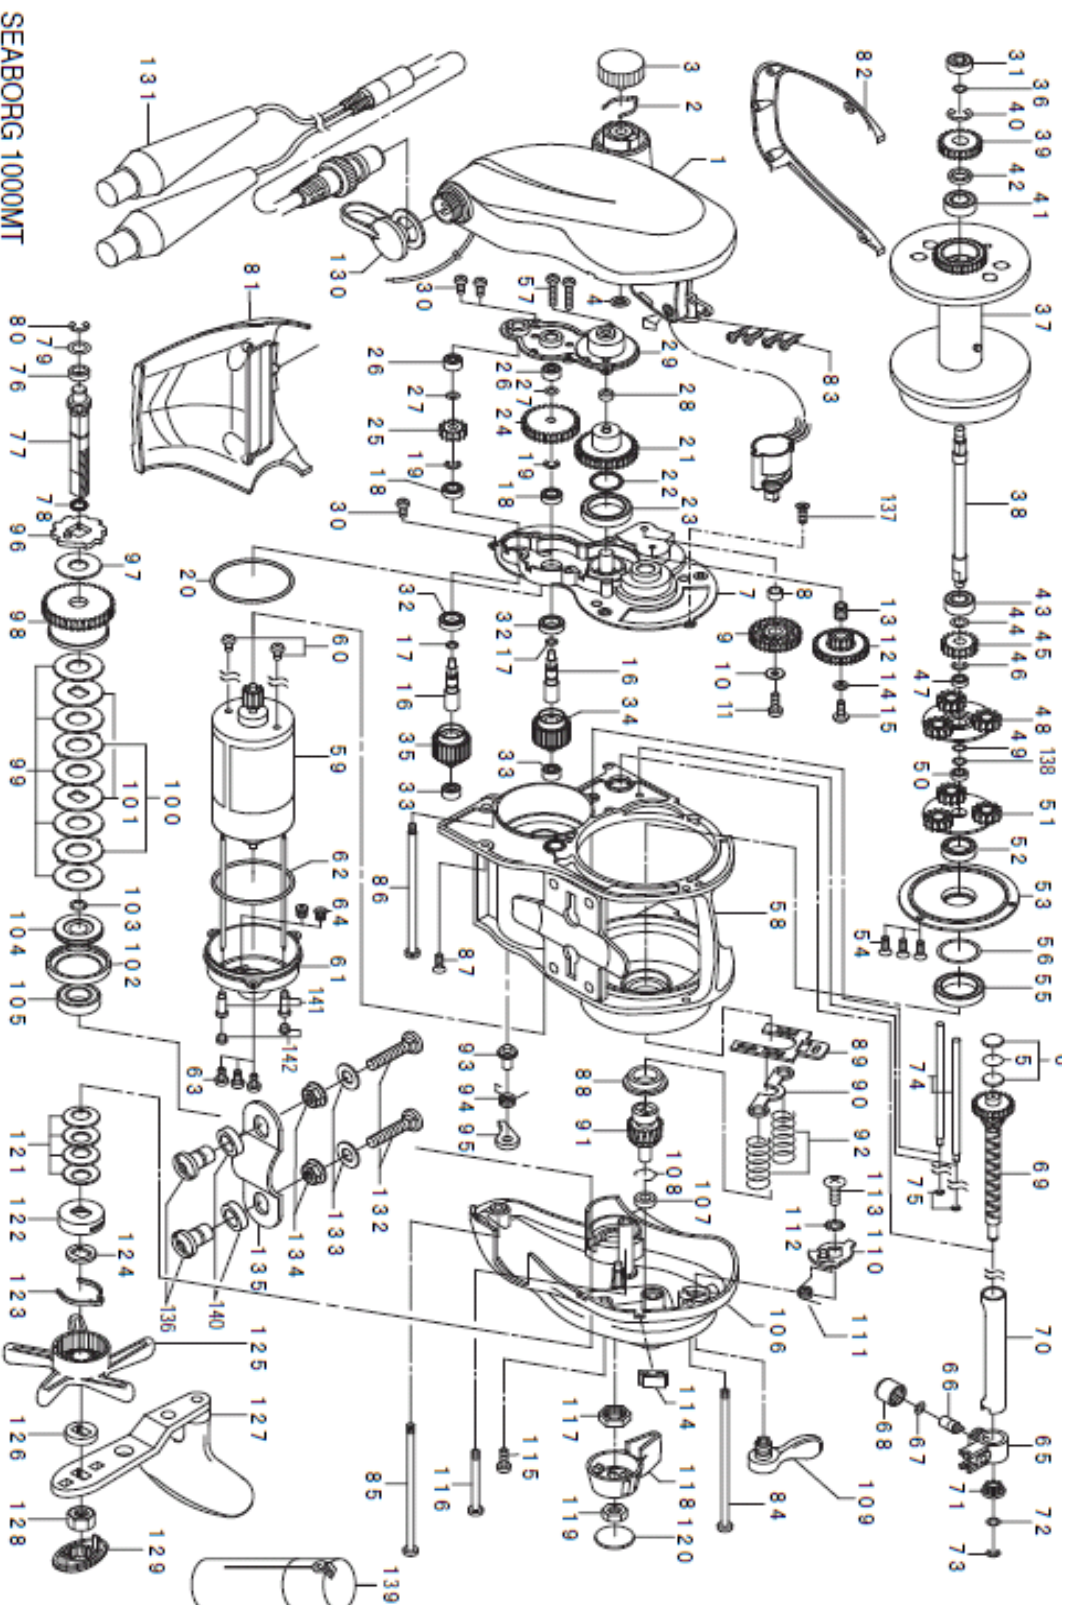

SEABORG 1000MT

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644



SEABORG 1000MT

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
SEABORG 1000MT		1	6H086701	IC MODULE L/S PLATE SET
SEABORG 1000MT		2	6E033201	BRAKE CLICK SPRING
SEABORG 1000MT		3	6G673101	BRAKE ADJ KNOB
SEABORG 1000MT		4	6G779001	MECHANICAL BRAKE KNOB RET
SEABORG 1000MT		5	6B175503	MECHANICAL BRAKE WASHER(A)
SEABORG 1000MT		6	6F673802	MECHANICAL BRAKE WASHER(B)
SEABORG 1000MT		7	6G679601	SET PLATE(A)
SEABORG 1000MT		8	6F573101	IDLE GEAR(A) COLLAR
SEABORG 1000MT		9	6F592101	IDLE GEAR(A)
SEABORG 1000MT		10	6F571902	IDLE GEAR(A) WASHER
SEABORG 1000MT		11	6F848401	IDLE GEAR(A) SCREW
SEABORG 1000MT		12	6G673301	IDLE GEAR(B)
SEABORG 1000MT		13	6G076501	IDLE GEAR(B) COLLAR
SEABORG 1000MT		14	6B554301	IDLE GEAR(B) WASHER
SEABORG 1000MT		15	63511805	IDLE GEAR(B) SCREW
SEABORG 1000MT		16	6G673401	MOTOR GEAR SHAFT
SEABORG 1000MT		17	6G673501	MOTOR GEAR SHAFT O RING
SEABORG 1000MT		18	6B358605	IDLE GEAR BALL BEARING
SEABORG 1000MT		19	63201402	MOTOR GEAR SHAFT RETAINER
SEABORG 1000MT		20	6G158601	MOTOR O RING
SEABORG 1000MT		21	6H113501	IDLE GEAR(C)
SEABORG 1000MT		22	6G672401	IDLE GEAR(C) O RING
SEABORG 1000MT		23	6E292701	IDLE GEAR(C) BALL BEARING(A)
SEABORG 1000MT		24	6H112501	IDLE GEAR(D)
SEABORG 1000MT		25	6H112601	IDLE GEAR(E)
SEABORG 1000MT		26	6E088005	IDLE GEAR(D) BALL BEARING
SEABORG 1000MT		27	6F774603	IDLE GEAR WASHER
SEABORG 1000MT		28	6G077201	IDLE GEAR(C) BALL BEARING(B)
SEABORG 1000MT		29	6G679101	SET PLATE(B)
SEABORG 1000MT		30	63510905	SPOOL PLATE SCREW (A)
SEABORG 1000MT		31	66372102	SPOOL SHAFT BALL BEARING
SEABORG 1000MT		32	6G522702	MOTOR GEAR SHAFT BALL BEARING
SEABORG 1000MT		33	6E088005	MOTOR GEAR BALL BEARING
SEABORG 1000MT		34	6H113601	MOTOR GEAR(HI)
SEABORG 1000MT		35	6H113701	MOTOR GEAR(LOW)
SEABORG 1000MT		36	6G772101	SPOOL SHAFT GEAR SPRING WASHER
SEABORG 1000MT		37	6H086901	SPOOL
SEABORG 1000MT		38	6H087101	SPOOL SHAFT
SEABORG 1000MT		39	6H112901	SPOOL SHAFT GEAR
SEABORG 1000MT		40	63201611	SPOOL GEAR RETAINER
SEABORG 1000MT		41	6G535101	SPOOL PLATE BALL BEARING(A)
SEABORG 1000MT		42	6G675101	SPOOL SHAFT GEAR COLLAR
SEABORG 1000MT		43	6G536001	SPOOL PLATE BALL BEARING(B)
SEABORG 1000MT		44	63753002	SPOOL GEAR WASHER
SEABORG 1000MT		45	6G675201	SPOOL GEAR
SEABORG 1000MT		46	63201402	SPOOL GEAR RETAINER
SEABORG 1000MT		47	6G469004	MOTOR GEAR(A) BALL BEARING
SEABORG 1000MT		48	6G675301	MOTOR GEAR(A)
SEABORG 1000MT		49	6B411701	MOTOR GEAR(A) WASHER
SEABORG 1000MT		50	6G469004	MOTOR GEAR(B) BALL BEARING
SEABORG 1000MT		51	6G675801	MOTOR GEAR(B)
SEABORG 1000MT		52	6G156801	SPOOL PLATE BALL BEARING(A)
SEABORG 1000MT		53	6G676001	SPOOL PLATE
SEABORG 1000MT		54	6E134505	SPOOL PLATE SCREW
SEABORG 1000MT		55	6E292701	SPOOL PLATE BALL BEARING(B)
SEABORG 1000MT		56	6F682601	SPOOL PLATE BALL BEARING(B) WASHER
SEABORG 1000MT		57	6G785801	SETPLATE SCREW(B)
SEABORG 1000MT		58	6H088301	FRAME
SEABORG 1000MT		59	6H194501	MOTOR
SEABORG 1000MT		60	6F914401	MOTOR SCREW

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
SEABORG 1000MT		61	6H087301	MOTOR HOLDER
SEABORG 1000MT		62	6G158601	MOTOR HOLDER O RING
SEABORG 1000MT		63	63510905	MOTOR HOLDER SCREW
SEABORG 1000MT		64	6G173401	CORD COVER
SEABORG 1000MT		65	6G812102	LEVELWIND
SEABORG 1000MT		66	61220602	LEVELWIND PAWL
SEABORG 1000MT		67	6F950200	LEVELWIND WASHER
SEABORG 1000MT		68	6E354101	LEVELWIND NUT
SEABORG 1000MT		69	6H087401	WORM SHAFT
SEABORG 1000MT		70	6H087601	WORM SHIELD
SEABORG 1000MT		71	6F467201	WORM SHAFT BUSHING
SEABORG 1000MT		72	6B411706	WORM SHAFT WASHER
SEABORG 1000MT		73	63205901	WORM SHAFT RETAINER
SEABORG 1000MT		74	6G362901	LEVELWIND POST
SEABORG 1000MT		75	6B864101	LEVELWIND POST RETAINER
SEABORG 1000MT		76	6G081901	DRIVE SHAFT BUSHING
SEABORG 1000MT		77	6G677301	DRIVE SHAFT
SEABORG 1000MT		78	6F657801	DRIVE SHAFT O RING
SEABORG 1000MT		79	63755801	DRIVE SHAFT WASHER
SEABORG 1000MT		80	63207601	DRIVE SHAFT RETAINER
SEABORG 1000MT		81	6H087801	FINGER GUARD
SEABORG 1000MT		82	6H087901	IC MODULE COVER
SEABORG 1000MT		83	6E004301	IC MODULE COVER SCREW
SEABORG 1000MT		84	6H088001	R/S PLATE SCREW(A)
SEABORG 1000MT		85	6H088101	R/S PLATE SCREW(B)
SEABORG 1000MT		86	6H088201	FRAME SCREW(A)
SEABORG 1000MT		87	6E134501	FRAME SCREW(B)
SEABORG 1000MT		88	6G677501	PINION GEAR BUSHING(A)
SEABORG 1000MT		89	6F597001	YOKE PLATE
SEABORG 1000MT		90	6E290601	YOKE
SEABORG 1000MT		91	6G677601	PINION GEAR
SEABORG 1000MT		92	6G473401	CLUTCH PLATE SPRING
SEABORG 1000MT		93	6F773001	ANTI-REVERSE PAWL HOLDER
SEABORG 1000MT		94	6G677701	ANTI-REVERSE PAWL SPRING
SEABORG 1000MT		95	6F597201	ANTI-REVERSE PAWL
SEABORG 1000MT		96	6G677801	RATCHET
SEABORG 1000MT		97	63746604	DRIVE SHAFT WASHER(B)
SEABORG 1000MT		98	6G677901	DRIVE GEAR
SEABORG 1000MT		99	6B360209	EARED WASHER
SEABORG 1000MT		100	63723833	DRAG LIP WASHER
SEABORG 1000MT		101	6B360302	DRAG DISC WASHER
SEABORG 1000MT		102	6F817001	DRAG COLLAR SHIELD
SEABORG 1000MT		103	6F657801	DRAG O RING
SEABORG 1000MT		104	6G678001	DRIVE SHAFT COLLAR
SEABORG 1000MT		105	6G439402	HANDLE BALL BEARING
SEABORG 1000MT		106	6G692002	R/S PLATE
SEABORG 1000MT		107	6E351501	PINION GEAR BUSHING(B)
SEABORG 1000MT		108	6E219701	PINION GEAR RING
SEABORG 1000MT		109	6F469016	CLUTCH LEVER
SEABORG 1000MT		110	6F597901	CLUTCH CAM
SEABORG 1000MT		111	6F598201	CLUTCH CAM SPRING
SEABORG 1000MT		112	61608001	CLUTCH CAM WASHER
SEABORG 1000MT		113	63538212	CLUTCH CAM SCREW
SEABORG 1000MT		114	6E286003	LINE HOLDER
SEABORG 1000MT		115	63516401	RS PLATE SCREW(C)
SEABORG 1000MT		116	6G692201	RS PLATE SCREW(D)
SEABORG 1000MT		117	6G139601	POWER LEVER NUT(A)
SEABORG 1000MT		118	6F862301	POWER LEVER
SEABORG 1000MT		119	63424004	POWER LEVER NUT(B)
SEABORG 1000MT		120	6F862801	POWER LEVER COVER

